


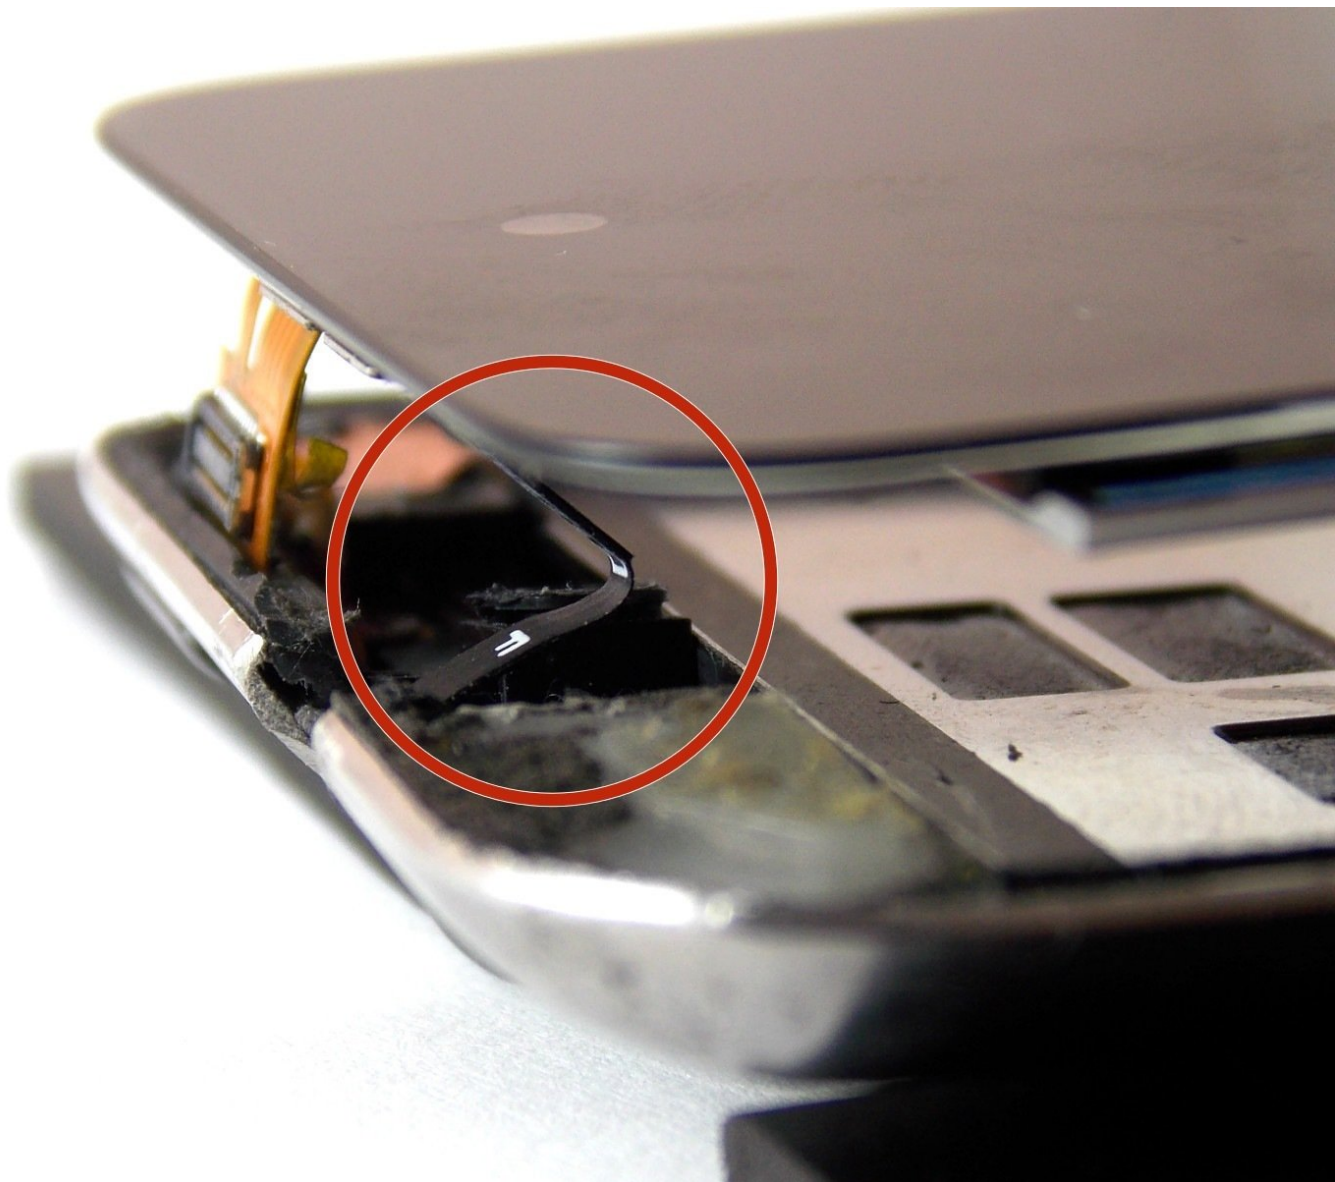

# How to properly install the flex cable on the 4th Generation Touch

Junto con la guía de instalación se logrará la instalación correcta de la pantalla de ipod touch 4.  
English: The purpose of this guide is to analyze one of the most common mistakes in installing the screen to the iPod touch 4.

Written By: fibocellphone




## INTRODUCTION

El objetivo de esta guía es analizar uno de los errores mas comunes en la instalación de la pantalla para el iPod touch 4.


English: The purpose of this guide is to analyze one of the most common mistakes in installing the screen to the iPod touch 4.

## Step 1 — How to properly install the flex cable on the 4th Generation Touch

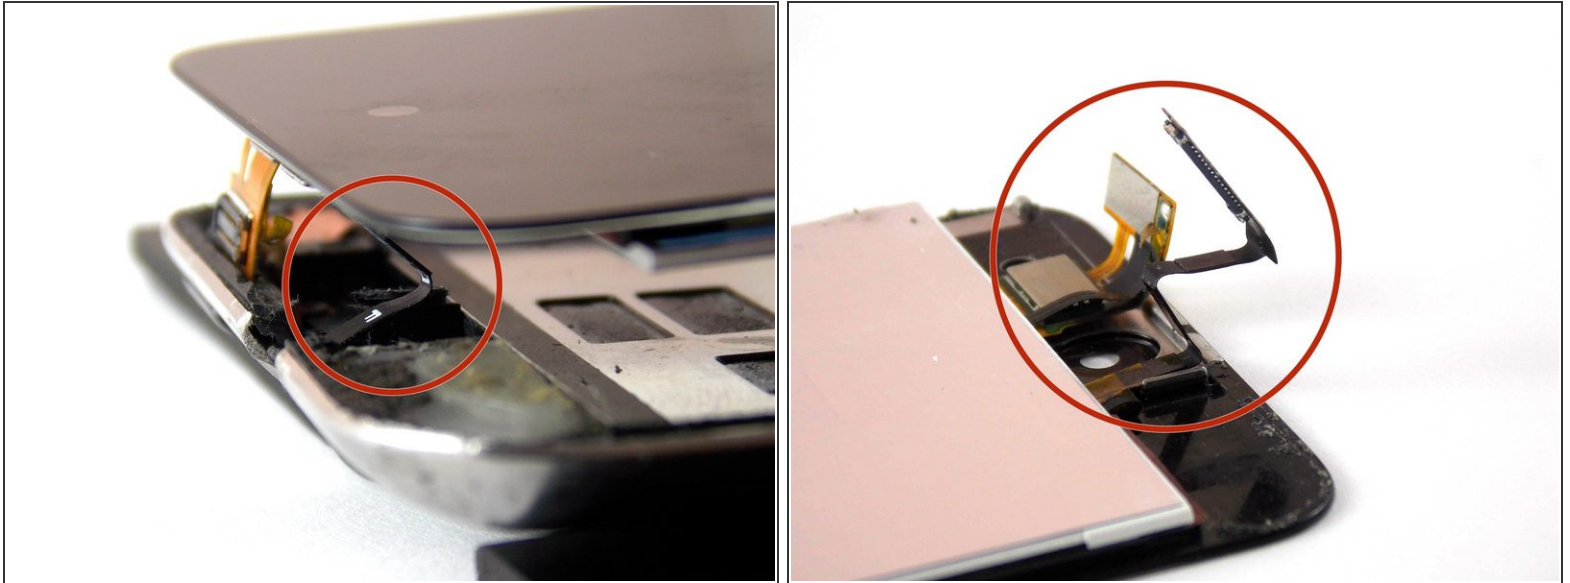


- ✦ Esta es la forma correcta de doblar el cable flex de la pantalla.
- ✦ English: This is the correct way to bend the flex cable to the display.

## Step 2

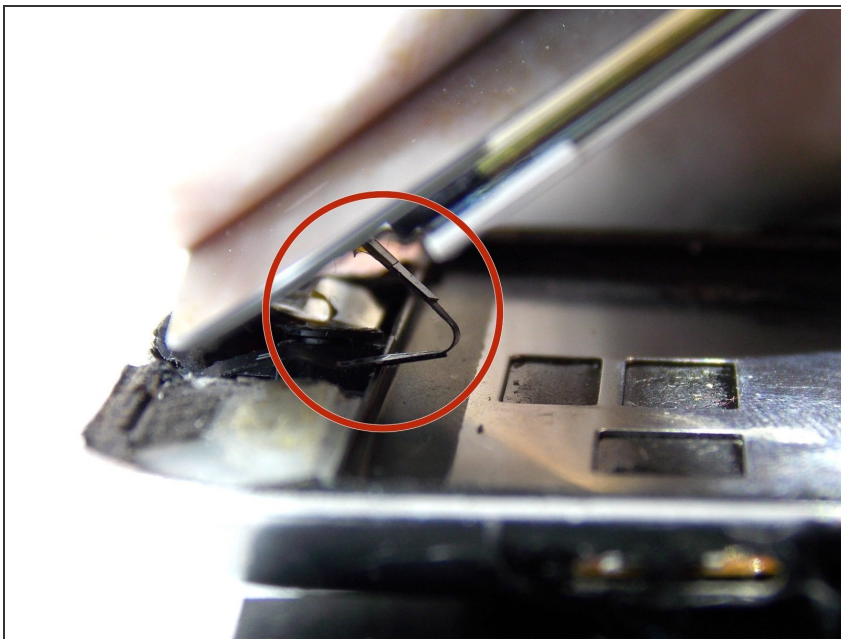

- ⚠ No doblar el cable flex de esta forma.
- ⚠ English: Do not bend the flex cable this way.

### Step 3

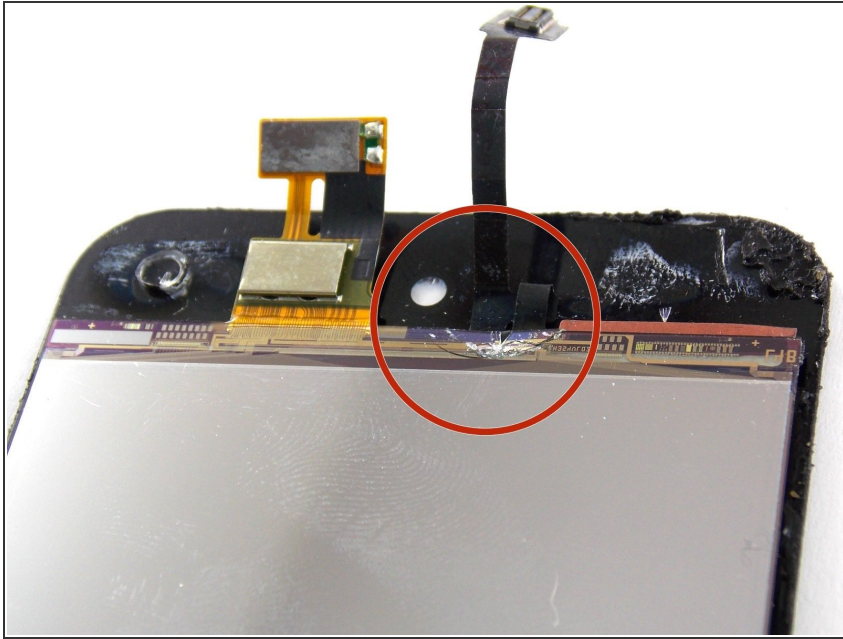

- ⓘ Al doblar el cable flex de forma incorrecta la pantalla no entra completamente en el socket y se quiebra al tratar de cerrar el iPod.
- ⓘ English: Folding the flex cable incorrectly display no fully into the socket and breaks when trying to close the iPod.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 02:09:00 PM.