 


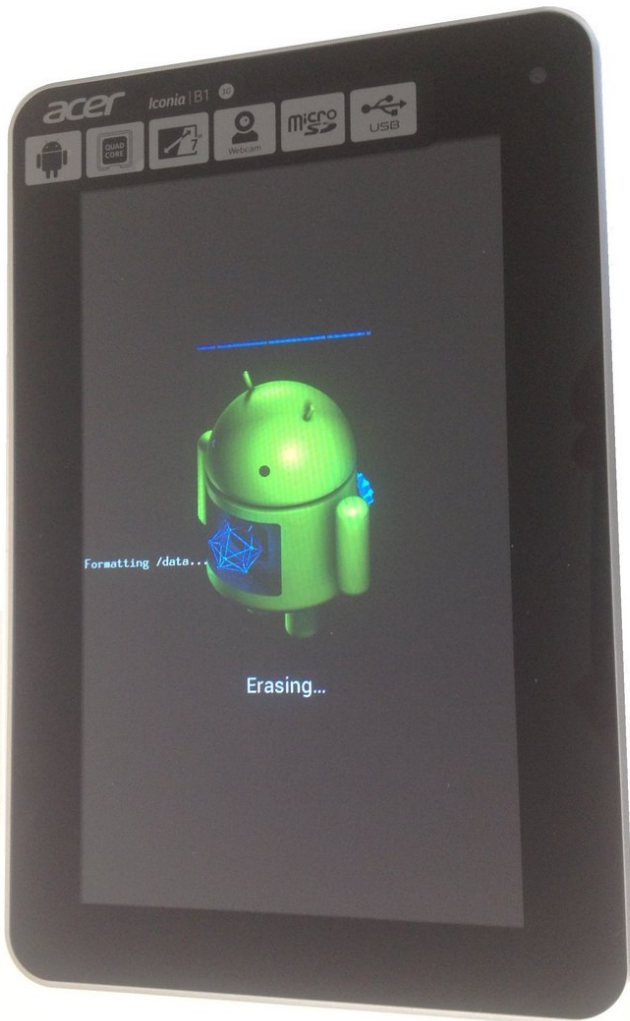

Acer Iconia Tab B1-711 3G - Factory / Hard reset / Password Removal

Written By: ZFix



acer
Iconia B1-711

 
 
wipe data
factory reset

INTRODUCTION

If you forgot your password, PIN, pattern drill, or if you have problem with your Android OS, you can make a Factory / Hard reset.

[video: <https://www.youtube.com/watch?v=DjgQmgSyWGc>]

Step 1 — Acer Iconia Tab B1-711 3G - Factory / Hard reset / Password Removal

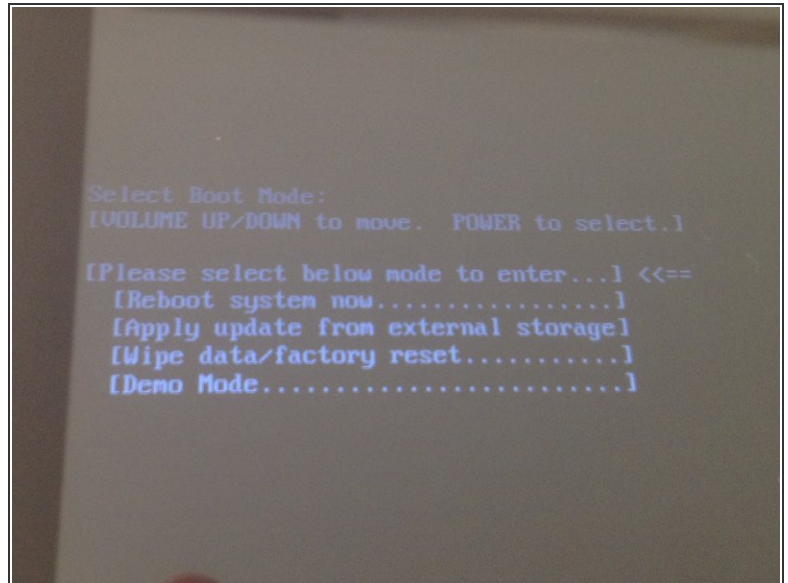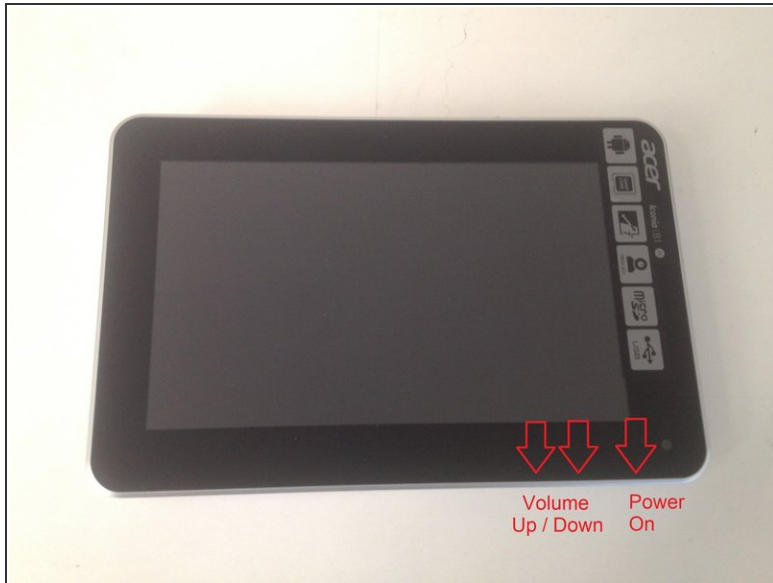

- Power off the tablet. Press and hold the Volume Up and the Power button. After 3 seconds release the Power On button but continue holding the Volume Up button. In the Select Boot Mode use the Volume Up/Down keys to navigate and the Power button to select the desired option.
- [SD Image Update Mode]
- wipe data/factory reset
- Yes - delete all user data
- Reboot system now.
- Your tablet will reboot and go to the Welcome screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-04-08 12:58:10 PM.