 




PowerBook G4 Aluminum 17" 1-1.67 GHz Battery Replacement

Written By: iRobot

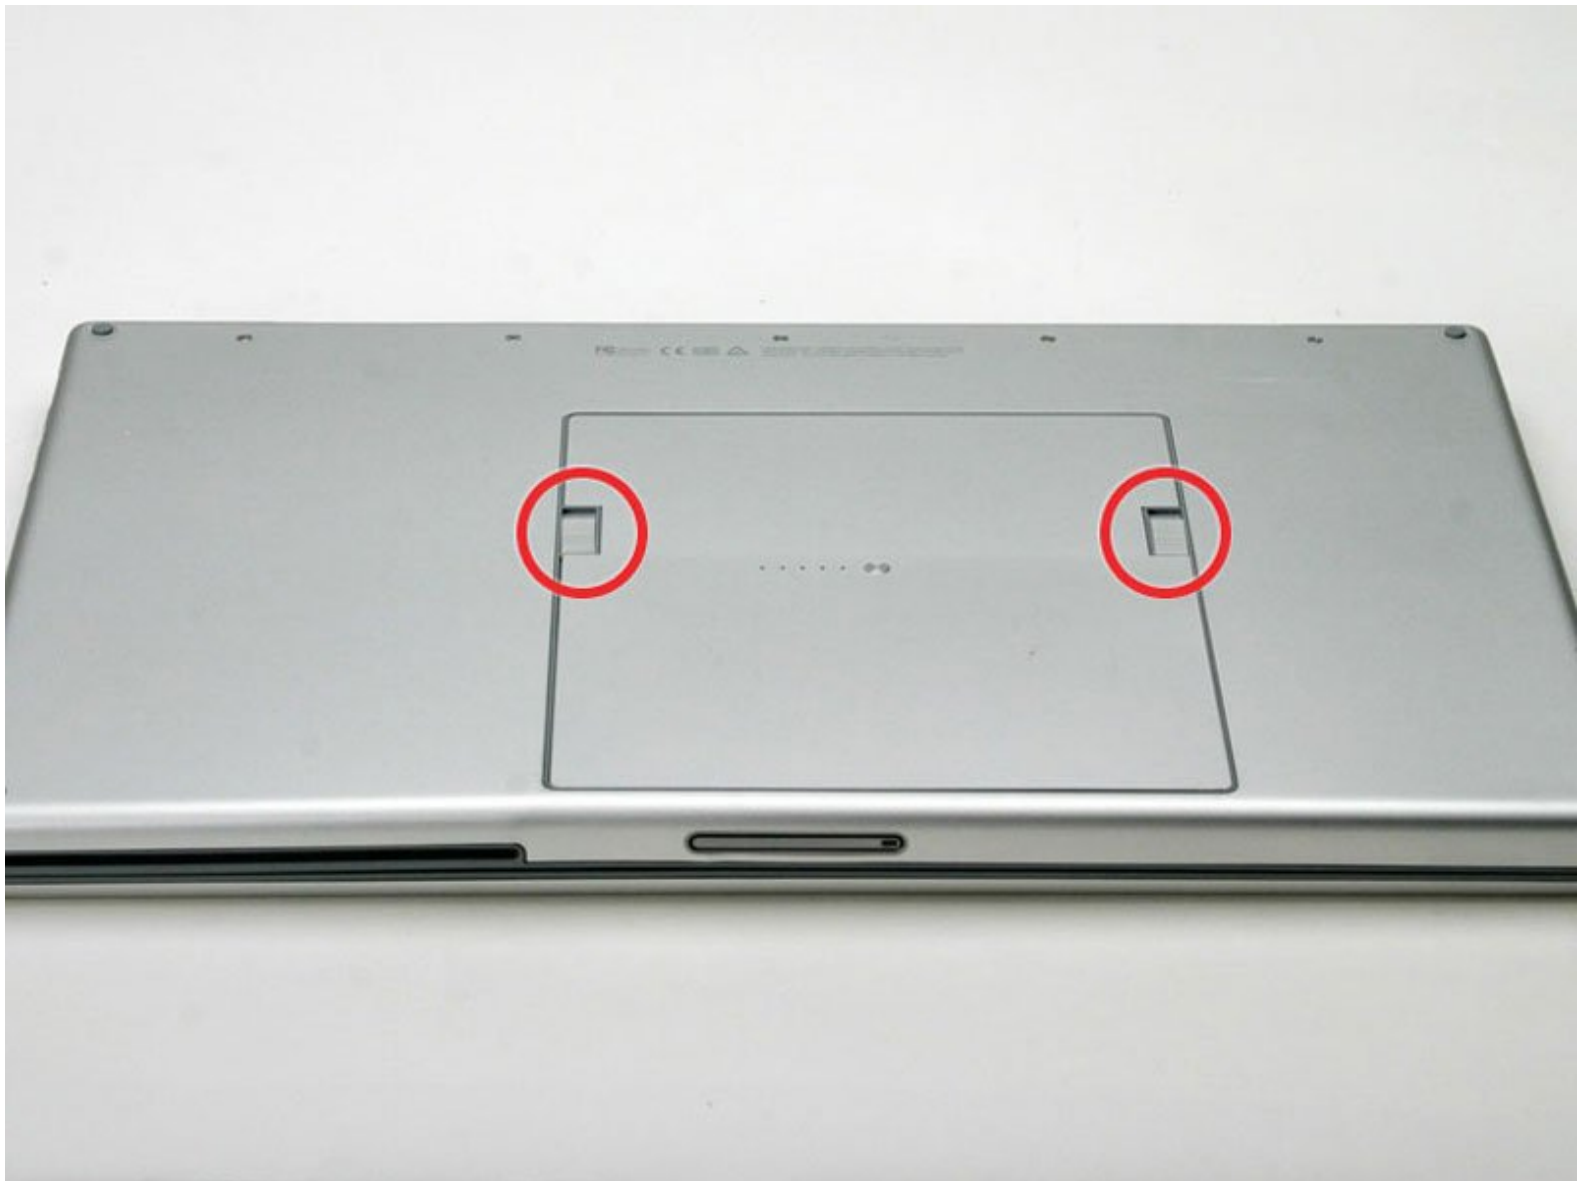

INTRODUCTION

 
All you need to remove the battery is your fingers!



PARTS:

- [G4 Aluminum 17" Battery](#) (1)
-

Step 1 — Battery

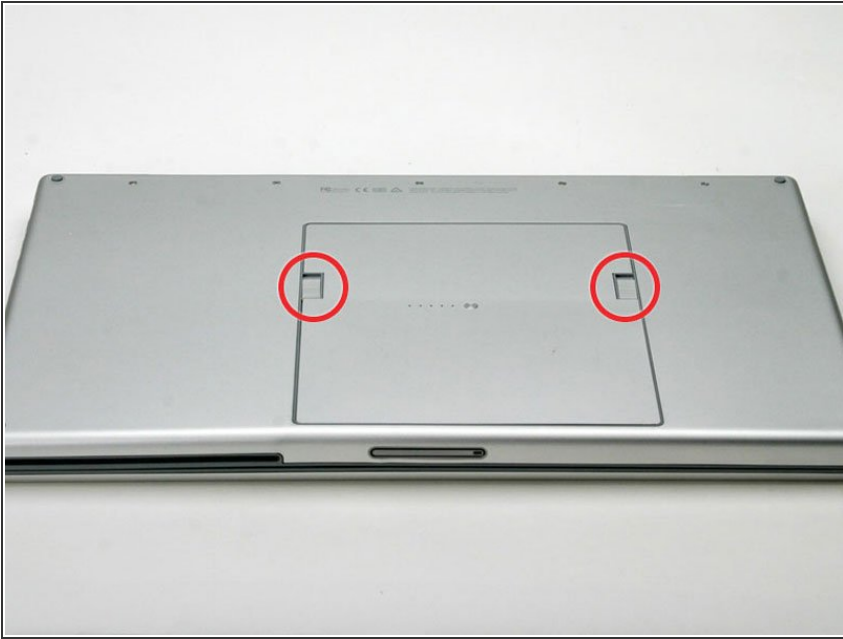

- Orient the computer so that the side with the line of screws on it is away from you.
- Use your thumbs to push both battery release tabs away so that the edge of the battery lifts up.
- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 03:25:30 AM.