




Kodak EasyShare C713 Buttons Replacement

Replace the Buttons in your Kodak EasyShare C713.

Written By: Taggart Ashby

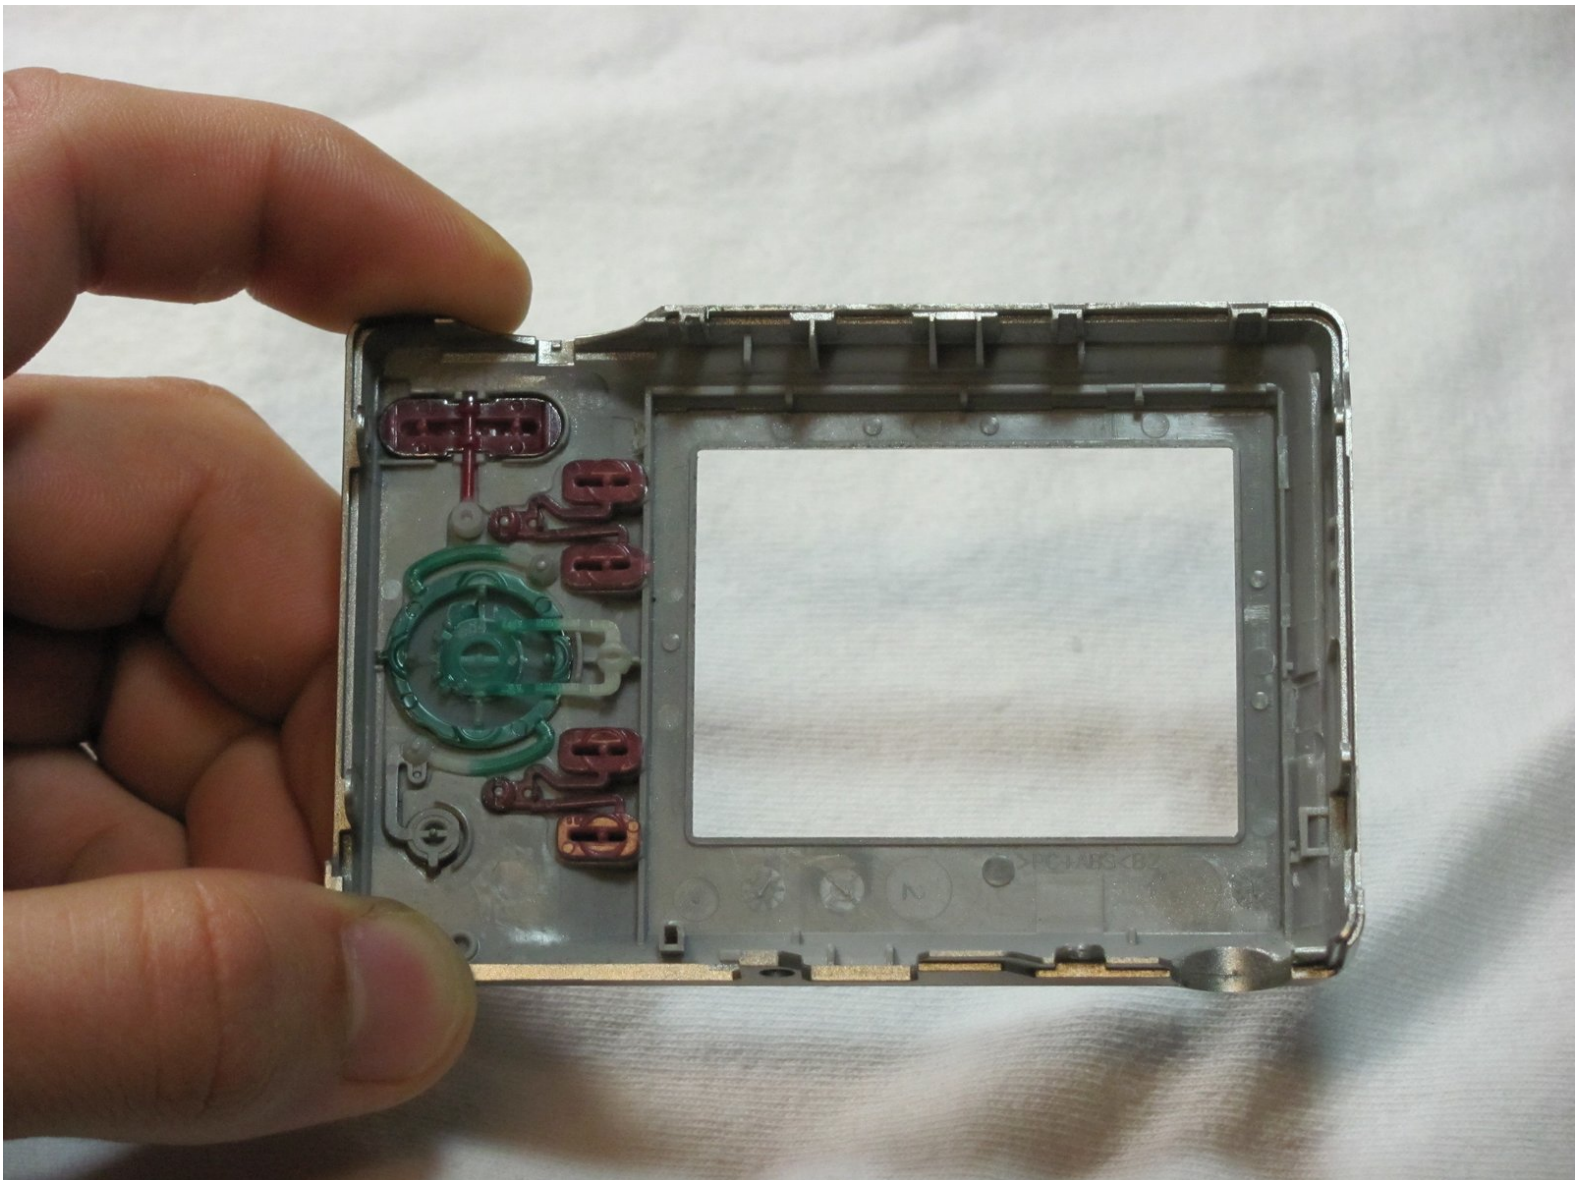

INTRODUCTION

Replacing the camera buttons.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

Step 2





- Remove the old batteries.

Step 3 — Outer Case




- Remove 7 screws from the outer case with a Phillips #00.
 - All screws are 4.45mm.
 - There are 2 screws on the port side.
 - There are 2 screws on starboard side.
 - There are 3 screws on the bottom.

Step 4

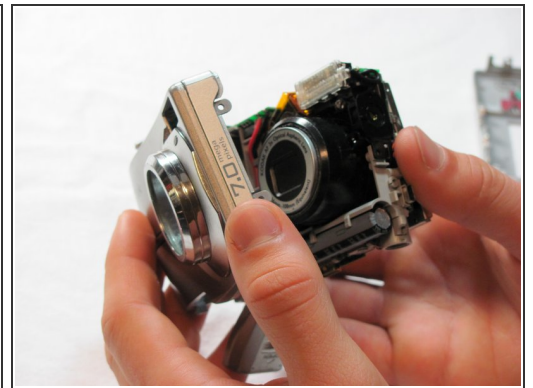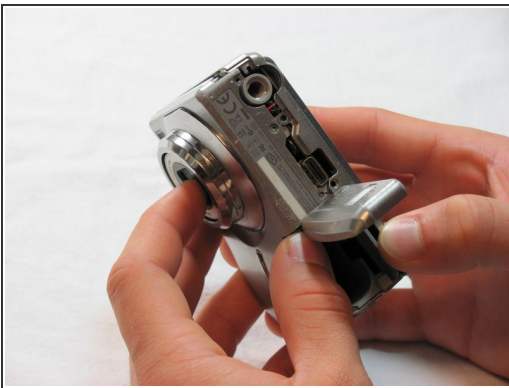

- ⚠ Make sure the battery cap is "up".
 - Pull the outer case off with your hands.

Step 5 — Buttons

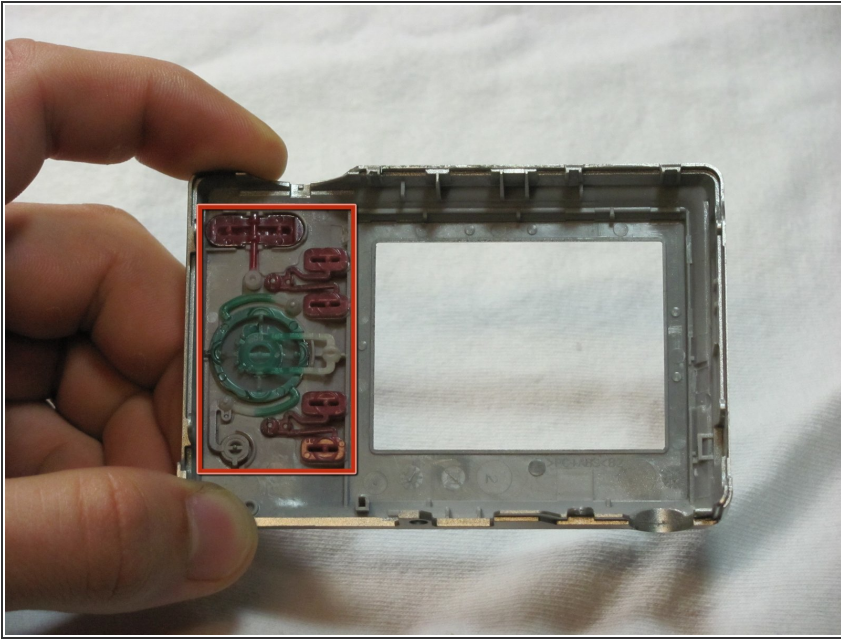

- Remove the necessary broken buttons.
- They come out easily so just use your fingers.

To reassemble your device, follow these instructions in reverse order.