




# Kodak EasyShare C713 Buttons Replacement

Replace the Buttons in your Kodak EasyShare C713.

Written By: Taggart Ashby

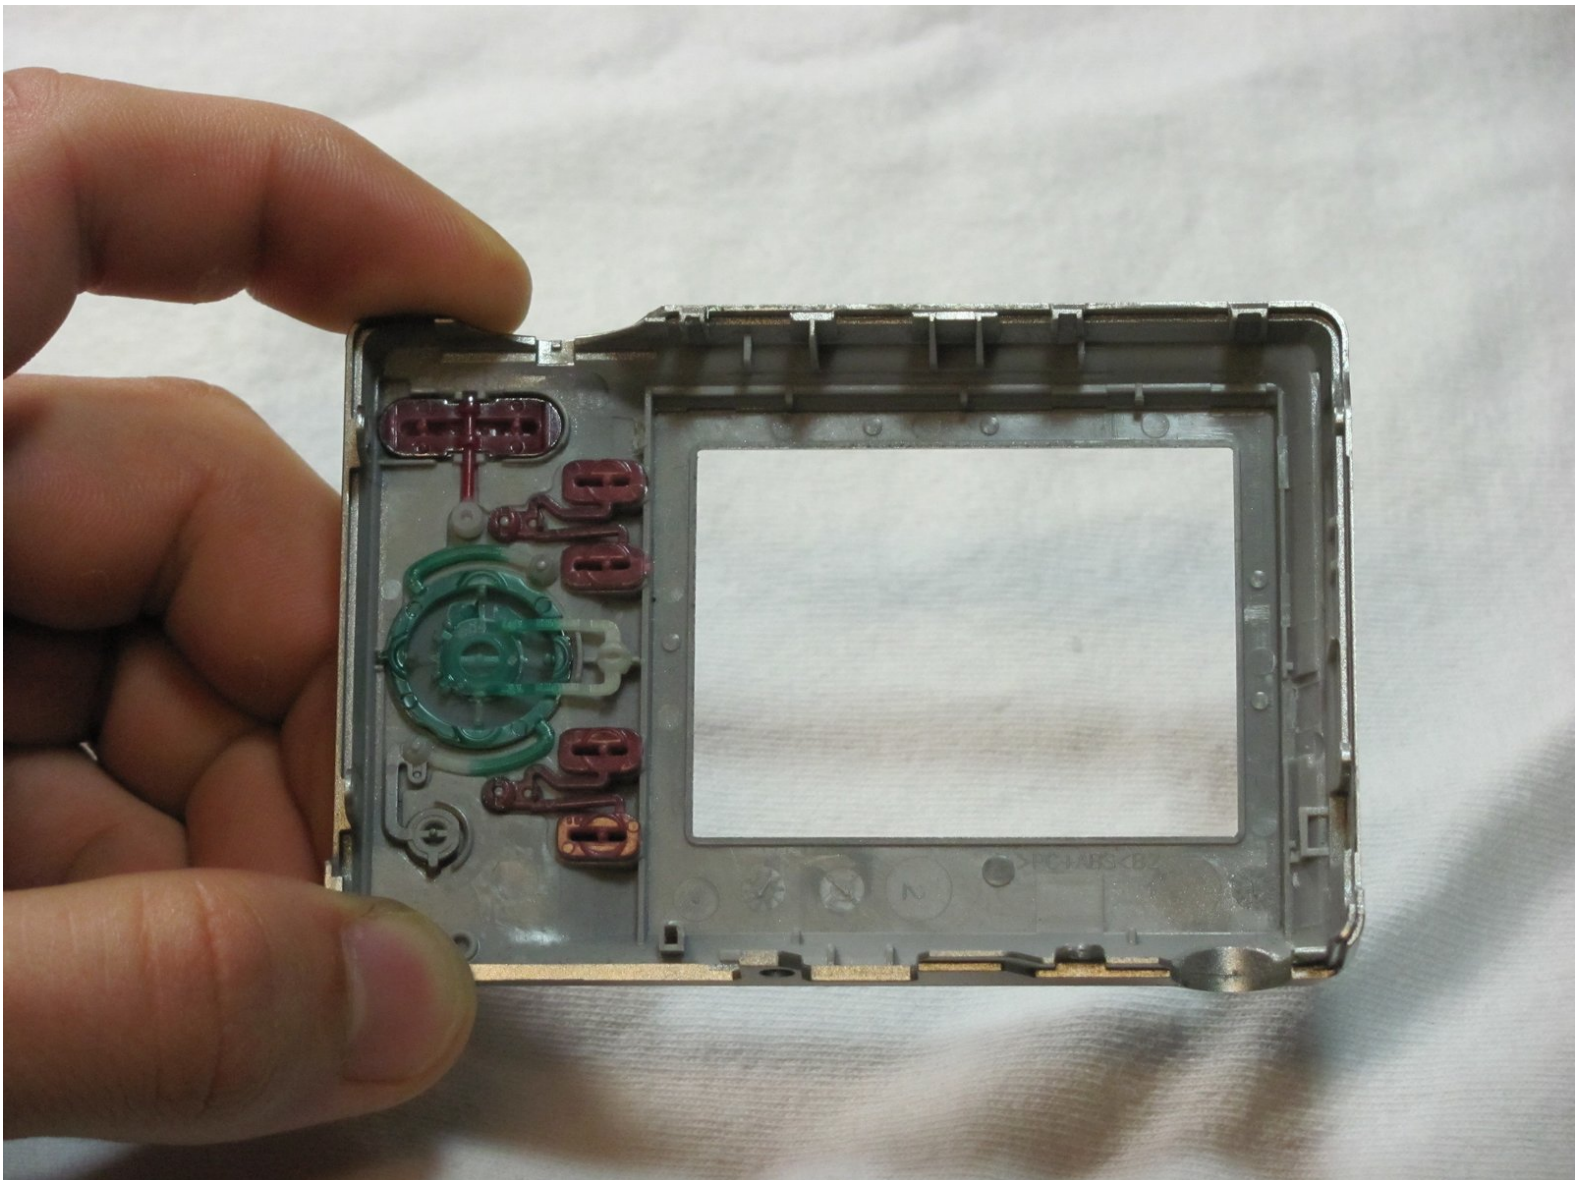

---

## INTRODUCTION

Replacing the camera buttons.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2





- Remove the old batteries.

### Step 3 — Outer Case



- Remove 7 screws from the outer case with a Phillips #00.
  - All screws are 4.45mm.
  - There are 2 screws on the port side.
  - There are 2 screws on starboard side.
  - There are 3 screws on the bottom.


### Step 4

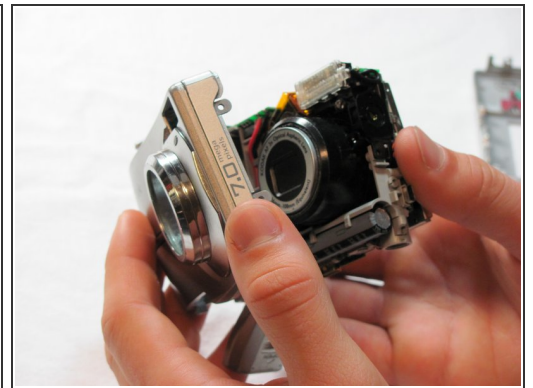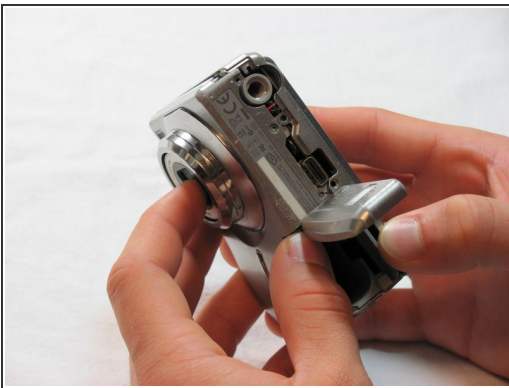

- ⚠ Make sure the battery cap is "up".
  - Pull the outer case off with your hands.



## Step 5 — Buttons

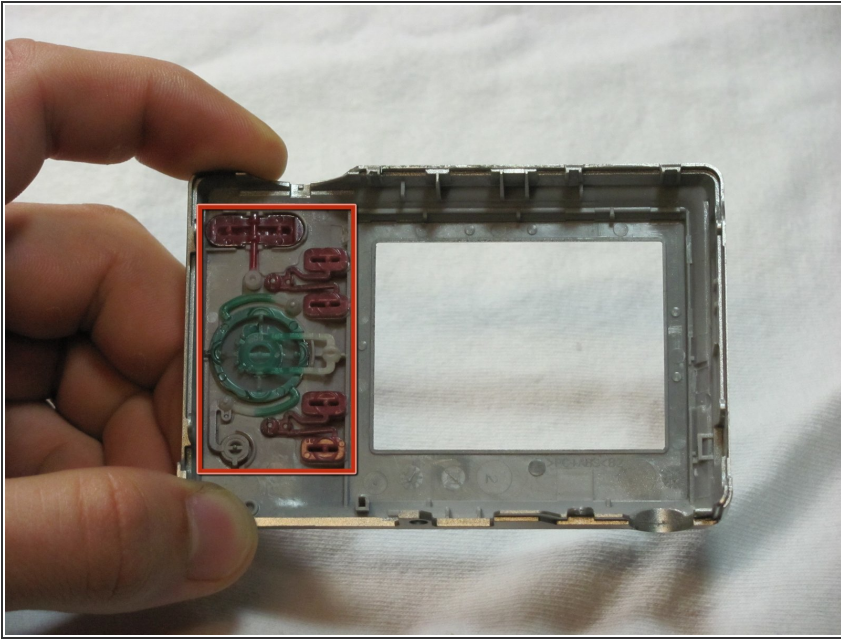

- Remove the necessary broken buttons.
- They come out easily so just use your fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-03 03:47:25 AM.