



Samsung SGH-T639 Volume Button Replacement

This guide will give instructions for removing the volume button of the Samsung SGH-T639.

Written By: Yi Ren



INTRODUCTION

This guide contains photos that do not include pictures of the back cover or battery. However, the instructions have been adjusted to reflect this lack of visual aid.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery





- Flip the phone over and take off the back cover
- ⓘ Note: These images do not contain the back cover or battery of the phone.

Step 2



- Use button to remove battery from the phone.
- ⓘ Note: These images do not contain the back cover or battery of the phone.

Step 3 — SIM Card

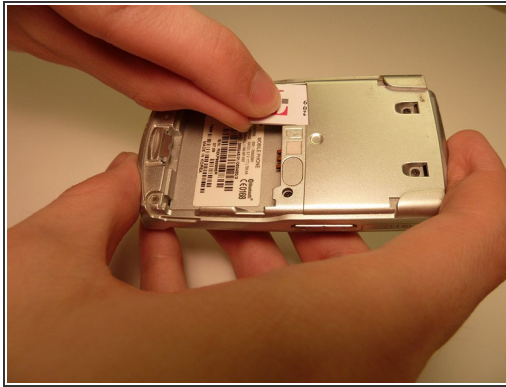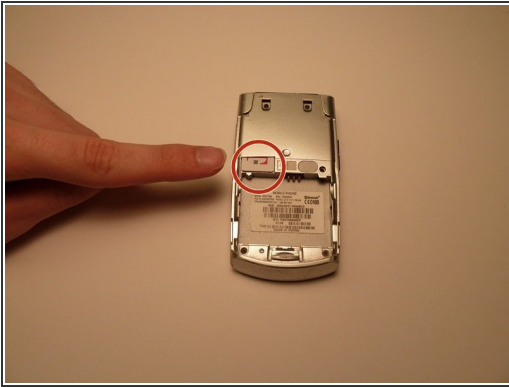

- Locate SIM card
- Slide SIM card down and gently pull out of the card slot

Step 4 — Volumn Button




- Locate the six (4mm) screws on the back of the phone.
- Unscrew all six screws using a Phillips head #000 screwdriver.

Step 5



- Locate volume button.
- Starting at the top, pry the back casing of the phone.
- Continue prying around the side of the phone. Being careful around the volume button.

Step 6

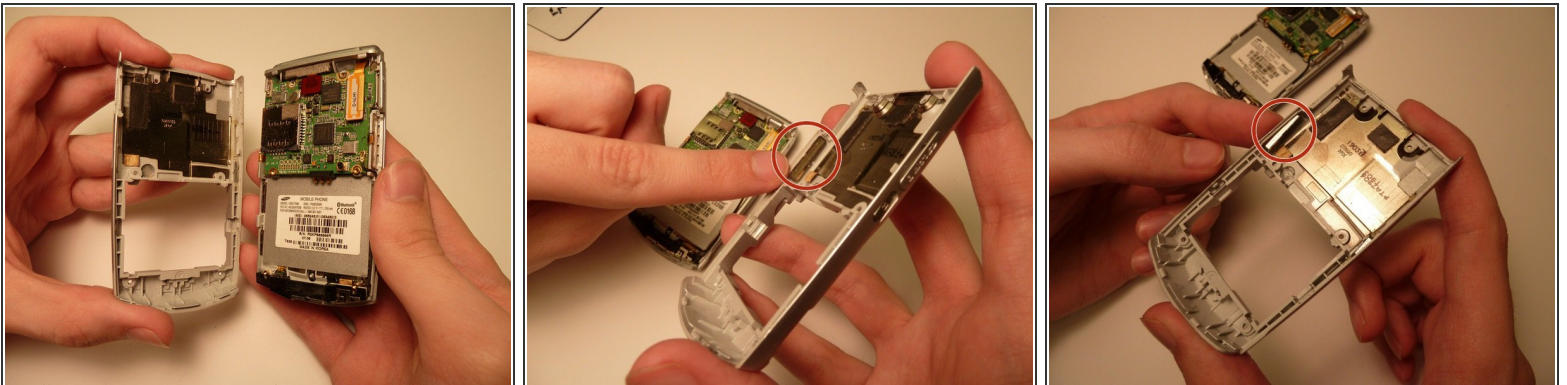

- Remove back casing from the phone.
- Relocate the volume button.
- Gently push the volume button towards the interior of the back casing of the phone.

Step 7



- Completely remove the volume button from the cell phone.

To reassemble your device, follow these instructions in reverse order.