



# Acer Aspire 5253 Battery Replacement

Removal and Replacement of Battery Pack

Written By: Joseph Gagliano



## INTRODUCTION

Batteries are used to power the laptop, if your laptop is experiencing one of these (troubleshooting) problems, follow this guide to replace the battery pack.

*Always remove the battery before opening any part of the laptop, it could cause you to be shocked.*

## Step 1 — Battery



- Turn the laptop over.

## Step 2



- "Unlock" your battery by moving the switch as shown so that an unlocked lock on a red background is shown.

### Step 3



- Next move the other switch, while the unlocked symbol is still showing. The battery should pop up, and no longer be flush with the bottom of the laptop.

### Step 4



- Now remove the battery by lifting it out of the laptop by the side closest to the switches.

## Step 5



- You have successfully removed the battery. Congratulations!

To reassemble your device, return battery pack to designated area. Push down until you hear a click, then lock the battery back into place.

This document was last generated on 2019-08-03 03:37:34 PM.