



# Gateway MD2614u CD Drive Replacement

This guide will instruct you to replace the CD drive on the Gateway MD2614u

Written By: Nelson



## INTRODUCTION

This step-by-step guide illustrates how to replace the CD drive on the Gateway MD2614u.



### TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [CD-Drive](#) (1)

## Step 1 — CD Drive



- Locate the circled screw.
- Carefully unscrew, making sure not to strip out the screw.

## Step 2



- Use any tool with a flat edge in order to pry out the CD-Drive, preferably a plastic opening tool.

### Step 3



- Once the CD drive has been pried out enough, you can pull it out without damaging the other components.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-13 12:13:33 PM.