



Acer Iconia A110 Battery Replacement

Use this guide to replace your battery if your tablet won't keep a charge or seems to die too fast.

Written By: Andrea




INTRODUCTION

This guide will lead you step-by-step through how to remove the Iconia A110 battery.

TOOLS:

- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

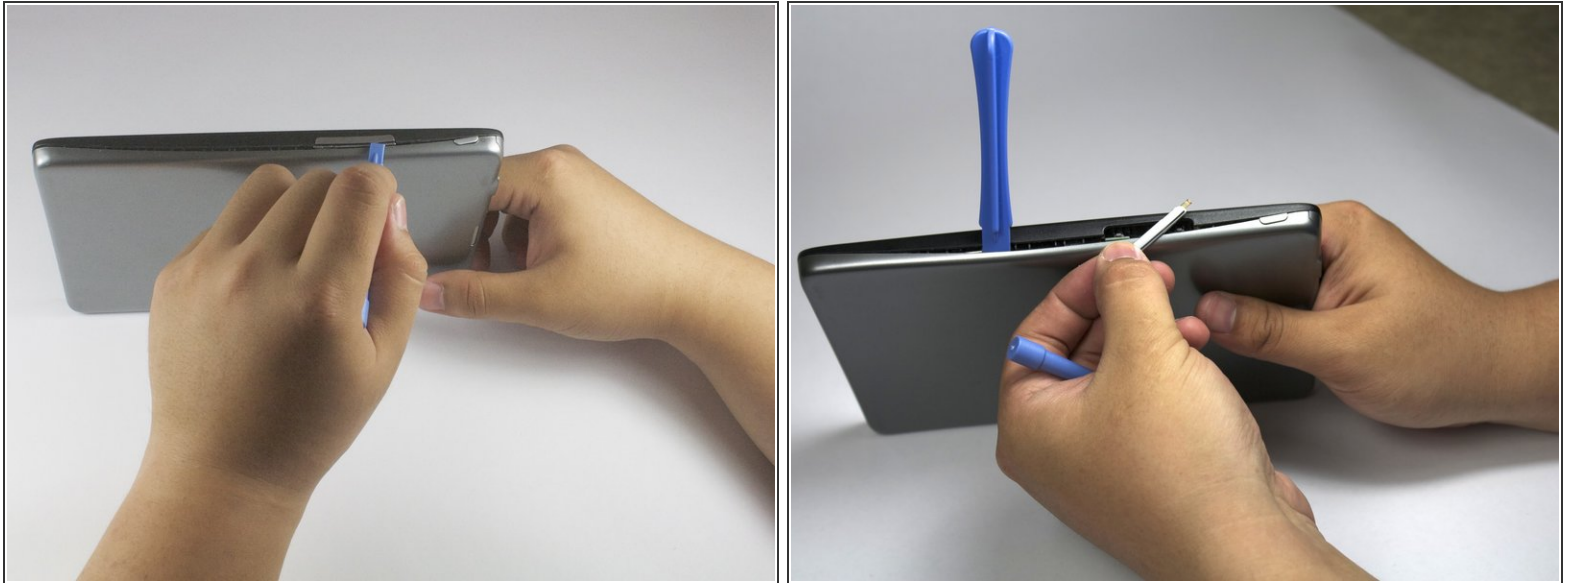

! Before taking apart your tablet, make sure the device is powered off.


- Pry open the right side of case with the plastic opening tool. If necessary, keep a tool lodged into the side to keep the case from closing.
- i** During this process, the volume button and/or power button may fall out.

Step 2



- Pry open the left side of the case with a plastic opening tool. The backside of the tablet should now separate completely from the front.

Step 3

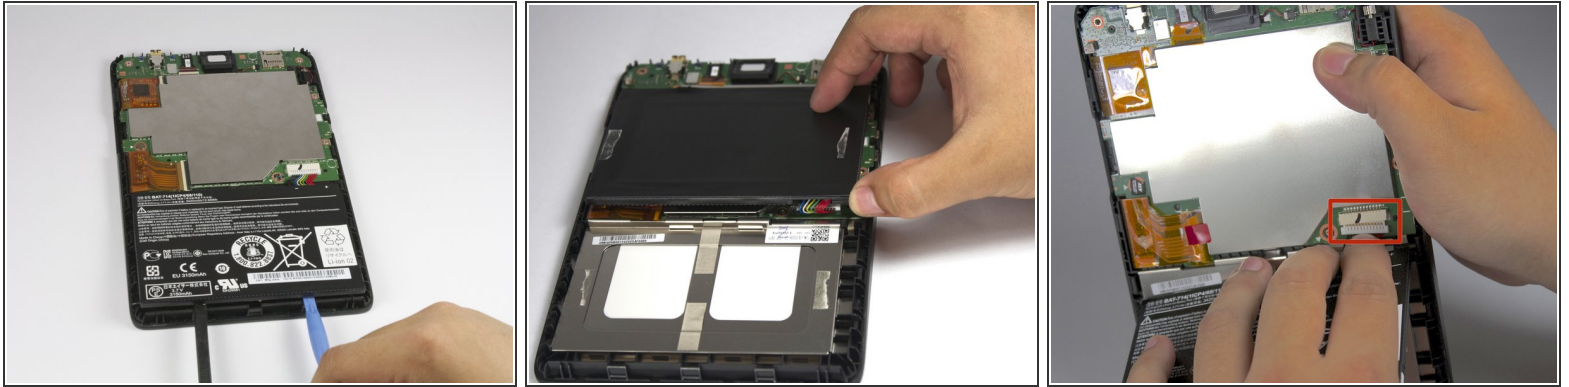

- Using the plastic opening tool and spudger, carefully pry up the battery from the case.
- ⓘ You should hear the adhesive ripping as you do this.
- Once the battery is no longer adhered to the case, detach the dongle that connects the battery to the motherboard.

To reassemble your device, follow these instructions in reverse order.