



Disassembling Olympus Stylus 410 Slider

Written By: Jared Ruekberg



INTRODUCTION

If the front slider on the camera is cracked or broken, use this guide to remove and replace it.

This guide is also a prerequisite for disassembling other parts of the camera in order to prevent damage to the slider, and to make dis-assembly easier.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Slider



- Locate the 2 screws on the bottom of the slider.
- Remove both screws with a #00 Phillips screwdriver.

Step 2



- Gently pull on the bottom of the slider until it comes off the lower track.
- There is a little piece that connects the slider to the track. Be sure not to lose this as it is needed to put the slider back on.

Step 3



- Lift the slider up until it comes off the upper track.

Step 4



- The slider should now be free from the body of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 08:27:48 AM.