



Dell Inspiron 1750 RAM Replacement

This guide will help you replace the RAM (random access memory) chip on your Dell Inspiron 1750.

Written By: Tina Rickard



INTRODUCTION

It is useful to to replace the hard drive if your computer has become slow or if your programs freeze or crash.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Battery



 Unplug the laptop before changing the battery to avoid electric shock.


- Place the laptop on a flat stable surface.
- Flip the laptop over so the underside is visible.

Step 2

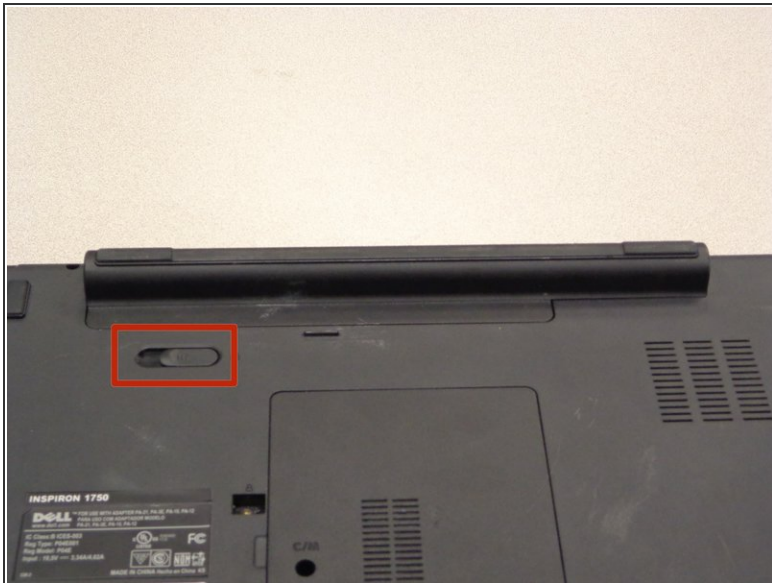

- Locate the battery lock switch.
- Slide the lock switch to the left (away from the lock symbol).
- Slide the battery out away from the laptop.

Step 3 — RAM

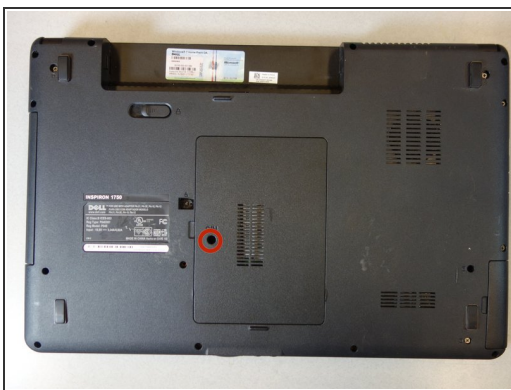

- Remove the one 2mm Phillips #00 screw on the module cover.
- Use the plastic opening tool to lift the module cover.

Step 4



- Pull the metal tabs away from the RAM chip to release it from the motherboard.
- Pull the chip up from the laptop.
- ⓘ Use the plastic opening tool to lift the chip out if it's difficult to do with your hands.
- Repeat this process for the RAM chip directly beneath the last one.

To reassemble your device, follow these instructions in reverse order.