




Dell Inspiron 1750 Optical Drive Replacement

This guide will show you how to replace the disc drive of your Inspiron 1750.

Written By: Tina Rickard

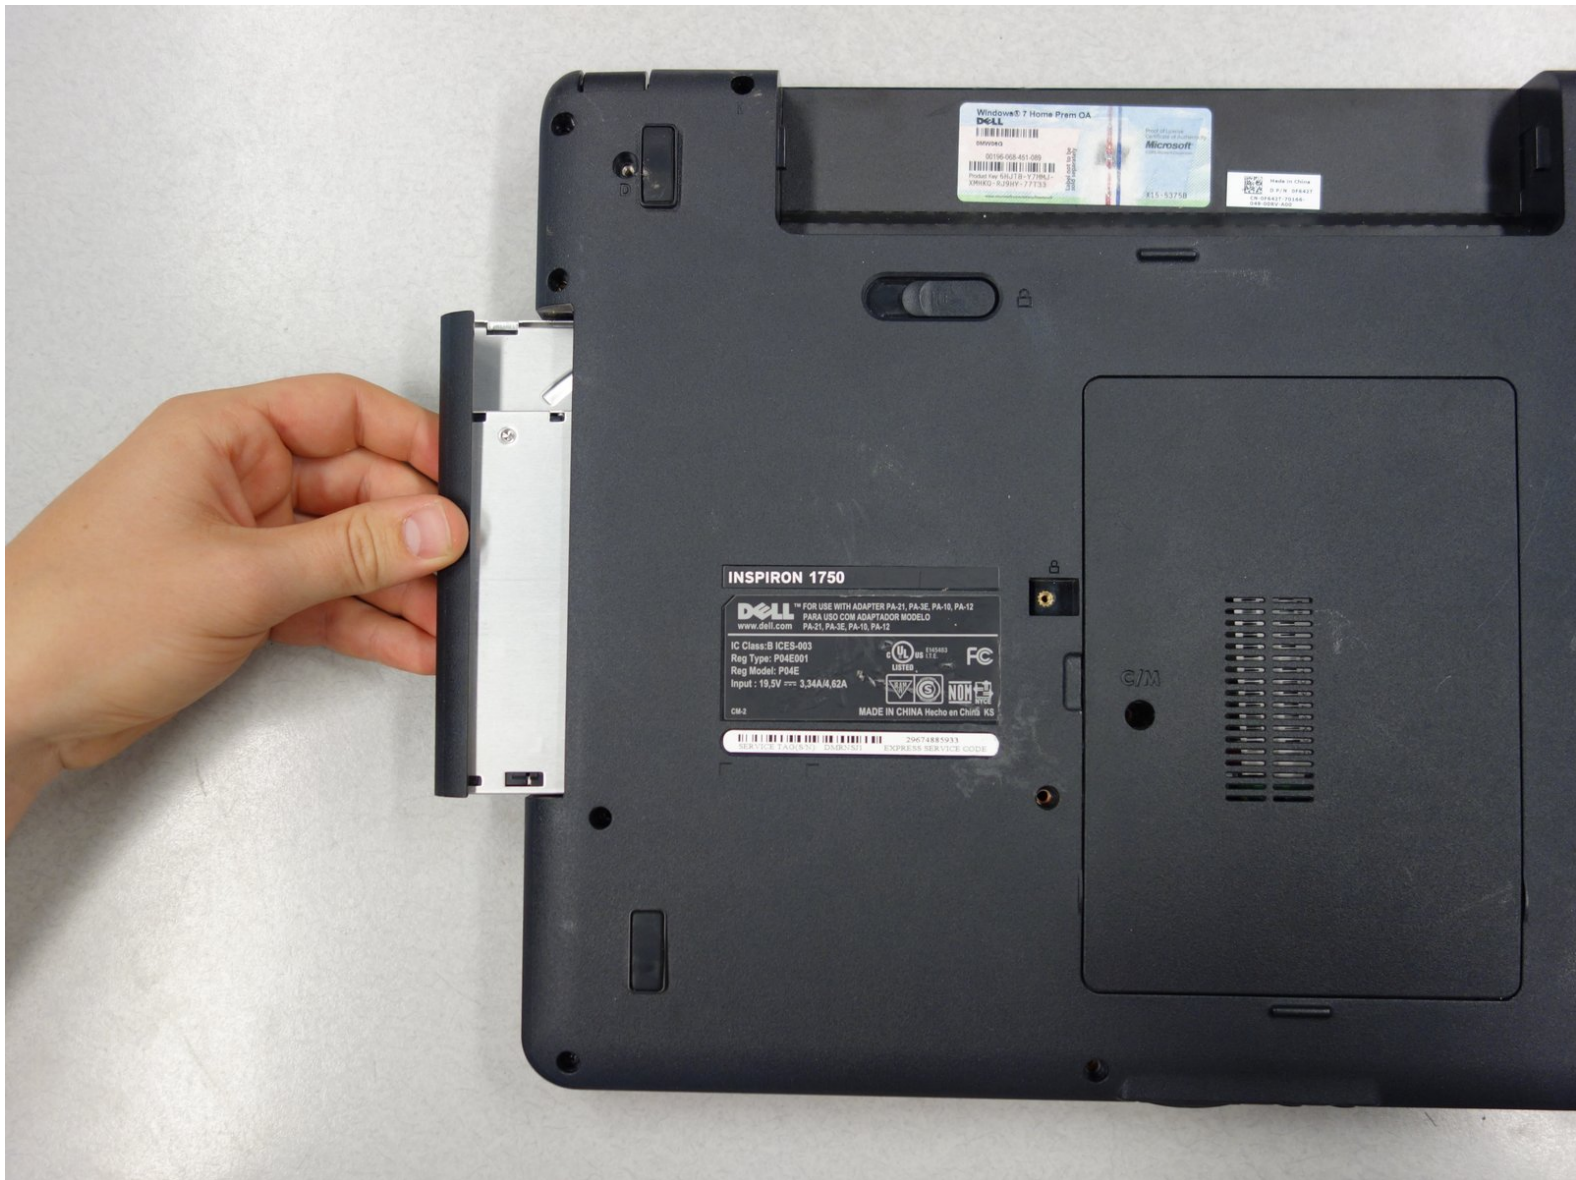

INTRODUCTION

Follow this guide if your disk drive is damaged and needs replacement.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-


Step 1 — Battery



 Unplug the laptop before changing the battery to avoid electric shock.


- Place the laptop on a flat stable surface.
- Flip the laptop over so the underside is visible.

Step 2

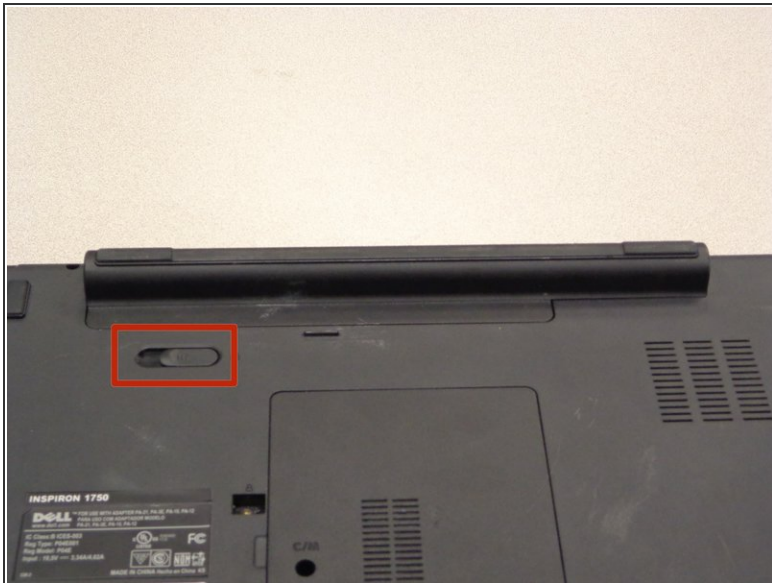

- Locate the battery lock switch.
- Slide the lock switch to the left (away from the lock symbol).
- Slide the battery out away from the laptop.

Step 3 — Optical Drive

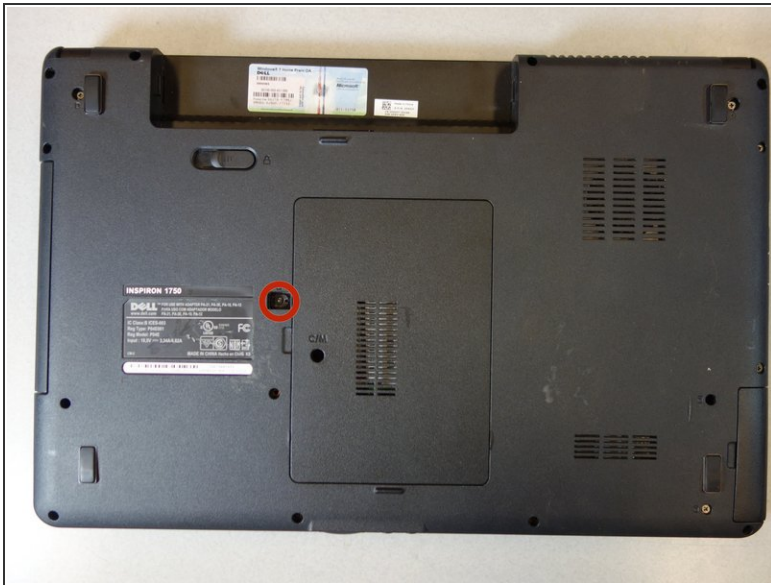

- Remove the 2mm Phillips #00 screw next to the module cover.
- Pull the disc drive away from the laptop.

To reassemble your device, follow these instructions in reverse order.