



Epson Stylus NX230 Ink Cartridge Replacement

This guide is meant to show how to replace ink cartridges within the printer.

Written By: Danielle Purdy



INTRODUCTION

The ink cartridges allow you to print in a variety of colors, or simply in black and white. If one of the ink cartridges is empty, then you will need to replace it.

Step 1 — Ink Cartridge



- Open the top of the printer so that the inside of the printer is visible. Press the red button.
- ⓘ The ink cartridges should be visible.

Step 2



- Grab the top of the cartridge that you need to replace and press in on the tab at the top of the cartridge.
- Pull the cartridge up and out of the ink tray

Close the cover and hit the red button one last time. It will now move to the park position and "CHARGE" the cartridges.

