



IBM ThinkPad 560z Battery Removal

Removing the battery in one easy step.

Written By: Derek Driscoll



INTRODUCTION

This guide will show how to remove the battery on a IBM ThinkPad 560z.

TOOLS:

- [Fingers](#) (1)
-

Step 1 — Battery Removal



- Slide the battery release latch to the right.
- Pull out the battery out towards the front of the device.

This document was last generated on 2018-06-08 05:35:09 PM.