 




HP dv5-1125nr Battery Replacement

This guide will go through the process of removing the battery.

Written By: Nick Loey

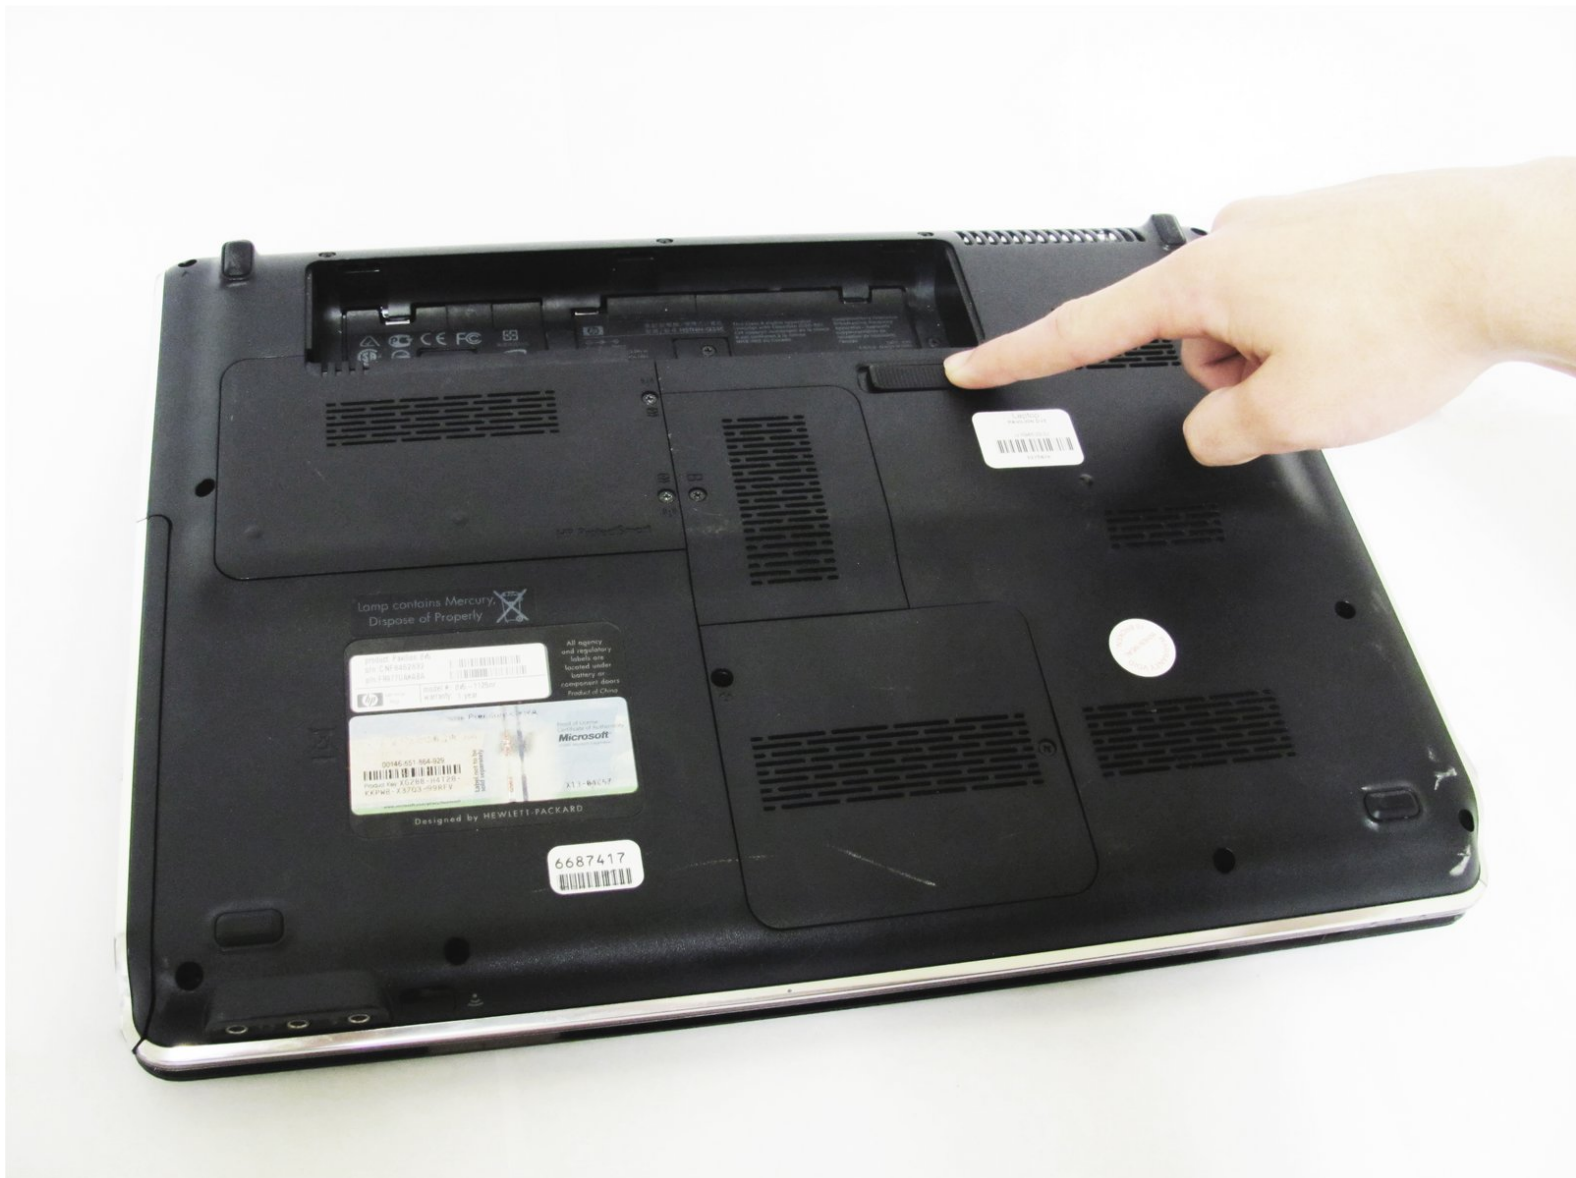

INTRODUCTION

 
Removing the battery is usually the first step to reaching the guts of any laptop. HP has utilized a simple one-switch release system to aid in the removal of the battery.



PARTS:


- [HP HSTNN-Q34C Replacement Laptop Battery](#) (1)
-

Step 1 — Battery

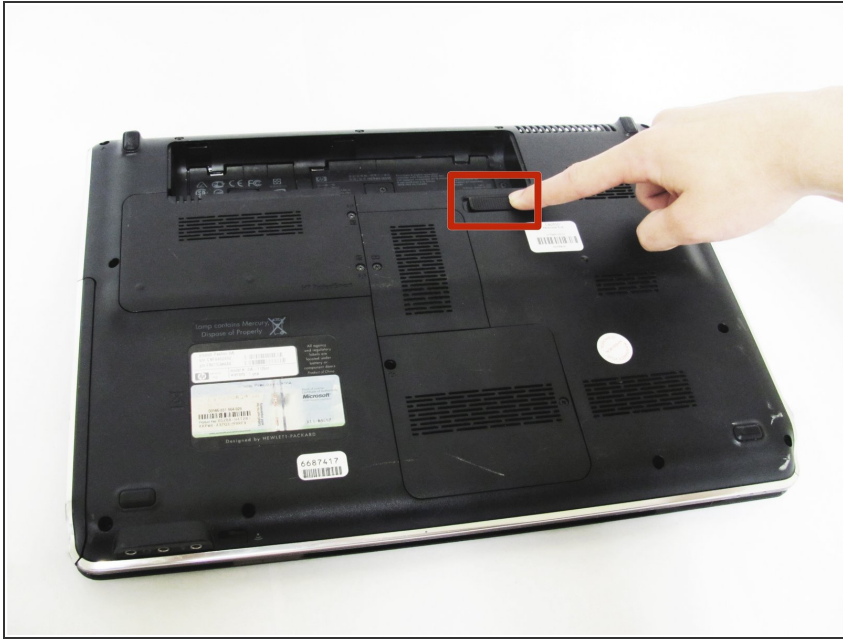

- ⓘ Ensure your computer is shut down. Removing the battery while the laptop is still on may corrupt your files. Remove any power adapters and cords connected to the laptop body.
- Slide the switch to the left until the release clicks.

 Step 2

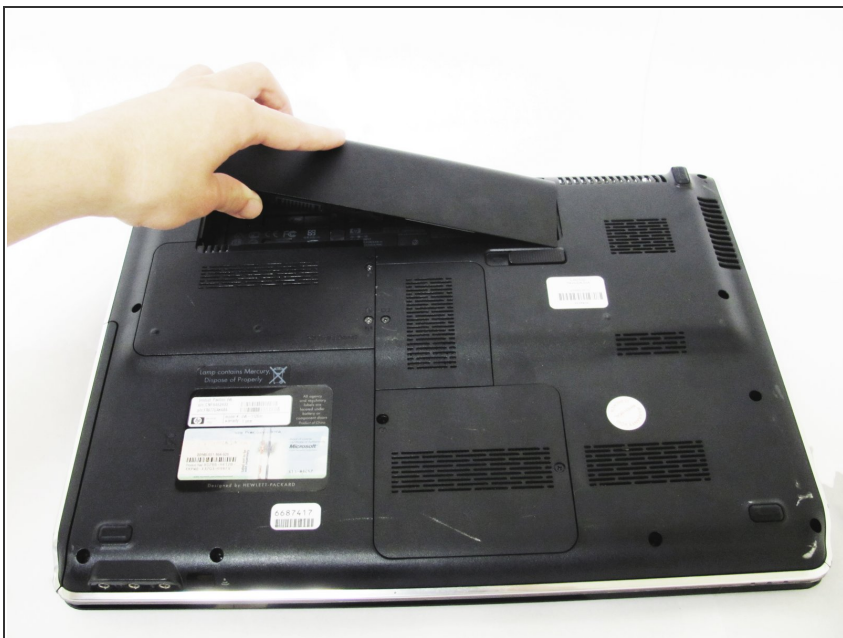

- Remove the battery.
- ⓘ The release switch may need to be held down while removing the battery.

To reassemble your device, follow these instructions in reverse order. Note the release switch does not need to be held down to replace the battery.

