


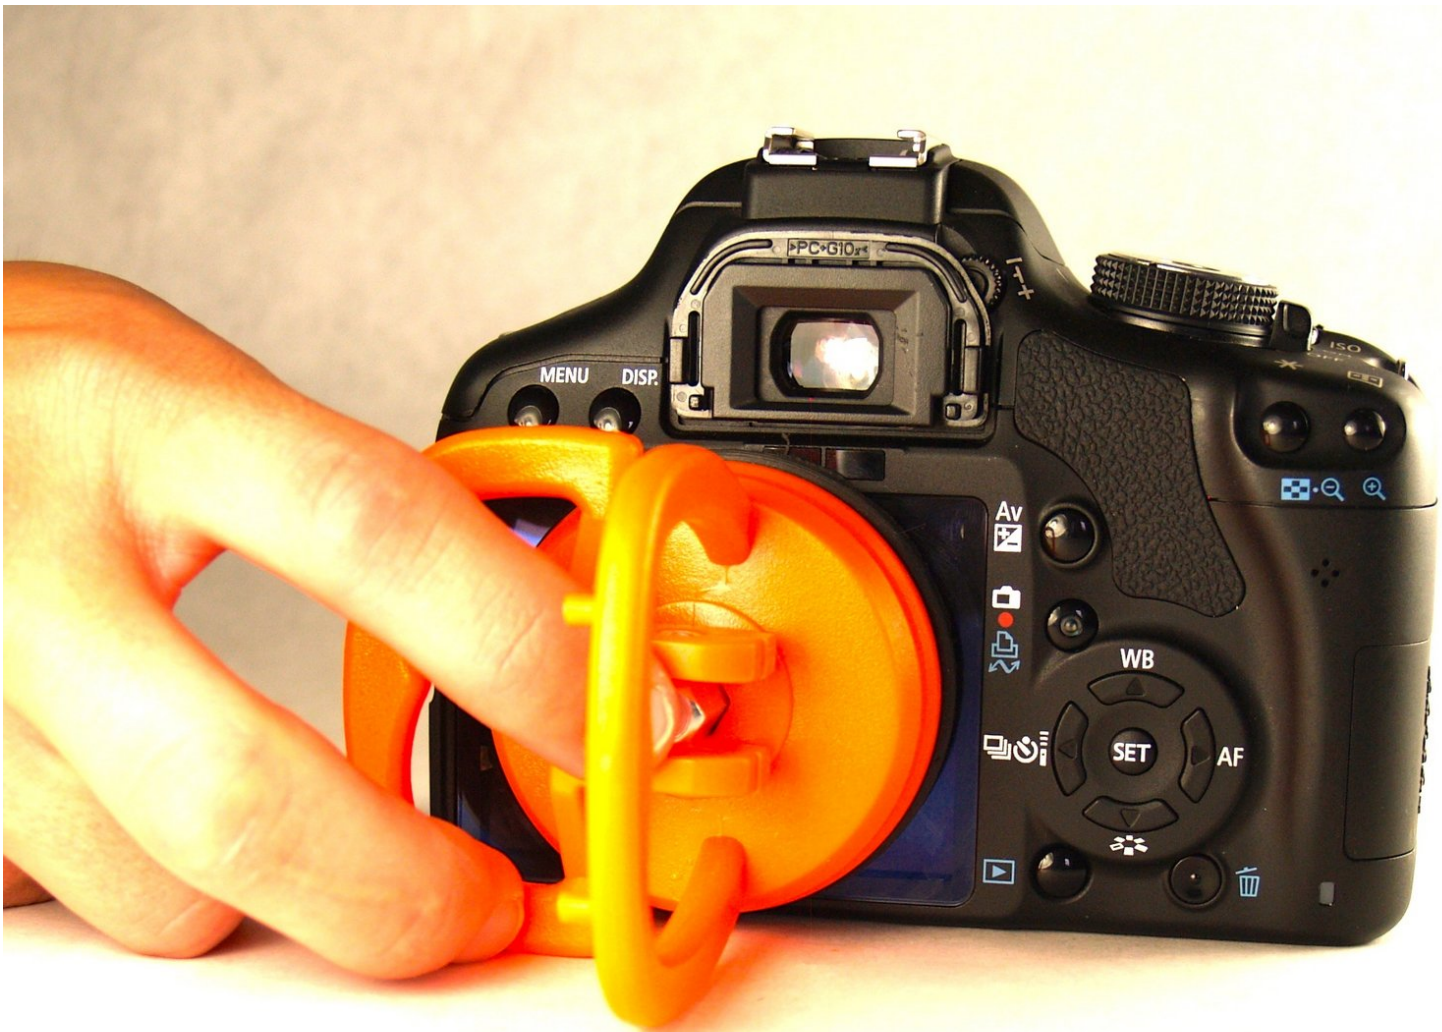

# Canon EOS Rebel T1i Front Screen Replacement

If you see any cracks or scratches on your 3" screen, fear not. It is possible to replace your screen by following the steps provided on this guide.

Written By: Michael Peck



## INTRODUCTION

This guide will take you through the steps required to change your screen and get a clear view of your picture.

### **TOOLS:**

- [Heavy-Duty Suction Cups \(Pair\)](#) (1)

### **PARTS:**

- [Canon plastic 3" screen](#) (1)

## Step 1 — Front Screen




- Clean the broken or cracked screen as best as possible.
- Place the suction cup on the damaged screen.

## Step 2



- While holding the suction cup flat against the camera screen, suction the two together by pinching the orange handles to meet at the center.

### Step 3

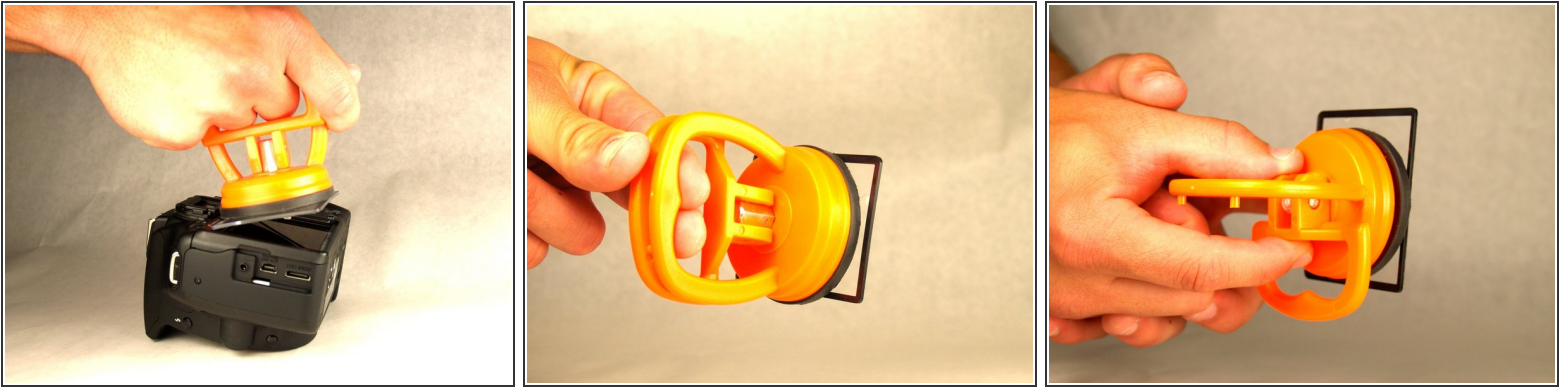

- Grab the handle of the suction cup and gently lift it up at an angle, as demonstrated in the picture.
- Remove the plastic screen from the camera.
- Release the broken screen by pulling down the lever of the suction cup.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-05-05 11:33:15 AM.