



HP 2000 - 2D22DX Battery Replacement

This guide will show the user how to remove the device's battery and install a new one, if necessary.


Written By: Conor Most



INTRODUCTION

Your battery is the main power supply to your computer so making sure it is in proper working condition is crucial.

Step 1 — Battery

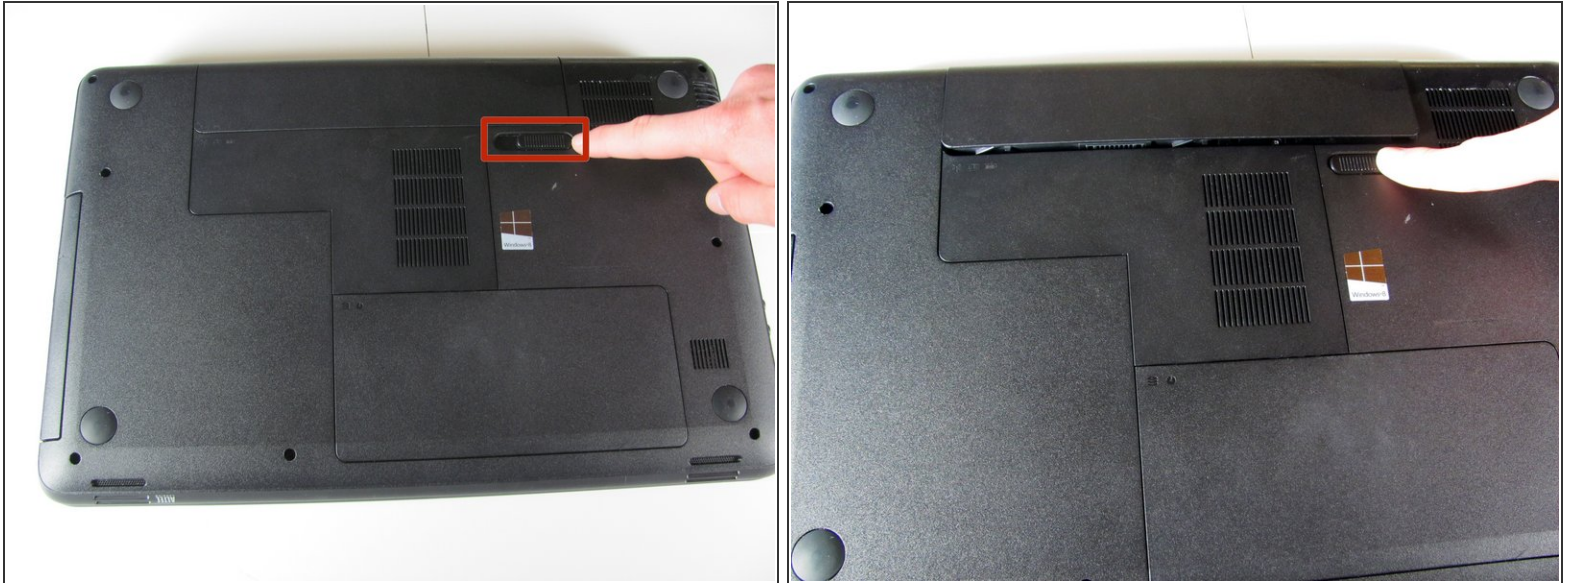

- Flip the device over and locate the battery compartment.
- Slide the battery release latch to the left until the battery is detached from its slot.
- A distinguishable *pop* will be heard when the battery is fully released.

Step 2



- Slowly pull the battery out of its slot, being careful not to damage any of the connectors in the process.

To reassemble your device, follow these instructions in reverse order.