



HP 2000 - 2D22DX Battery Replacement

This guide will show the user how to remove the device's battery and install a new one, if necessary.


Written By: Conor Most



INTRODUCTION

Your battery is the main power supply to your computer so making sure it is in proper working condition is crucial.

Step 1 — Battery

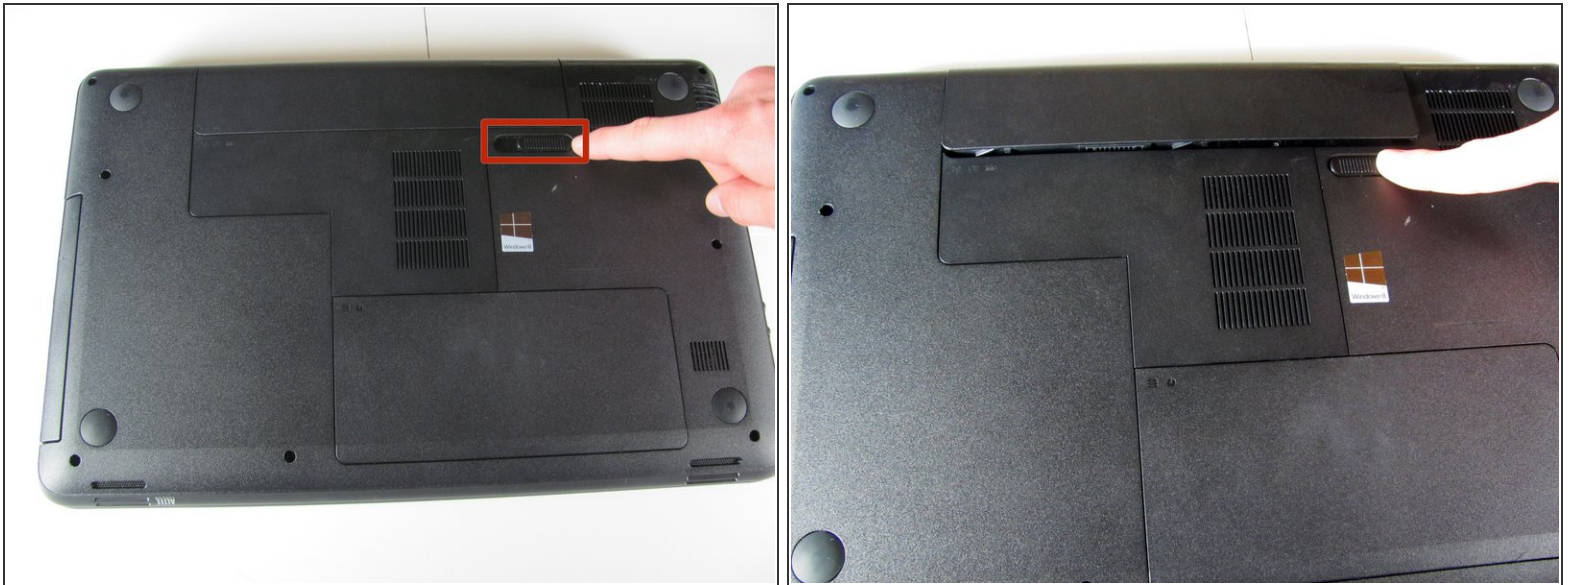

- Flip the device over and locate the battery compartment.
- Slide the battery release latch to the left until the battery is detached from its slot.
- A distinguishable *pop* will be heard when the battery is fully released.

Step 2



- Slowly pull the battery out of its slot, being careful not to damage any of the connectors in the process.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 02:30:44 AM.