




# LG E500-K Notebook remove reset BIOS.

LG NOTEBOOK E500-K is a Discontinued Product. A old PC have a bios password. My first Guide.

Written By: olavoskarsen

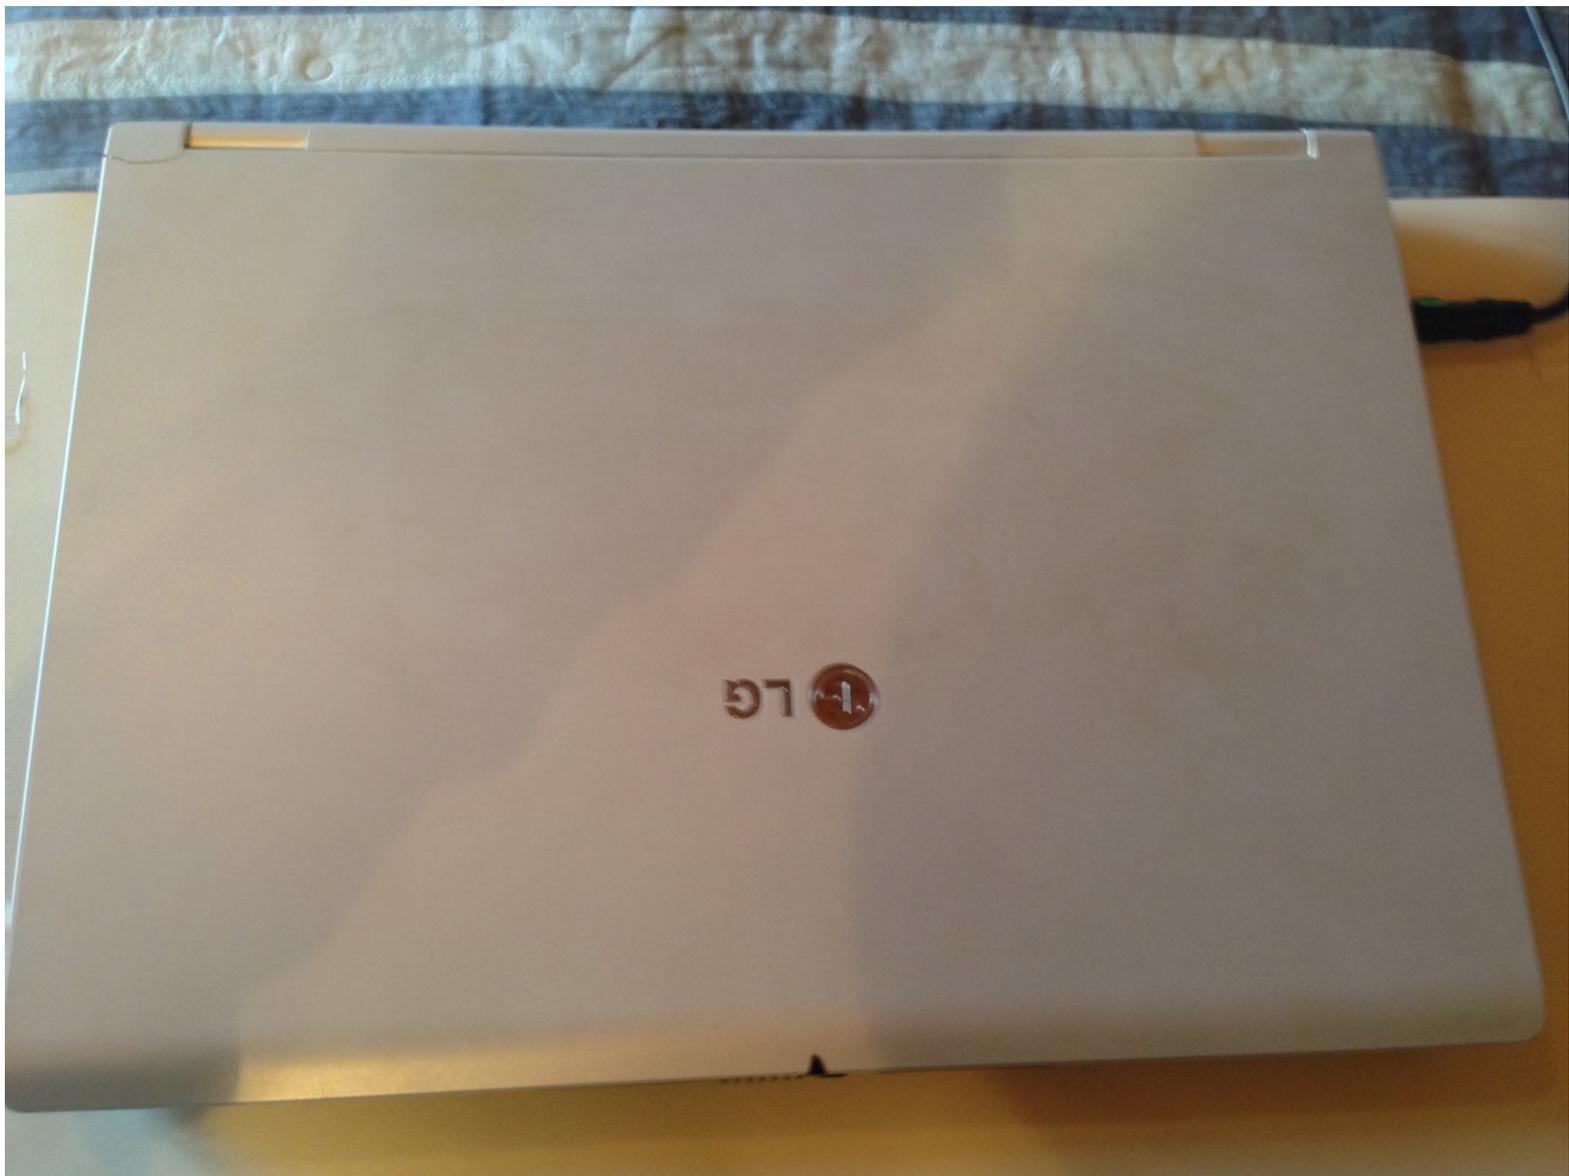

---

## INTRODUCTION

Take apart CMOS / BIOS Battery

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — LG E500-K Notebook remove reset BIOS.



- Turn off the computer and turn it over its back.
- Remove the battery lock.
- Remove the battery



## Step 2



- Remove Phillips screw from the panel.



⚠ The panel clip can break.

### Step 3

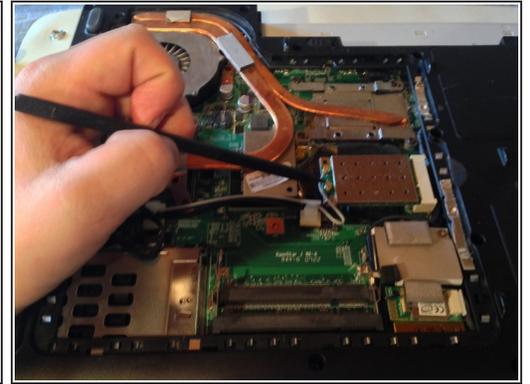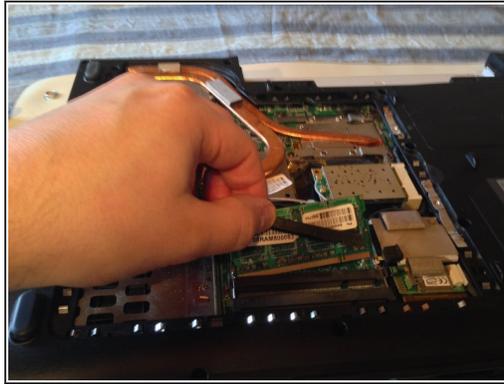

- Now, remove RAM card`s from the MB.
- Detach the grey and black cables from Wi-Fi Card

### Step 4

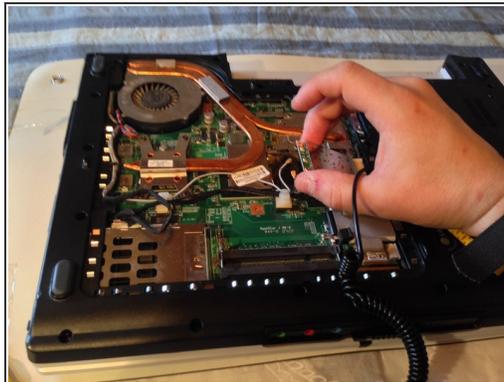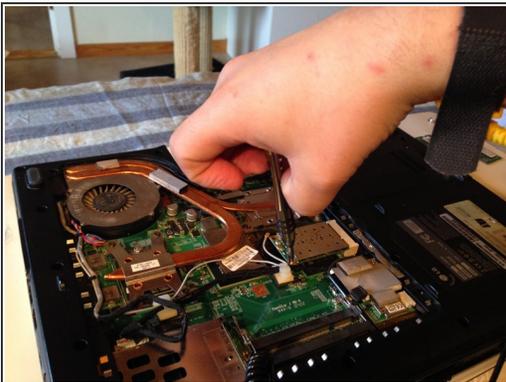

- Remove 1 screw holding Wi-Fi card in place.
- Remove Wi-Fi card from MB.

## Step 5



- Remove a black tape.
- lift tape away and disconnect the battery.
- Test the computer. Turn it on.
- ⓘ Reconnect the battery.

To reassemble your device, follow these instructions in reverse order.