



# Asus F6A-X2 Battery Replacement

A step-by-step guide for replacing the laptop's battery.

Written By: Jonathan



## INTRODUCTION

The main battery provides portable power to the laptop. Without the battery, the laptop cannot stay powered on without a power cord. Make sure to select a compatible battery for this laptop when replacing it.

## Step 1 — Battery



**⚠** Remove any power cords and turn the laptop off. Attempting to replace part of the laptop while power is running through it may cause electrocution or damage to the device.

- Flip laptop face down and rotate so the battery is facing toward you.
- i** The battery is not shown in this picture.
- To remove the battery, place one finger on each of the two black slide tabs. Push each tab toward the center of the laptop to release the lock.
- Slide the battery toward you and lift it out of the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-21 10:05:54 PM.