



# LeapFrog LeapPad2 Explorer Back Cover Replacement

Use this guide in order to replace a damaged back cover.

Written By: Nupur Garg



---

## INTRODUCTION


Whether your child has cracked the back cover or decided to cover it in make-up, learn how to replace the back cover.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

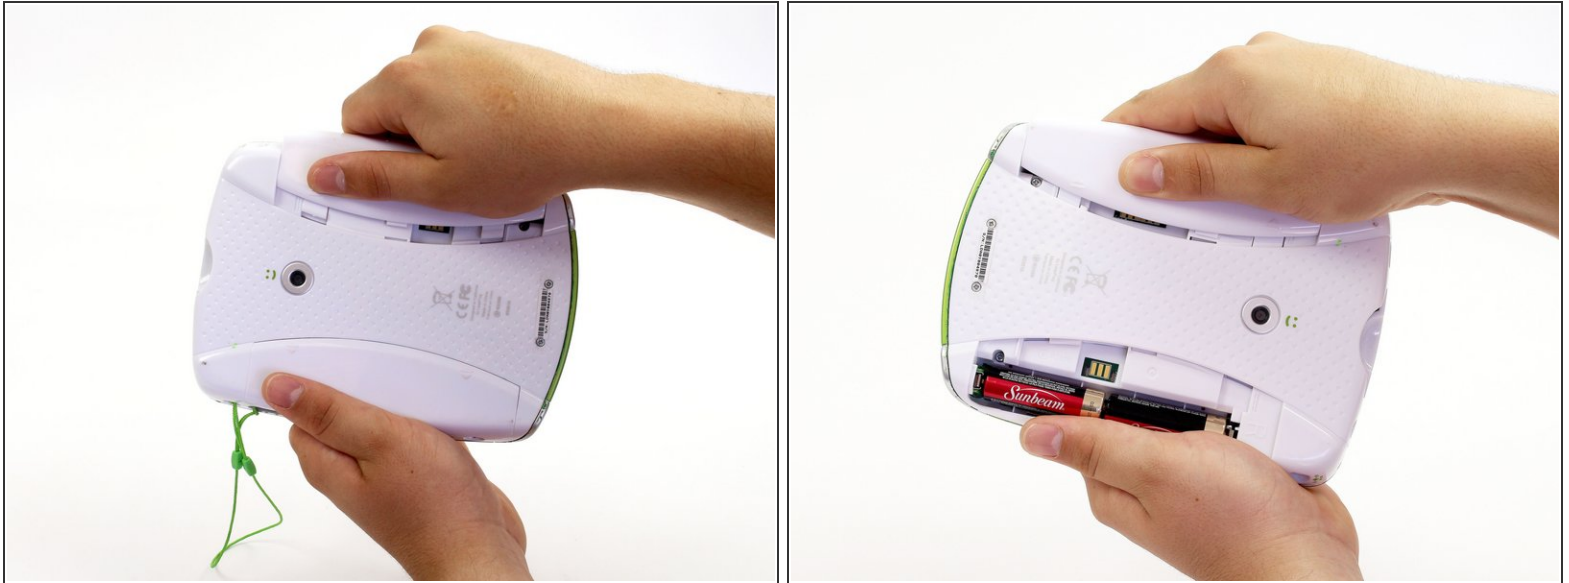

- Before disassembling your LeapPad, ensure your device is shut off.
- Push outward on the plastic side panels to remove and reveal battery.
- The panels should detach fully from the main device.


## Step 2



- Push down from the positive end of the battery towards the negative end to pry the battery up out of its dispenser.
- Remove all four AA alkaline batteries from the device.


## Step 3 — Back Cover




 This step will void your device warranty.

- Remove the following screws securing the back cover to the main device:
  - Two 10.0 mm Phillips screws
  - Four 4.0 mm Phillips screws
  - Three 3.0 mm Phillips screws

## Step 4

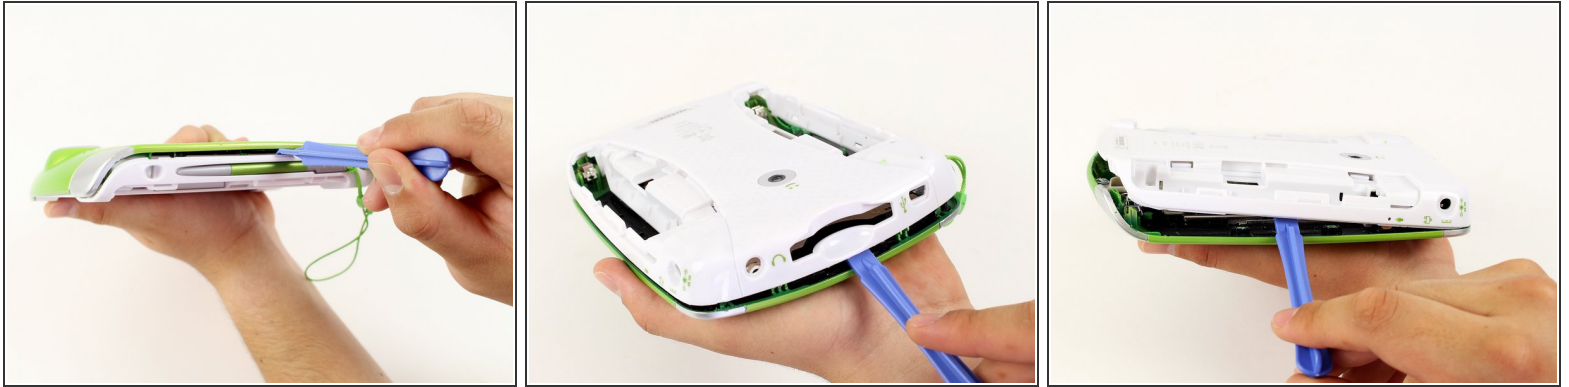

- Insert a plastic opening tool into the seam between the front and rear covers to detach the back cover from the rest of the device.
  - Move the plastic opening tool around the perimeter of the LeapPad2.
  - Lift up and remove the rear case from the tablet.
-  A butter knife can help when prying the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 02:21:33 AM.