



Nikon D5000 Battery Door Replacement

Remove the battery door from the Nikon D5000.

Written By: Jacob Rardin



INTRODUCTION

Removing the battery door makes it easier to clean up after a battery leak or unscrew the bottom panel. It is also necessary for the installation of certain accessories.

Step 1 — Battery Door



- On the bottom of the camera, pull the release tab towards the center of the camera, then pull up.

Step 2



- Grip and hold the front end of the battery door at a 45-degree angle from the case.
- Pop the battery door out by pulling the front tab up.
- ☑ When reassembling, seat the rear tab in its slot before pushing the front tab back in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:41:37 AM.