



# DualShock 4 Plastic Shell Replacement

This guide will demonstrate how to remove and replace the plastic shell of the Dual Shock 4 controller.

Written By: Dustin



## INTRODUCTION

Over time, your DualShock 4 controller will probably be dropped, stepped on, or even thrown. The plastic shell helps to protect the internal components of the controller, but eventually, you might find that this protective shell needs to be replaced or re-aligned. This step-by-step process will show you how to fix this problem yourself.



### TOOLS:

- [Essential Electronics Toolkit](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [DualShock 4 Controller Rear Panel \(CUH-ZCT1\)](#) (1)
- [DualShock 4 Controller Front Panel](#) (1)

## Step 1 — Plastic Shell



- To remove the plastic shell, use the Phillips #00 screwdriver to remove the four 6.0 mm screws securing the back of the controller.

## Step 2



- ⓘ The plastic shell is held in place by little plastic tabs that snap together.
- Wedge the plastic opening tool between the shell and the controller and carefully pry off the plastic.
- ⚠ Take your time on this step. You do not want to break any plastic pieces.

### Step 3



- Either re-align the old plastic shell, or align a new replacement shell with the controller. The little plastic tabs that snap together should be aligned.
- Apply pressure on the plastic housing so that it clicks together.

### Step 4



- Using the Phillips #00 screwdriver, replace and tighten the four 6.0 mm screws on the back of the controller.

To reassemble your device, follow these instructions in reverse order.