



HP HDX 16-1160US RAM Replacement

This guide will show the user how to replace the RAM

Written By: Marshall Reid



 **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — RAM



- Flip the device over so that the bottom side is facing up and use the Phillips #1 Screw Driver to remove the four 4mm screws on the cover panel.
- Lift the panel to remove it from the device.

Step 2

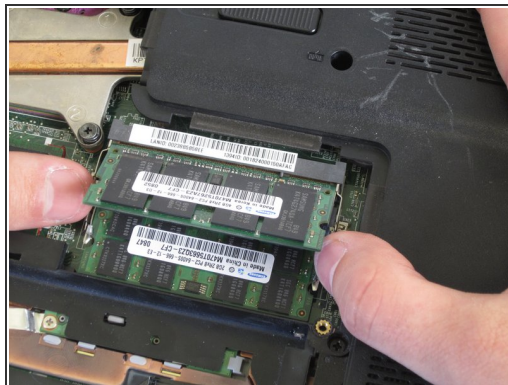

- Remove the RAM by placing your thumbs on the silver tabs on each side of the RAM stick and pulling the tabs away from the RAM stick.
 - ⓘ The RAM stick should "flip" up when it is released from its holders.
- Pull the RAM stick toward you to remove it.
- Repeat the above step to remove the second RAM stick

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-24 12:54:48 PM.