



# Sony NEX-7 Lens Replacement

This guide will show you how to remove and replace the lens on your camera.

Written By: Jay Miley



## **INTRODUCTION**

Removing and replacing the lens on this camera is a very easy process.

## Step 1 — Lens



- First, turn the camera upside down.
  - Press the button located next to silver lens mount and rotate the lens counterclockwise.
  - Pull the lens away from the camera body.
- ⚠ After removing the lens, replace the lens or attach the body cap as soon as possible to prevent damage to the shutter.

To reattach the lens, align the white dot on the lens and camera body, insert, and twist clockwise.

This document was last generated on 2017-06-18 10:35:22 AM.