


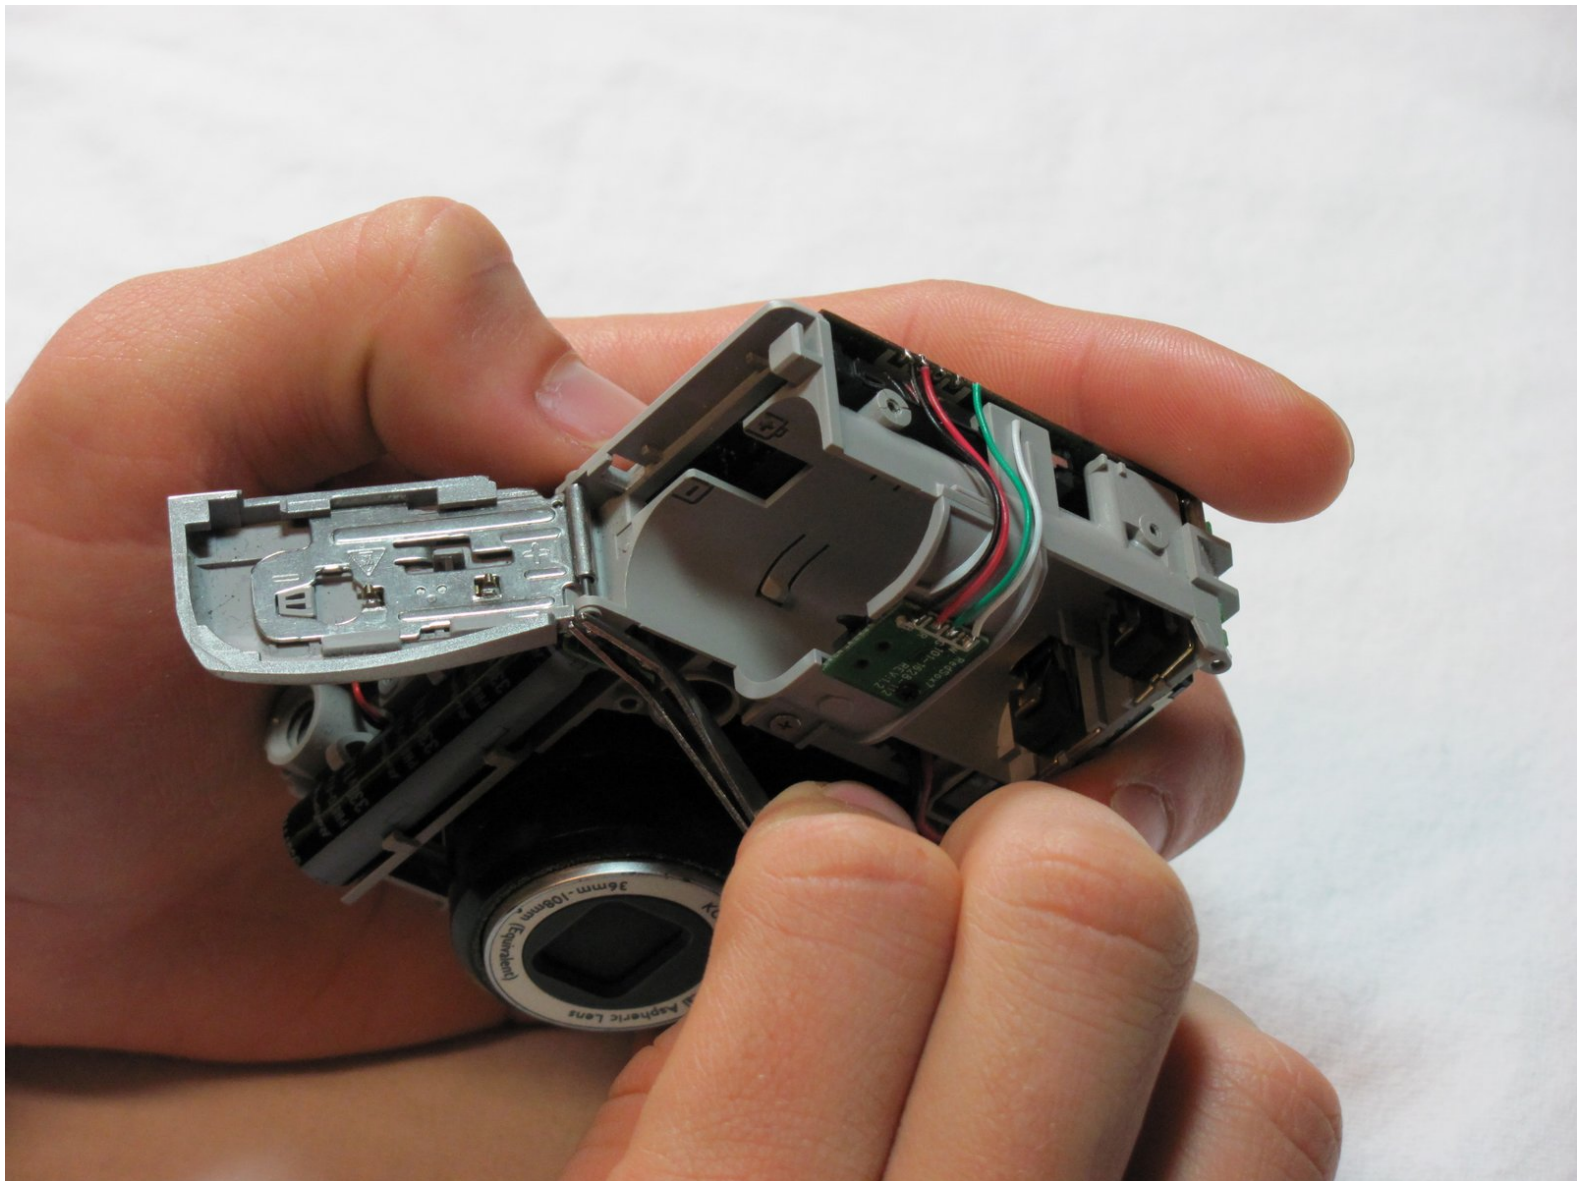

Kodak EasyShare C713 Battery Door Replacement

Written By: Trevor DeVore



INTRODUCTION

Use this guide to remove and replace the battery door.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

Step 2





- Remove the old batteries.

Step 3 — Outer Case





- Remove 7 screws from the outer case with a Phillips #00.
 - All screws are 4.45mm.
 - There are 2 screws on the port side.
 - There are 2 screws on starboard side.
 - There are 3 screws on the bottom.

Step 4

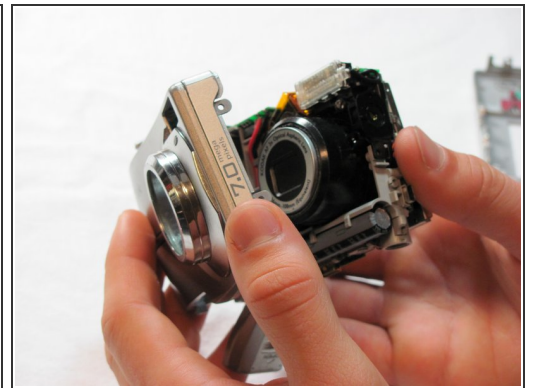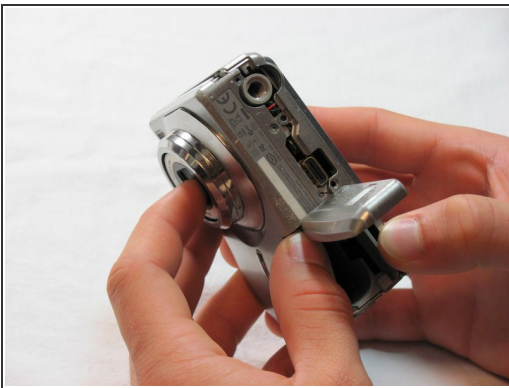

- ⚠ Make sure the battery cap is "up".
 - Pull the outer case off with your hands.

Step 5 — Battery Door

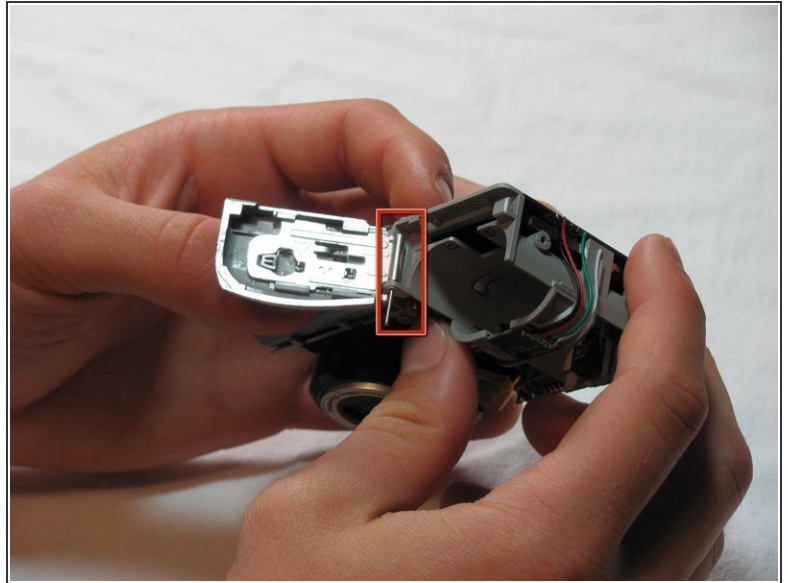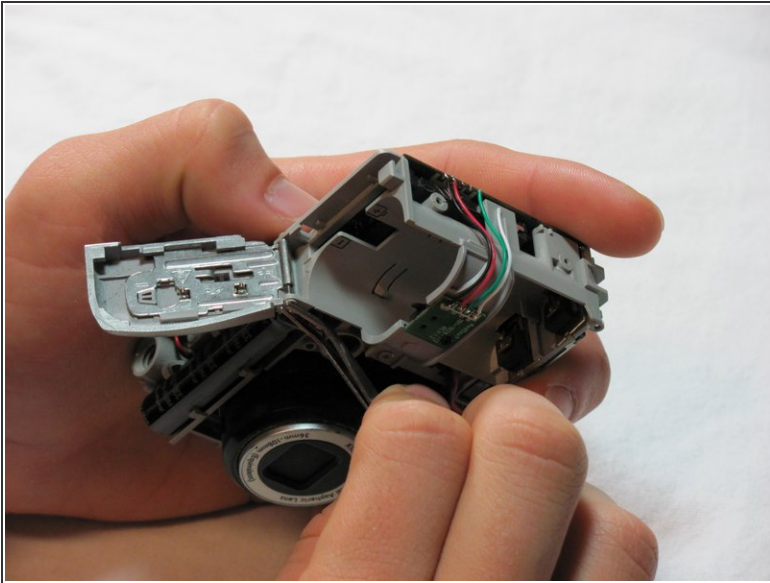

- Make sure the battery door is open.
- Using a pair of tweezers, remove the metal rod at the junction of the battery door and the inner camera case.
 - ⓘ This rod serves as the hinge for the door.
 - ⚠ Make sure not to lose the battery door spring which may fall when the rod is removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 06:43:56 PM.