



# Panasonic Toughbook CF-29 Optical Drive Replacement

Written By: Clint Kirsop



## **INTRODUCTION**

The purpose of this guide is to show how to properly remove the hard drive.

## Step 1 — Battery




- Locate the bay door for the battery on the left side of the laptop.

## Step 2




- Slide the latch to the right and then down to unlock it.
- Pull out the battery.

### Step 3 — Optical Drive

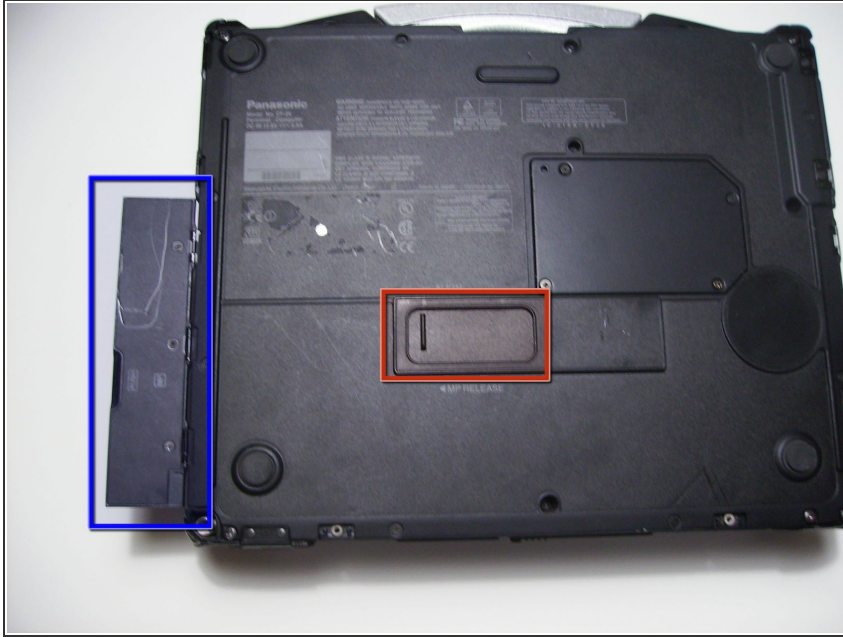

- Flip the device upside down with the handle facing away from you.
- Open the optical drive bay by sliding its latch to the right.
- Locate optical drive release mechanism on the bottom of the laptop.


### Step 4

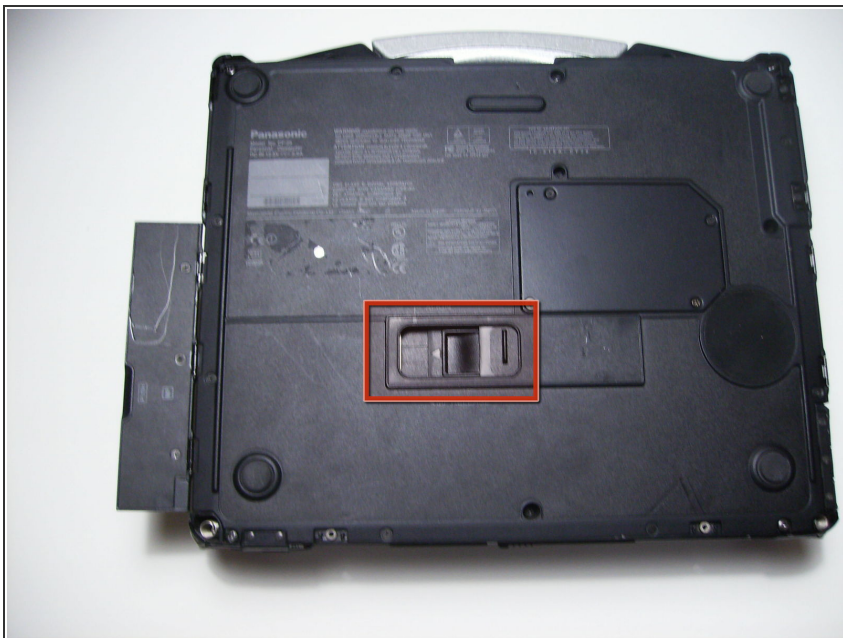

- Slide the latch cover to the right.



## Step 5

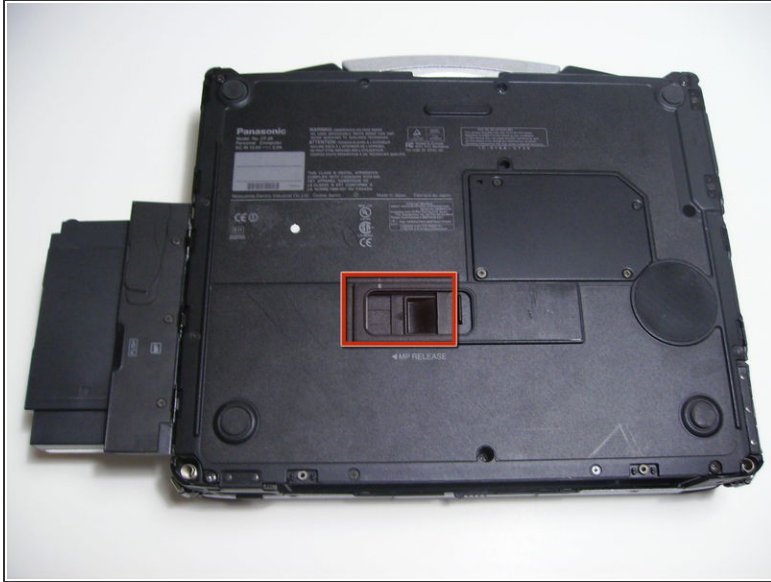

- Push the exposed switch to the left to eject the optical drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 04:08:26 PM.