



# Disassembling Nokia 6086 Upper Back Cover

Written By: Andrea



## INTRODUCTION

This guide is a step by step process to remove the inner back cover of the phone. It is a preliminary step, to gain access to the inside elements of the phone.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Turn off the phone.
- Check if there is a microSD card in the slot behind the door on the side. If so, remove it by first pushing it in, then pulling it out.
- Position the phone so that the back side is in view.

## Step 2

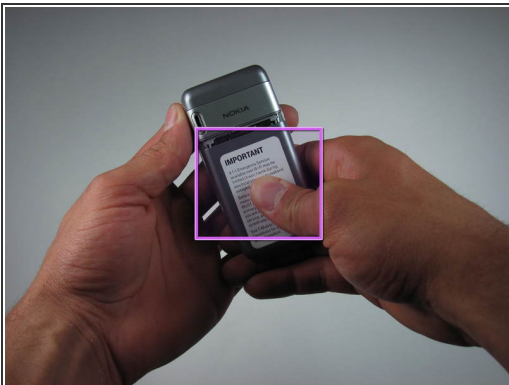

- Remove the back battery cover.
  - Apply pressure on the cover while simultaneously sliding the cover downward.

## Step 3



- Insert the iPod opening tool between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
  - ⓘ The battery lifts out of the phone fast and easily.
- Carefully lift the battery out of the phone.

## Step 4 — Upper Back Cover



- Turn the phone so that the back of the phone is facing forward.
- The picture to the left shows the location of the plastic tabs that attach to the upper cover of the phone.
  - ⓘ In this picture, the upper cover has already been removed.

## Step 5



- Place the iPod opening tool under the tabs near the top of the phone.
- Slide the iPod Opening Tool upwards.
  - This will pop the tabs and release the upper part of the phone.
- ⓘ Repeat for the left and the right sides.

## Step 6



- Place the iPod opening tool at the top area of the bottom section of the phone (indicated in picture).
  - Lift the iPod opening tool to pop open the clips.
    - This will release the upper back cover of the phone.
- i** Repeat for the left and the right sides.

## Step 7



- Push upward on the top back cover using two thumbs.
  - This will remove the top back cover from the phone.

To reassemble your device, follow these instructions in reverse order.

