



Panasonic Toughbook CF-29 Hard Drive Replacement

Written By: Clint Kirsop



INTRODUCTION

This guide will show you how to safely remove the hard drive from your laptop.

Step 1 — Battery



- Locate the bay door for the battery on the left side of the laptop.

Step 2



- Slide the latch to the right and then down to unlock it.
- Pull out the battery.

Step 3 — Hard Drive



- Locate the door for the hard drive on the right side of the laptop

Step 4



- Push and slide the latch up to open the hard drive door.
- Pull out the hard drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 05:23:05 PM.