



Panasonic Toughbook CF-29 Battery Replacement

Written By: Clint Kirsop



INTRODUCTION

This guide will show where to find, and how to remove the battery.

PARTS:

- [Panasonic Toughbook CF-28 Compatible Battery](#) (1)
-

Step 1 — Battery



- Locate the bay door for the battery on the left side of the laptop.

Step 2



- Slide the latch to the right and then down to unlock it.
- Pull out the battery.

To reassemble your device, follow these instructions in reverse order.

Many errors in this procedure. Any reference to battery here is actually pointing to the harddrive. Any reference to the harddrive is pointing to the battery. There is no seperate sound card in this computer. All references to the sound card is actually pointing the the wlan (wireless local area network) card.

This document was last generated on 2017-06-20 12:38:37 AM.