




Sanyo VPC-X1200 LCD Screen Replacement

Written By: Anthony Giardina

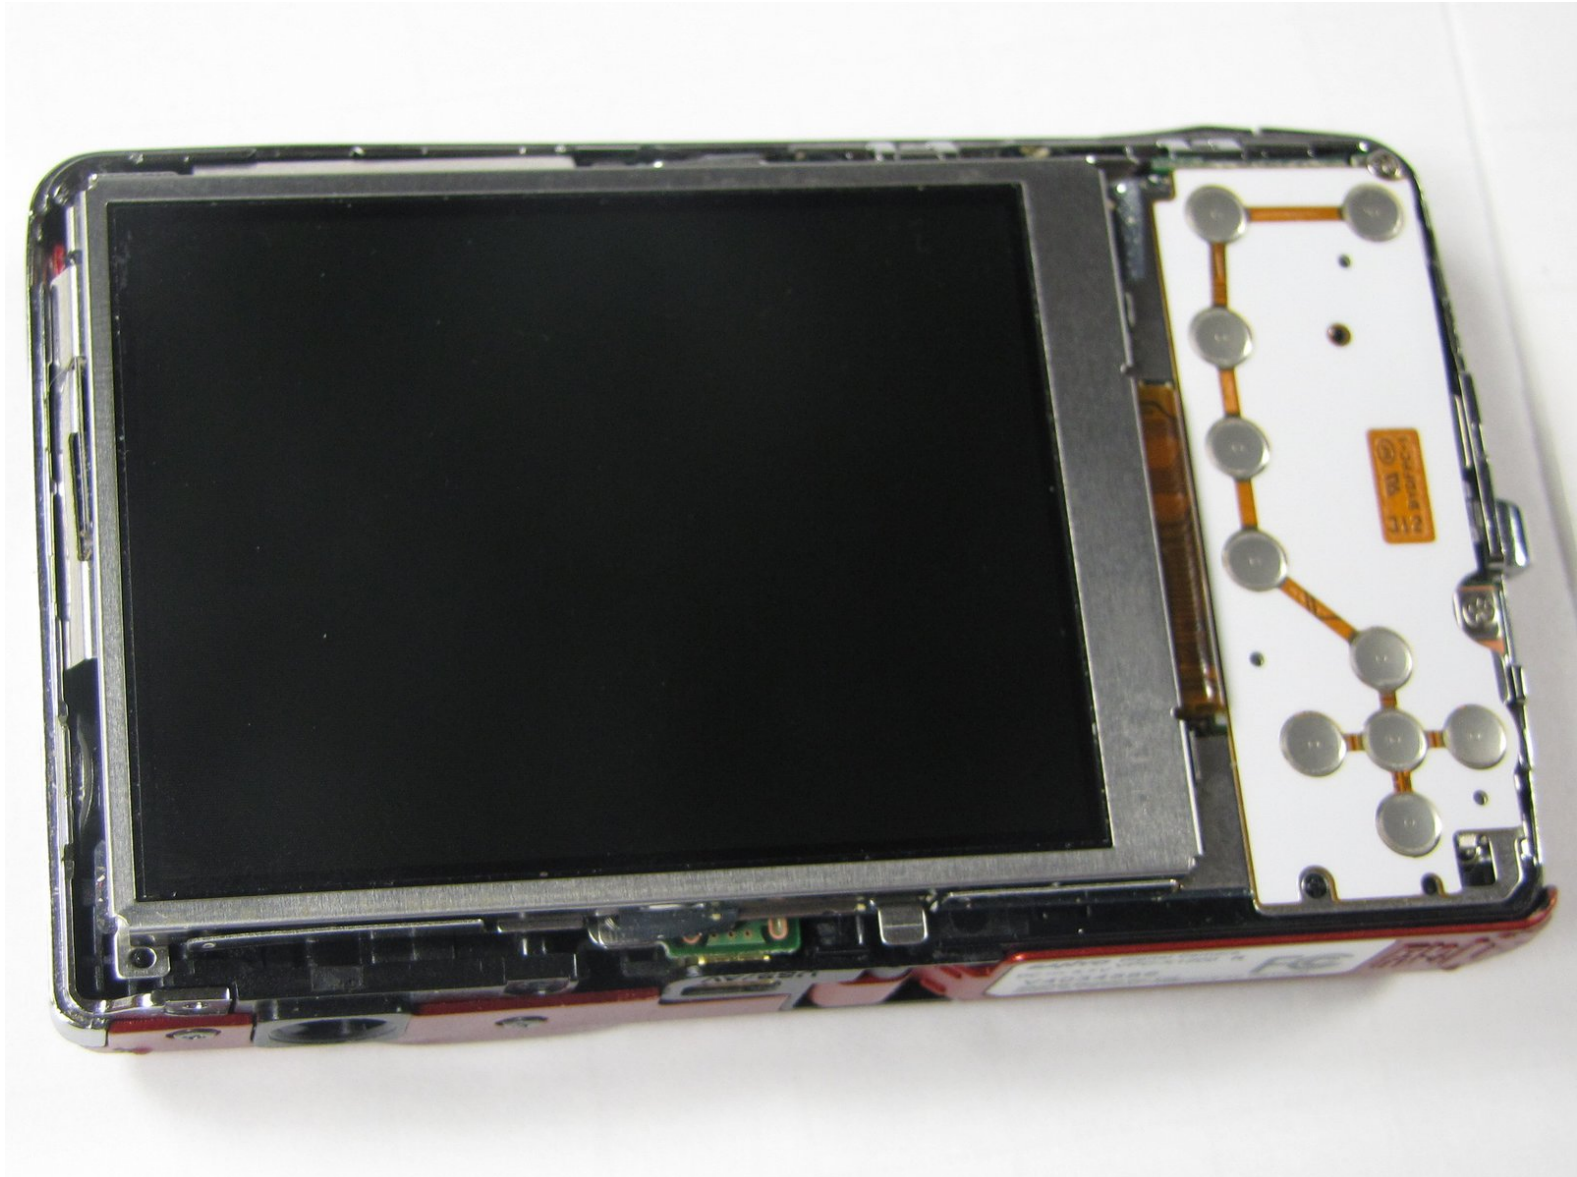

INTRODUCTION

This guide will help you remove and replace the LCD screen.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Case





- Remove the five case screws with a Phillips #00 Screwdriver.
- Five 3.5mm Phillips Screws

Step 2

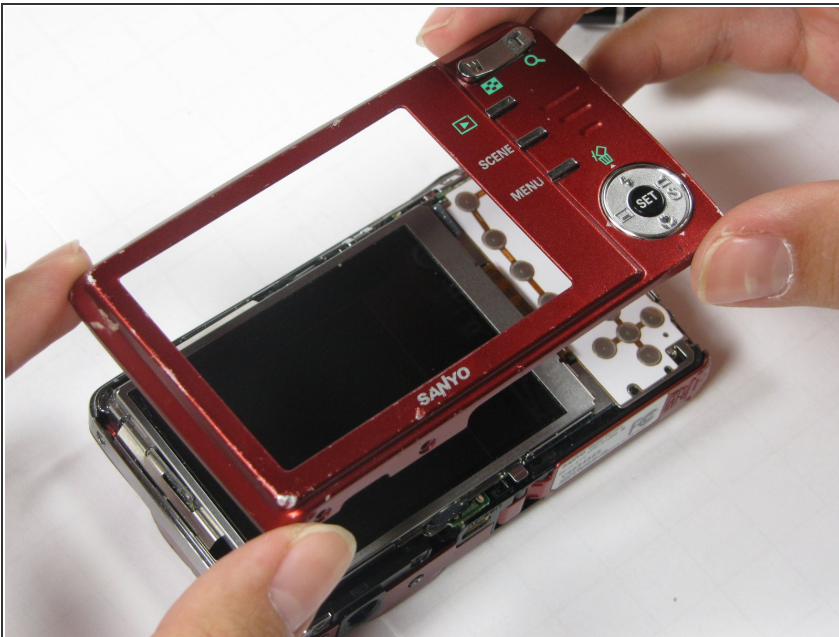

- Gently lift up the back cover and set aside.


Step 3 — LCD Screen

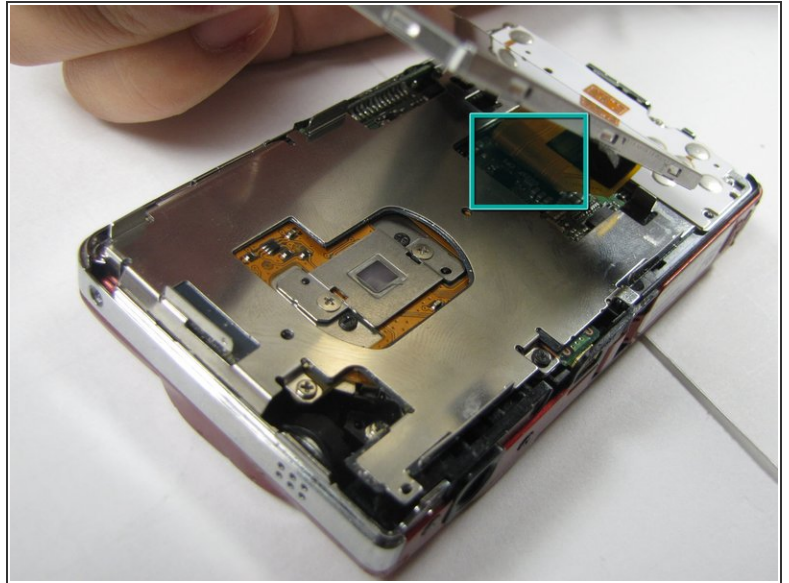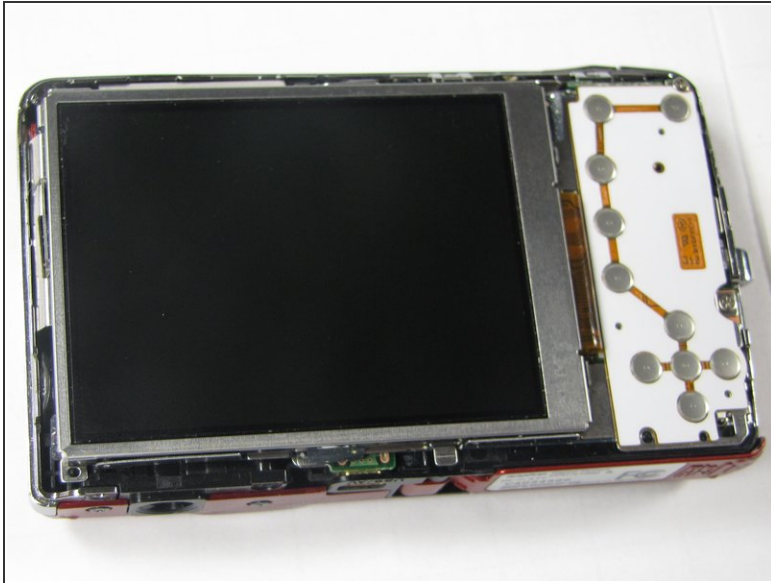

- Gently lift up on the left side of the LCD and slowly pull it to the left side of the camera but do not remove entirely, there is a ribbon connector.

⚠ Be careful not to rip out the ribbon connector.

Step 4

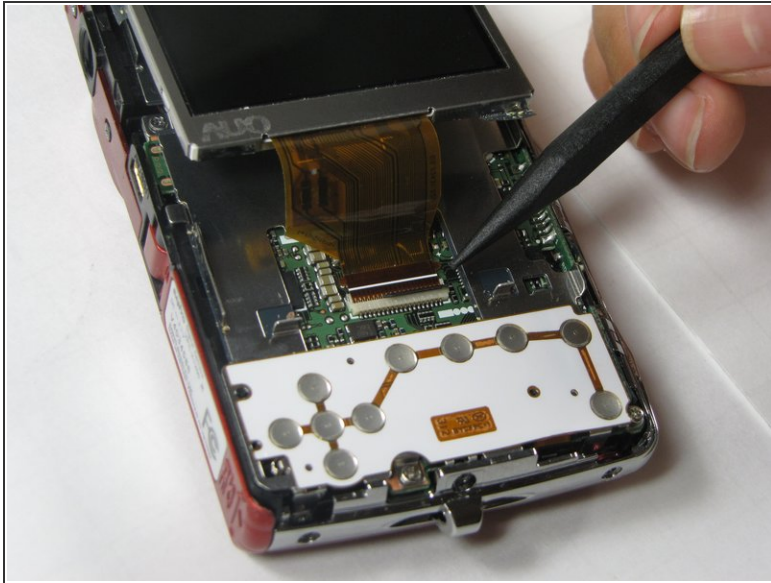

- To clear the ribbon connection underneath the screen, lift up the black ribbon gate with the spudger.
- Gently lift ribbon out of the gate and set screen aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-26 04:12:16 PM.