




Onkyo TX-800 Power fuse Replacement

Follow this guide to replace the power fuse of the Onkyo TX-800.

Written By: Michael Lady

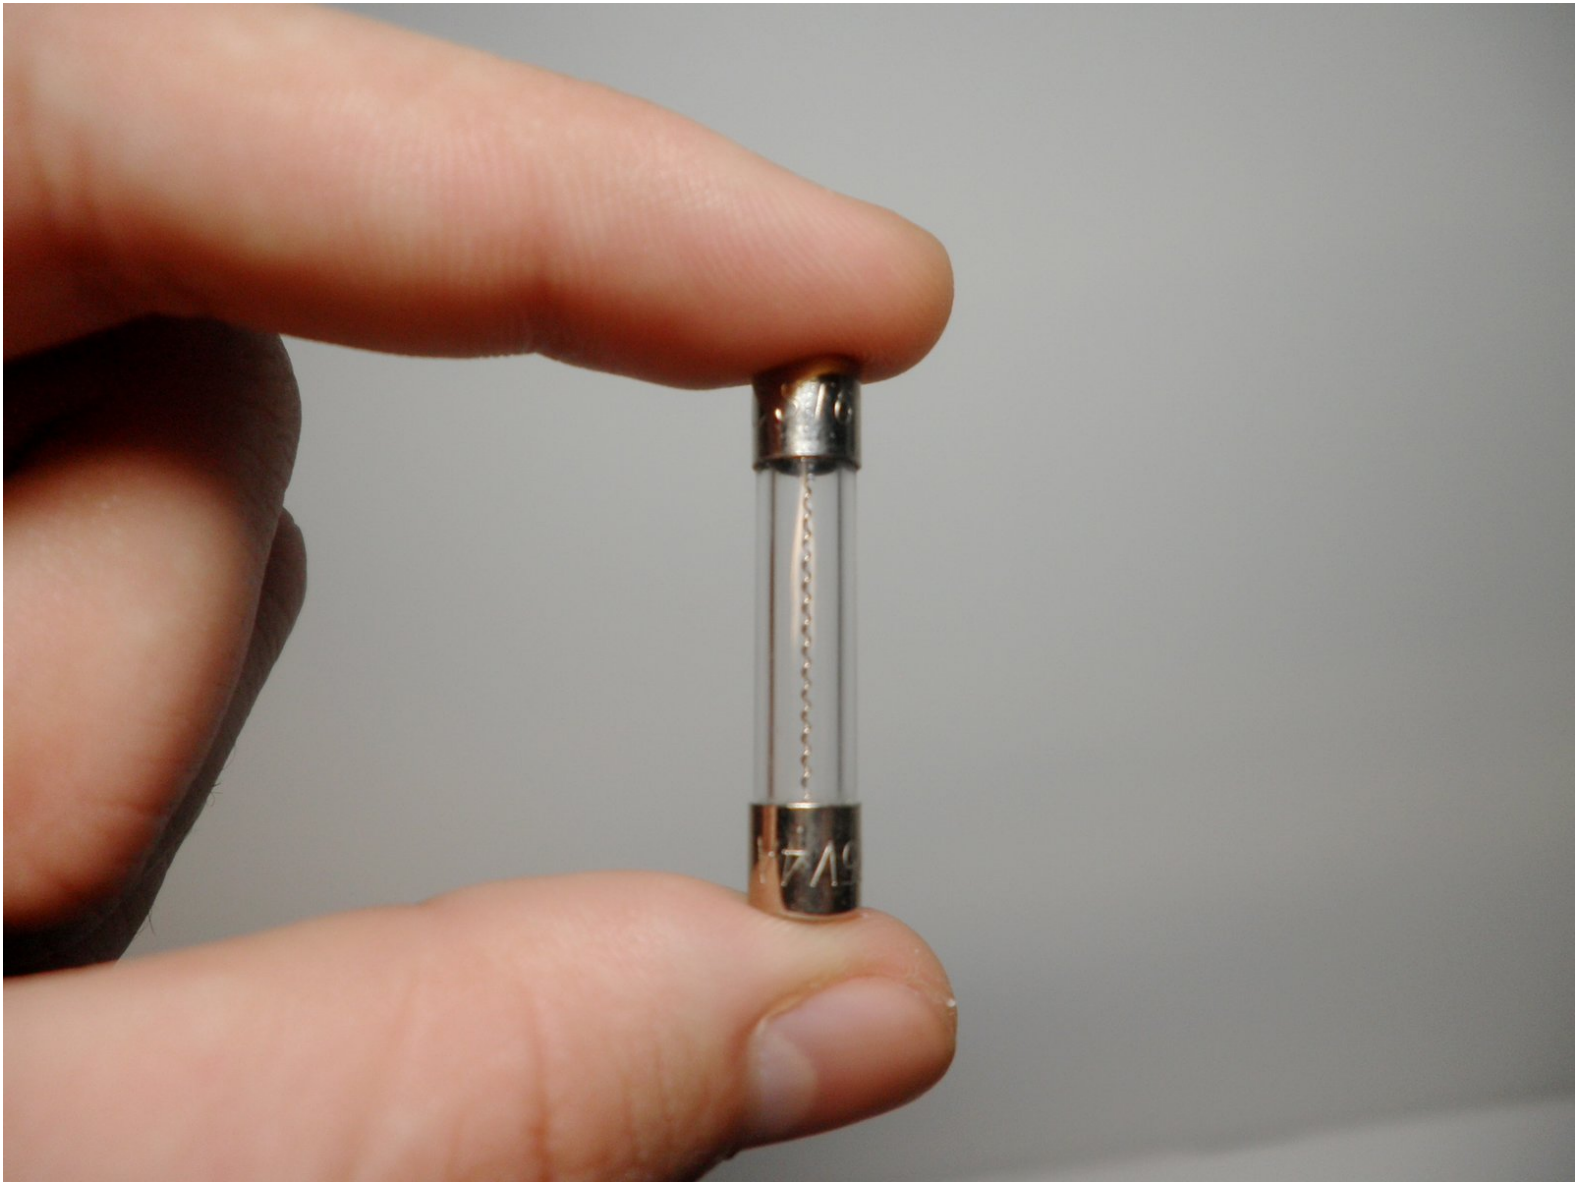

INTRODUCTION

This replacement guide will demonstrate how to replace a fuse in an Onkyo TX-800.

A fuse is an electrical safety device that protects the circuit board in the event that there is excessive current.

Before doing anything, make sure to safely discharge the capacitor using [this guide](#).



TOOLS:

- Phillips #0 Screwdriver (1)
- Phillips #00 Screwdriver (1)



PARTS:

- Fuse - 125 Volt, 4 Amp (1)

Step 1 — Disassembling Onkyo TX-800 Top case



- Remove the two screws on both sides of the receiver. Keep these and the rest of the screws in a safe place.

Step 2





- Remove the top screw on the back panel.

Step 3





- Slide off the case to expose the internal components of the receiver.

Step 4 — Power fuse

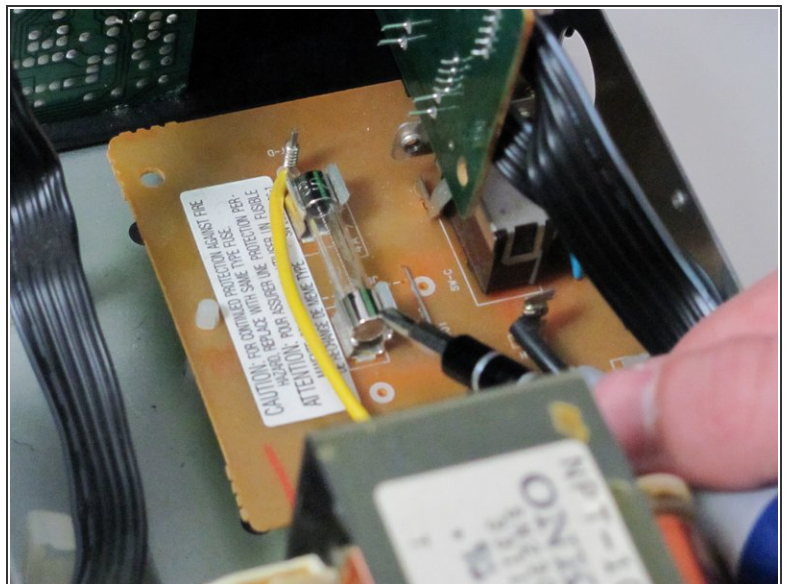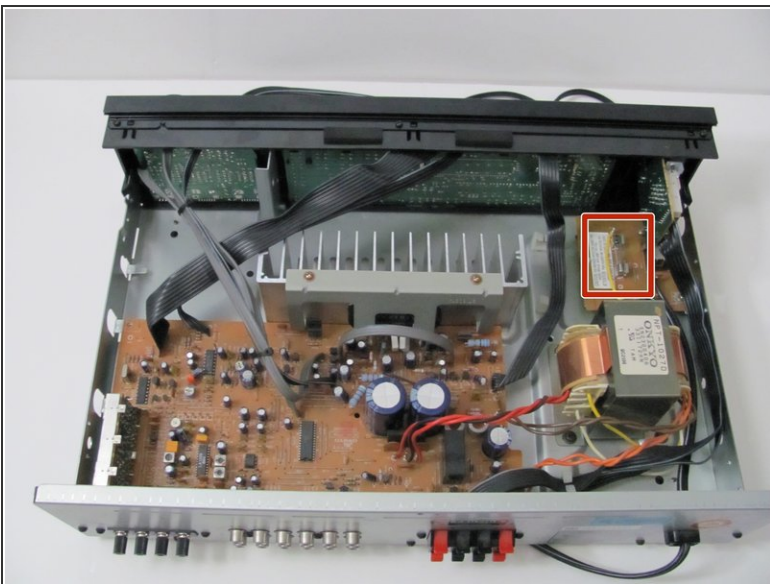


- Locate the fuse.

Step 5

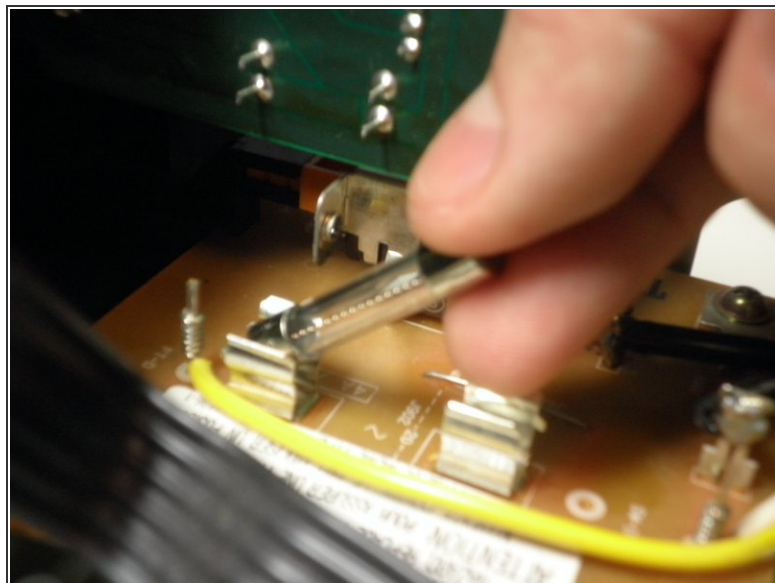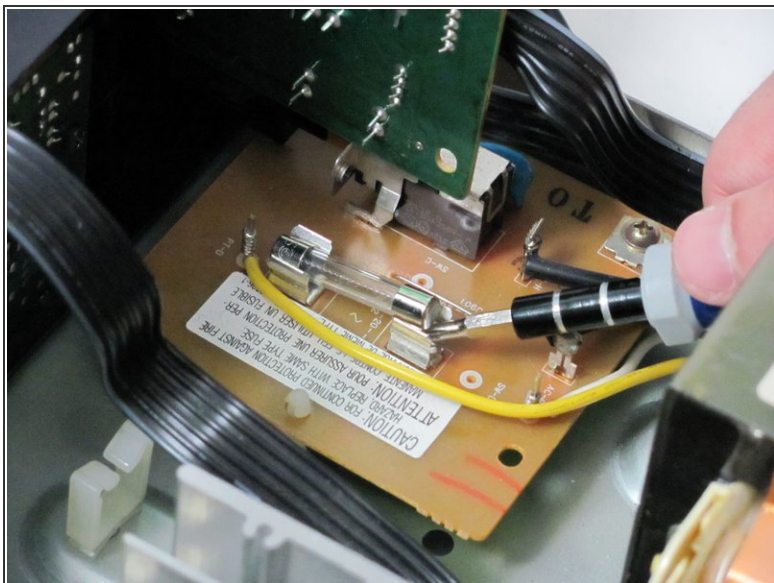

- Gently wedge a small screwdriver in between one side of the fuse and the contact.
- Remove the fuse with your thumb and forefinger.

Step 6

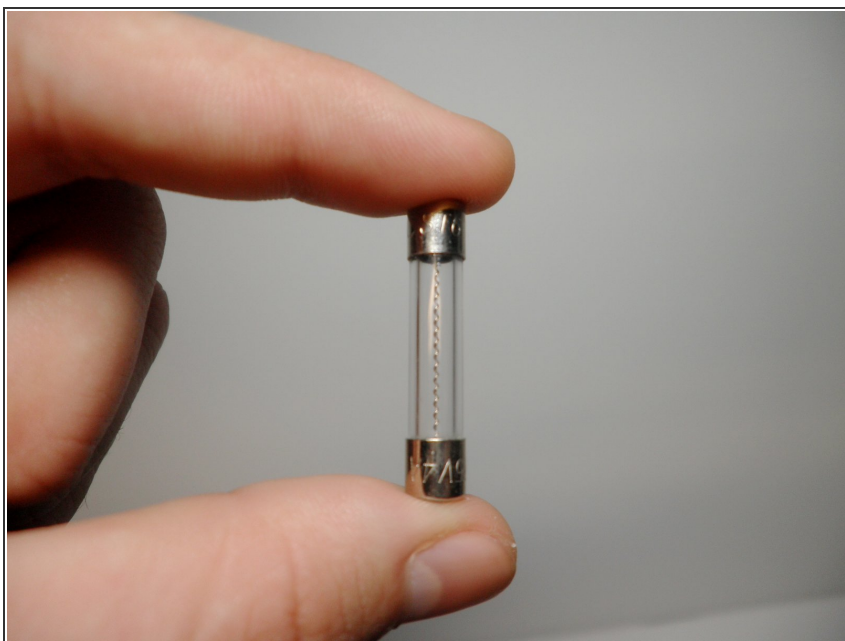

- Examine the fuse. If the wire within it is broken, you will need to replace it with a new [125 Volt, 4 Amp fuse](#).

