



Acer Iconia B1-710 / B1-711 - Soft Reset

Acer Iconia B1-711 / 710 - Soft Reset

Written By: ZFix



acer
Iconia B1-711

soft reset

INTRODUCTION

This solution will help you if your tablet freezes (malfunctioning applications). The reset switch hole is over the Power button. Be careful, don't confuse it with the microphone hole.


The software reset closes applications and clears any data in RAM. Unsaved data in current use may be lost but data stored on the storage, applications and settings are not affected.

If this doesn't help you, then you must do a hardware reset.

[Please SUBSCRIBE to my channel ツ](#)

[video: http://youtu.be/OFZSj_W4p8U]

Step 1 — Acer Iconia B1-710 / B1-711 - Soft Reset

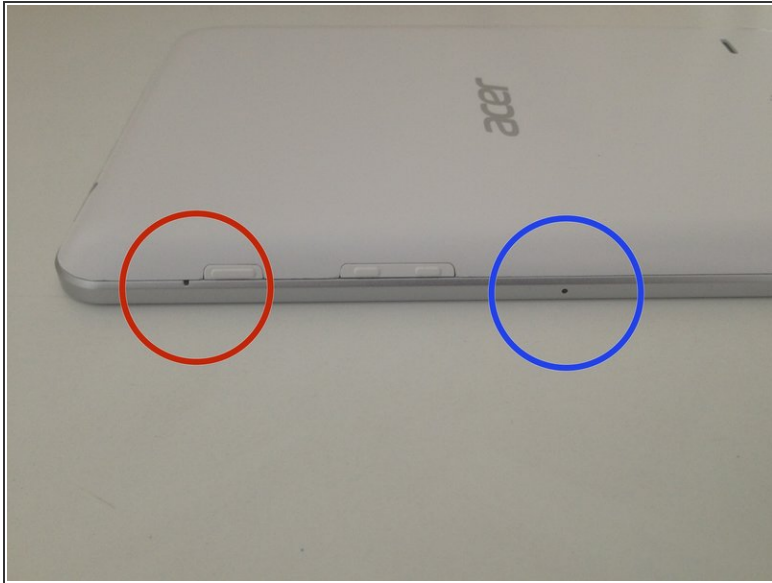

● Reset Switch Hole

● Microphone Hole

● .

 [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.