




Toshiba Satellite M45 Wi-Fi Card Replacement

Written By: Sophie Schneider

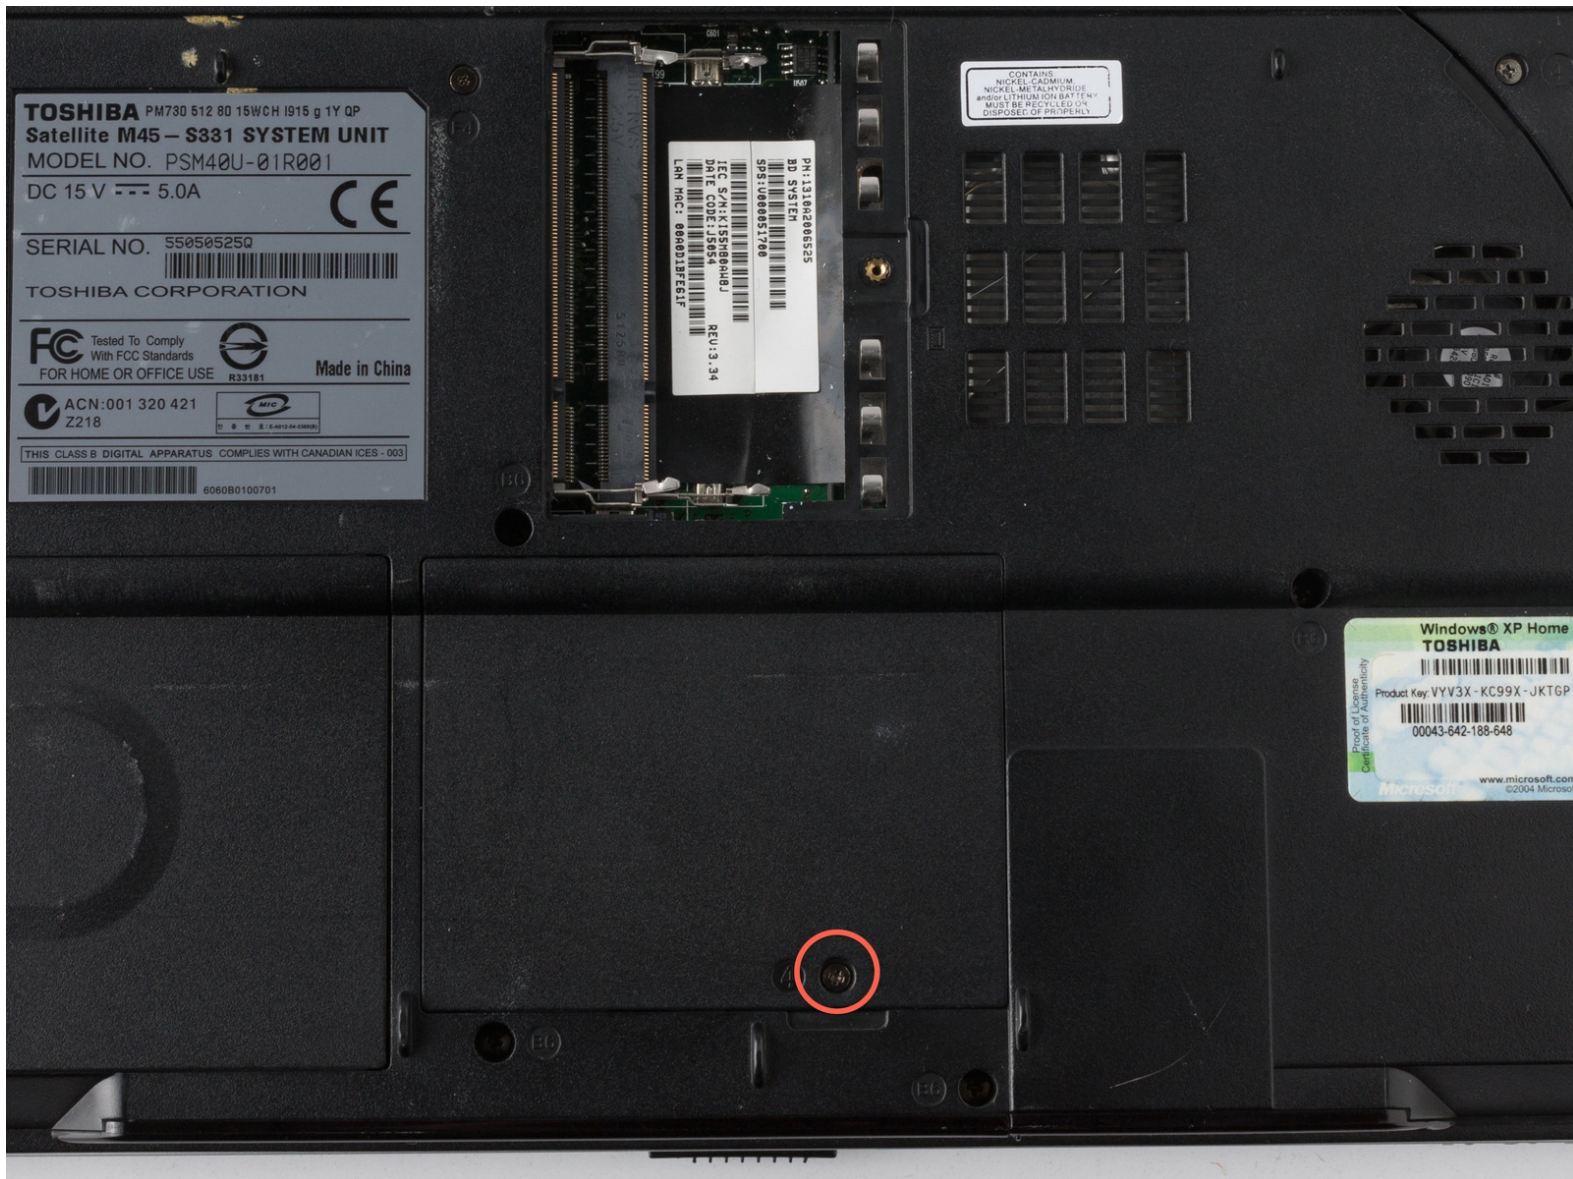

INTRODUCTION

Learn to replace your wifi card.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Wi-Fi Card



- Remove the panel screw labeled with a #1 Phillips head screwdriver as indicated in the picture, then use a flat edge tool to pry the cover off.
- The hardware to the left (labeled) can be easily removed by disconnecting the black and white wires and pushing the tabs that secure it (located on the side) outwards.
- Pull the Wi-Fi card out from the device at a slight angle (horizontal with the casing).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 03:36:35 PM.