




# MacBook Core Duo Memory Cover Replacement

MacBook Core Duo memory cover replacement.

Written By: iRobot

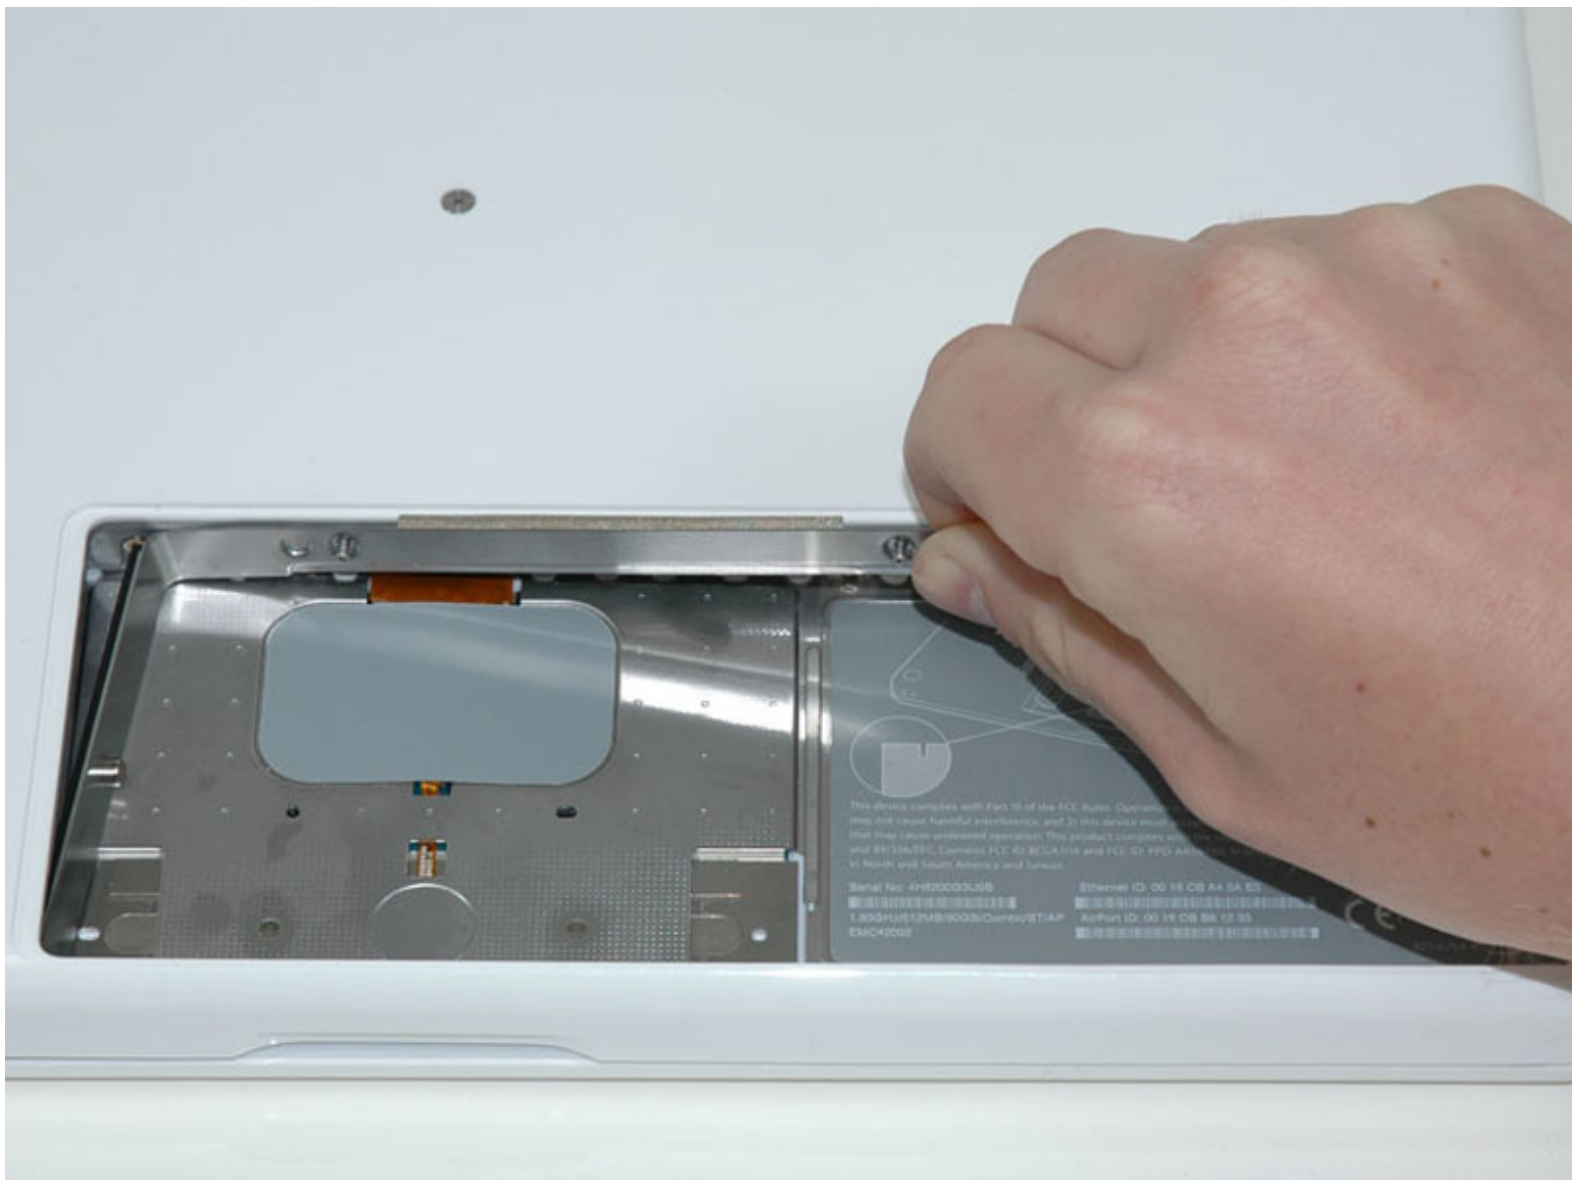

## INTRODUCTION

This cover keeps the RAM levers out of the way of the battery and secures the hard drive. If you got a little overzealous and broke yours, here's how to replace it.

---



### TOOLS:


- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [MacBook Memory Cover](#) (1)
-

## Step 1 — Battery

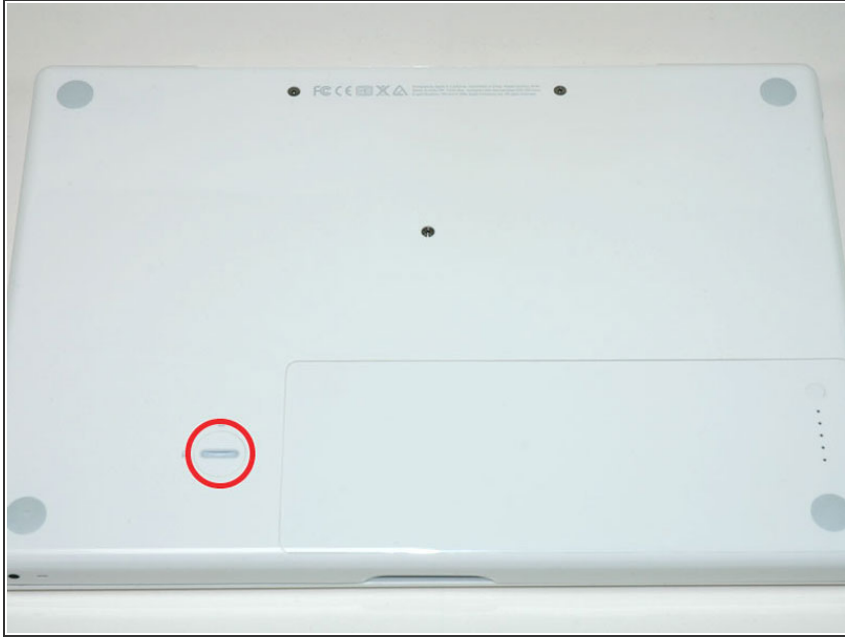


- Use a coin or spudger to rotate the battery-locking screw 90 degrees clockwise.

## Step 2




- Lift the battery out of the computer.

### Step 3 — Memory Cover

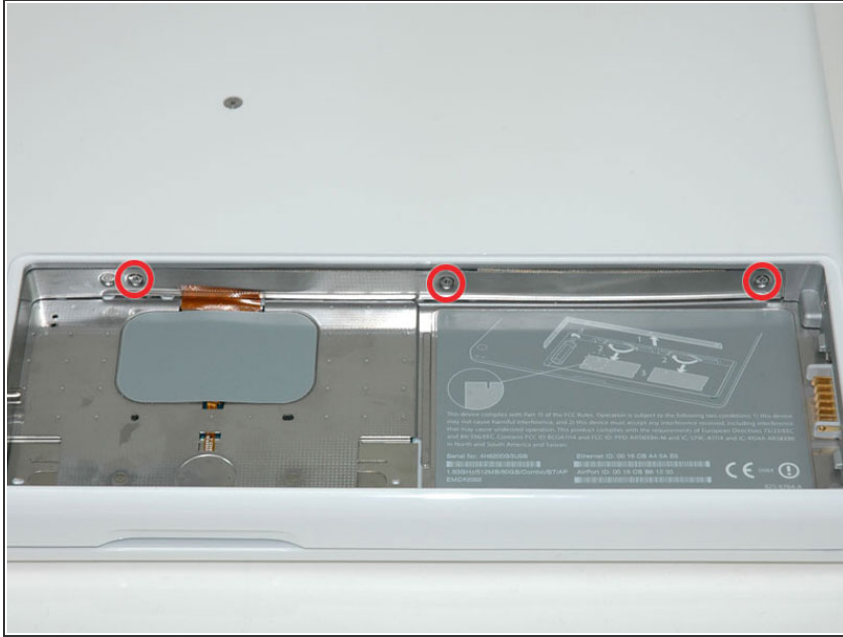

- Remove the three evenly-spaced Phillips screws from along the rear wall of the battery compartment.
- ☑ The screws are captive to the metal memory cover.
- ☑ When replacing the battery casing, use a spudger to re-insert the foam cushioning behind the rear wall for proper battery spacing.

### Step 4

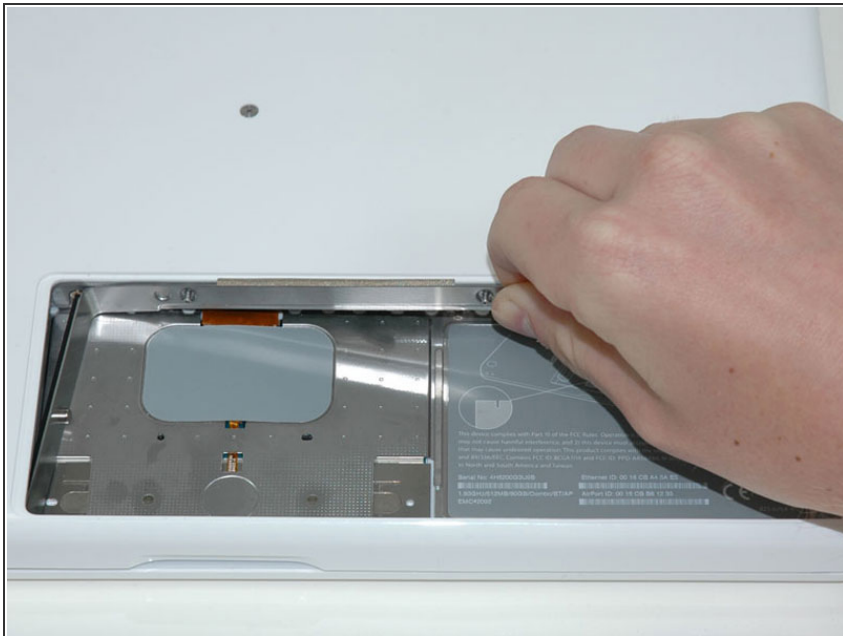

- Lift up on L-shaped memory cover, slide it to the right, and lift it out of the computer.

To reassemble your device, follow these instructions in reverse order.