




# MacBook Core Duo RAM Replacement

MacBook Core Duo RAM upgrade or replacement.

Written By: iRobot

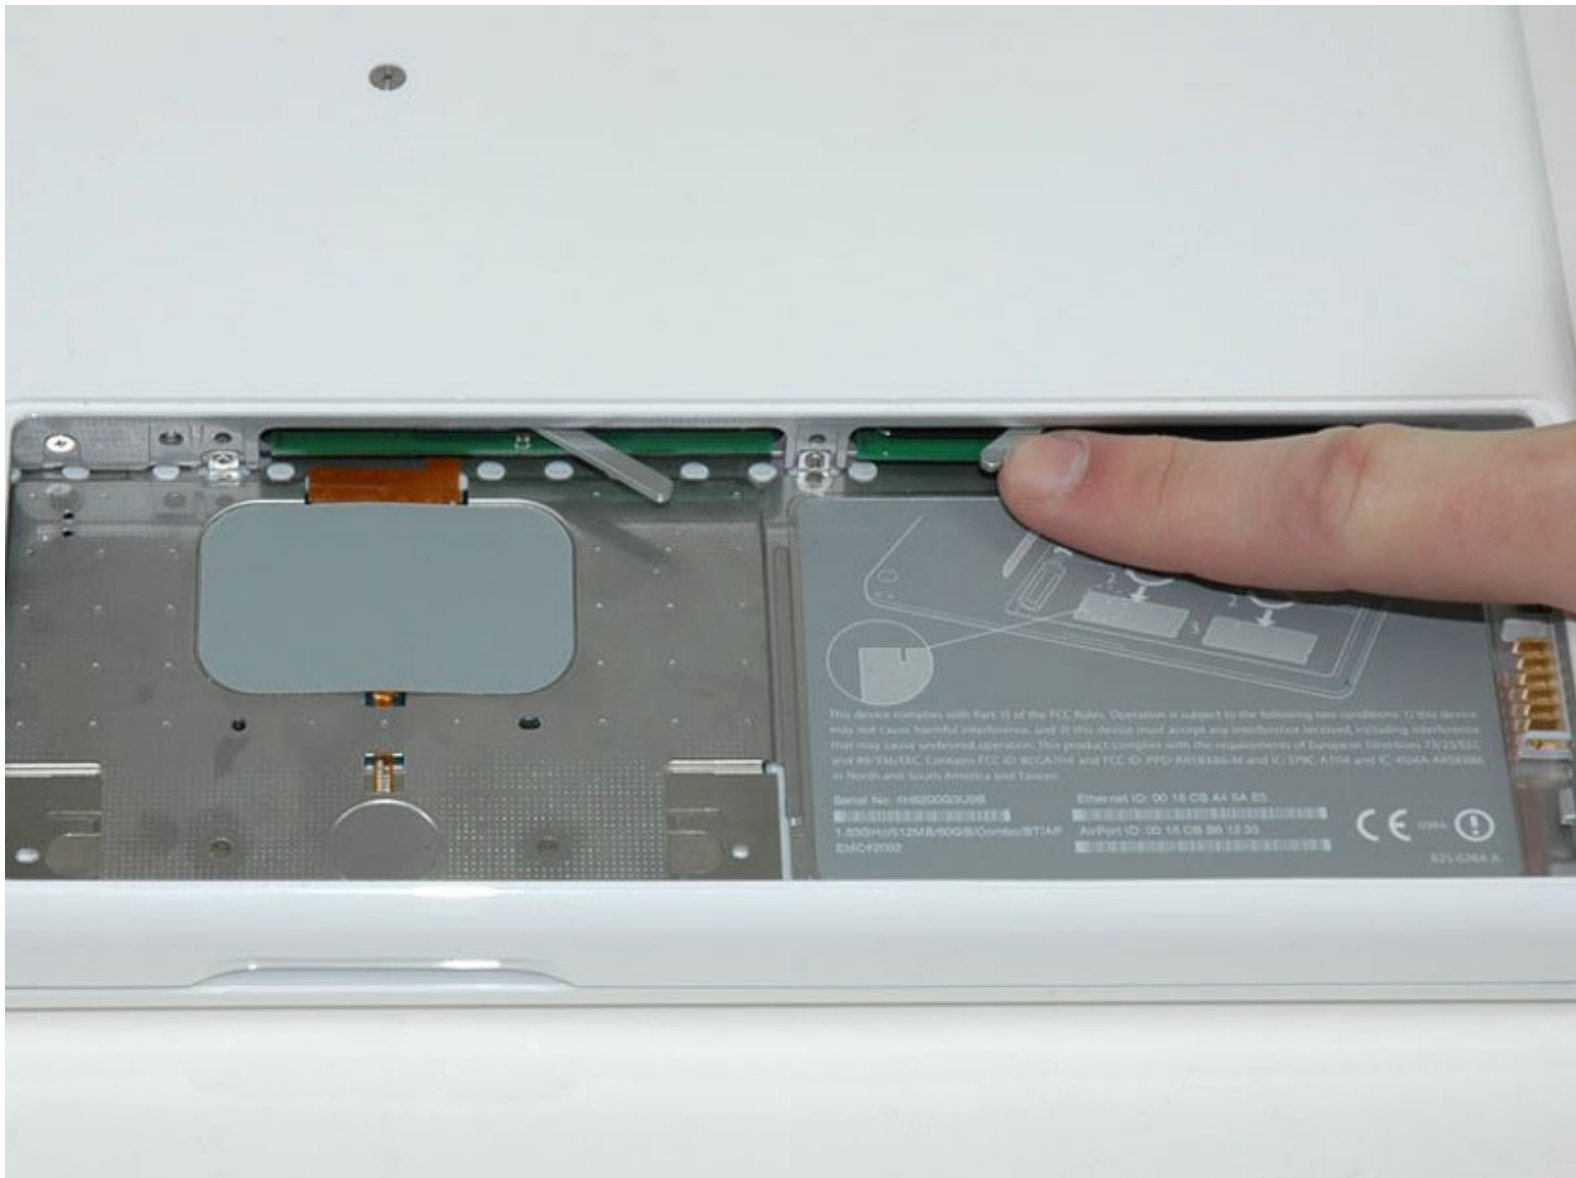

## INTRODUCTION

Accessing the RAM in this computer is straightforward and requires minimal disassembly. Two RAM slots allow up to 2 GB of PC2-5300 RAM.

### TOOLS:

- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)

### PARTS:


- [MacBook 13" Core Duo Memory Maxxer RAM Upgrade Kit](#) (1)
- [PC2-5300 1 GB RAM Chip](#) (1)
- [PC2-5300 512 MB RAM Chip](#) (1)

## Step 1 — Battery




- Use a coin or spudger to rotate the battery-locking screw 90 degrees clockwise.

## Step 2

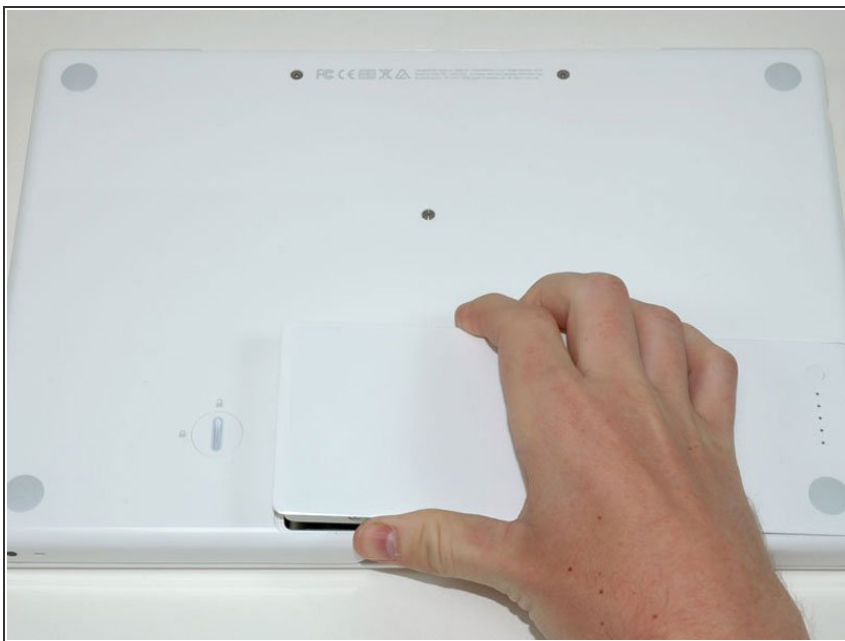


- Lift the battery out of the computer.

### Step 3 — Memory Cover

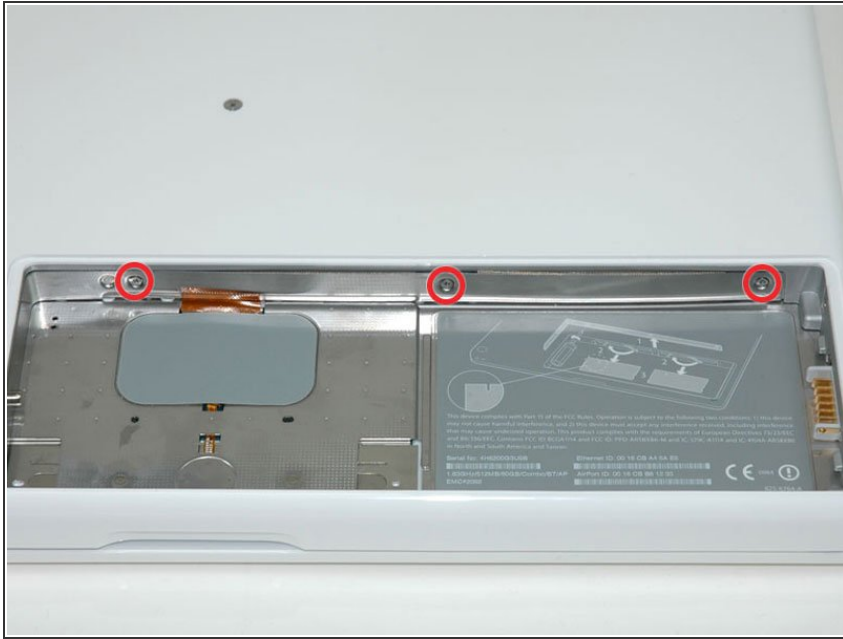


- Remove the three evenly-spaced Phillips screws from along the rear wall of the battery compartment.
- ☑ The screws are captive to the metal memory cover.
- ☑ When replacing the battery casing, use a spudger to re-insert the foam cushioning behind the rear wall for proper battery spacing.

### Step 4

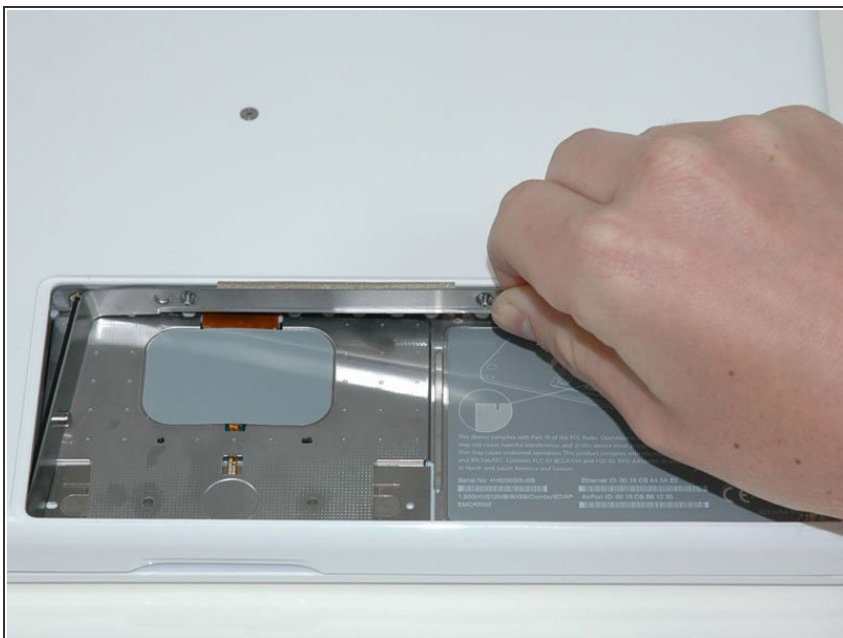

- Lift up on L-shaped memory cover, slide it to the right, and lift it out of the computer.

## Step 5 — RAM

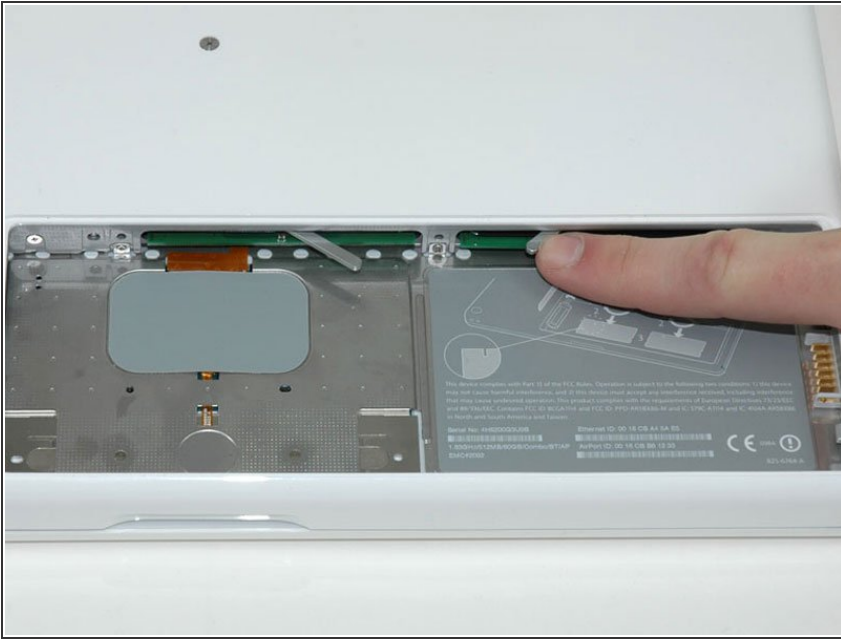

- In one swift but careful motion, flick the levers to the left and slide the RAM chip out from its compartment.
- ⓘ Unlike the iBook line, the MacBook has two RAM slots, which allows for up to 2 GBs of memory.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-14 03:03:32 PM.