




LG LX150 Front Cover Replacement

Written By: Tye Barba

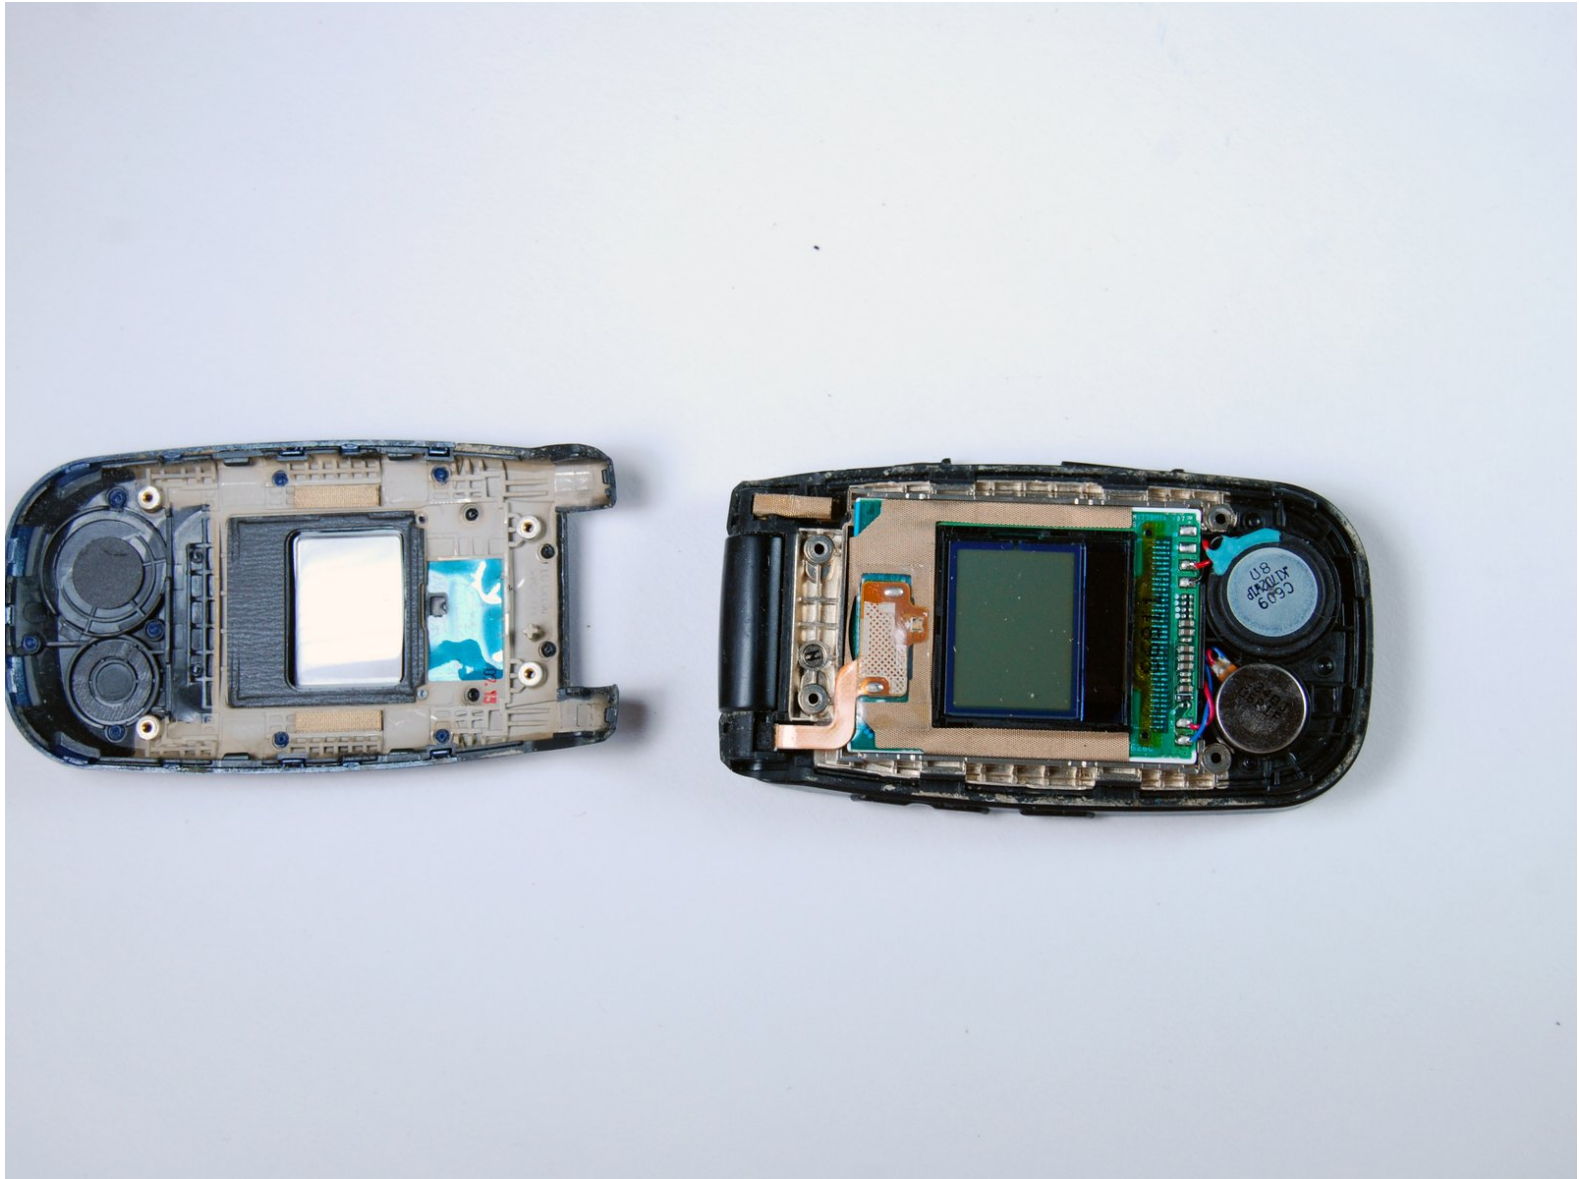


INTRODUCTION

Use this guide to remove the LG LX150's front cover.

TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front Cover

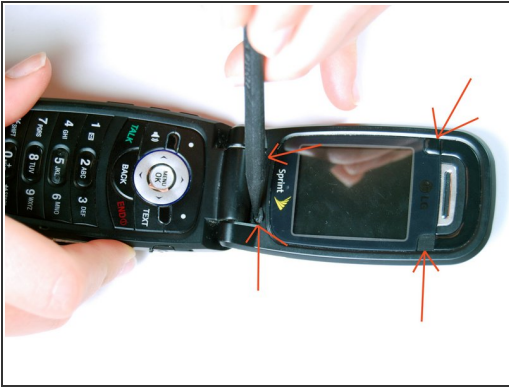

- Use the spudger to pry out the indicated rubber squares.
- Use the #0 Phillips screwdriver to take out the revealed screws.

Step 2

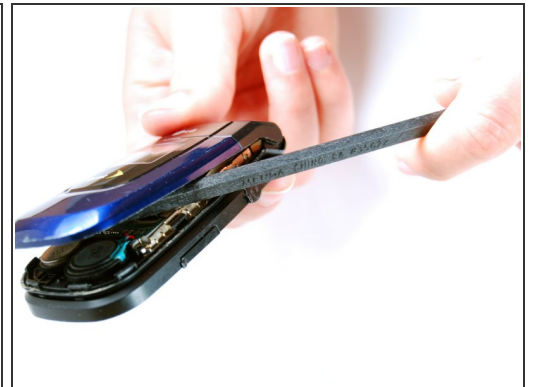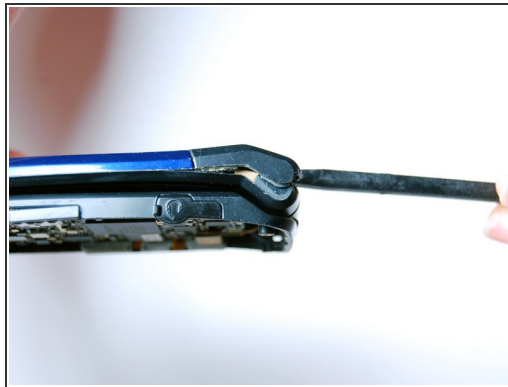

- Carefully lodge the spudger between the face plate and the hinge mechanism.
- Gently pry the face plate until it releases from place holders.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-25 06:18:17 PM.