



Disassembling FujiFilm FinePix A340 Outer Case

Written By: Cody



INTRODUCTION

Removing the outer case of the camera.

TOOLS:

- [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Outer Case




- Remove the batteries from the camera to prevent danger of electric shock.

Step 2



- Locate all five screws on the camera. Then proceed to remove all the screws.



Step 3

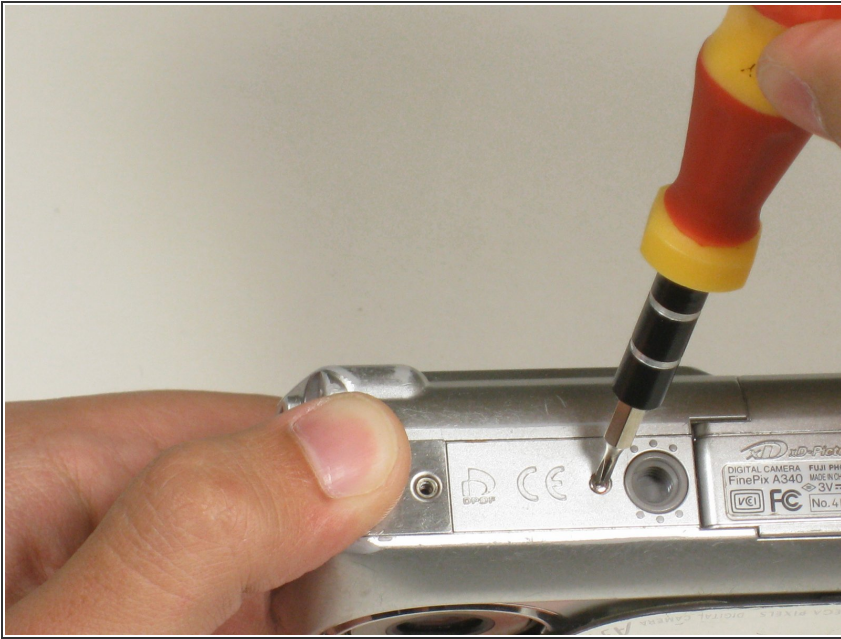

⚠ Beware, if your screwdriver does not fit properly, you may damage the screws' heads.

- If your screwdriver does not fit, or you do not have the proper one, you can use a hot glue gun to fix the screwdriver to the head of the screw. Wait for it to harden slightly, and then try to remove the screws.

Step 4

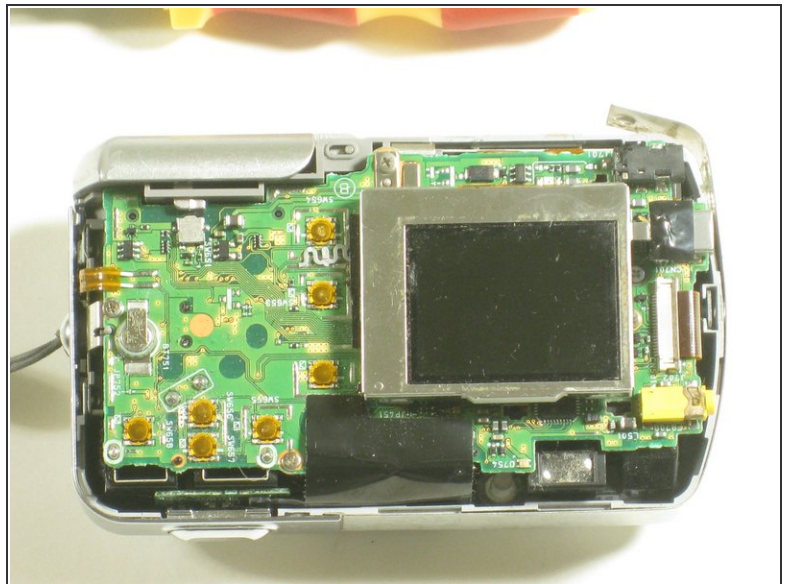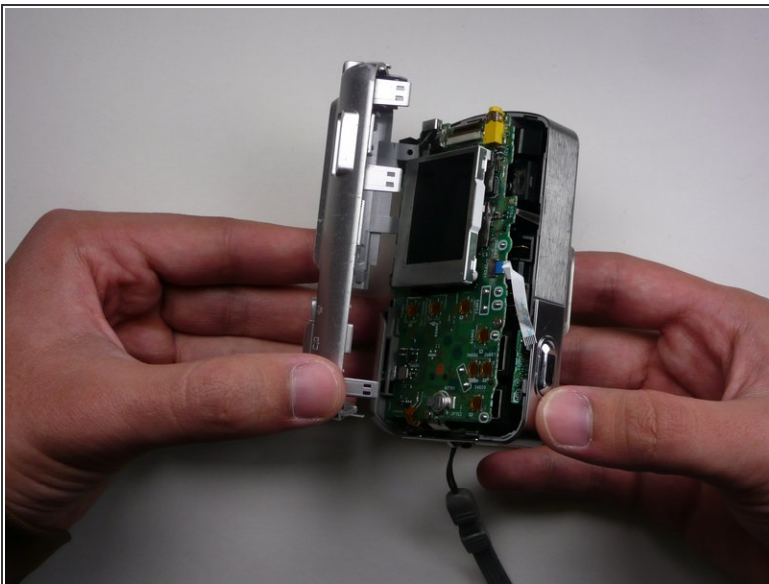

- Remove outer case. Pull the back away from the main body of the camera.

To reassemble your device, follow these instructions in reverse order.