



iPhone 6 Pentalobe Screws Replacement

Replace the Pentalobe Screws in the iPhone 6.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace the Pentalobe screws.



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)




PARTS:

- [iPhone 6 6 Plus Bottom Screws](#) (1)

Step 1 — Pentalobe Screws



 Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm-long Pentalobe screws next to the Lightning connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 09:16:22 PM.