



iPhone 6 SIM Card Replacement

Replace the SIM Card in the iPhone 6.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace the SIM card.

TOOLS:

- [SIM Card Eject Tool](#) (1)
-

Step 1 — SIM Card



- Insert a SIM card ejector tool or a paperclip into the small hole in the SIM card tray.
 - Press to eject the tray.
- i** This may require a significant amount of force.

Step 2



- Remove the SIM card tray assembly from the iPhone.
- When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.