



Nikon D3200 Battery Replacement

Follow this guide to replace the battery for the Nikon D3200 camera.

Written By: Irene Huang



INTRODUCTION

Make sure your battery is fully charged and it's the correct model if you have purchased a new battery. The battery should be an EN-EL14a Rechargeable Li-ion Battery or EN-EL14 Rechargeable Li-ion Battery.

Step 1 — Battery



- Locate the battery compartment on the bottom of the camera directly below the mode dial.

Step 2



- Find the marked arrow on the battery compartment door and firmly push following the arrow's direction to release the latch.

Step 3



- Release the latch and allow it to completely open.
- Insert the battery by following the diagram on the inside of the compartment door.
- Close the compartment door and firmly press on the latch until you hear a clicking sound.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-26 02:16:55 AM.