



iMac Intel 27" Retina 5K Display RAM Replacement

Replace the RAM in your iMac Intel 27" Retina 5K Display.

Written By: Sam Goldheart



INTRODUCTION

Use this guide to remove, replace or upgrade the RAM in your iMac Intel 27" Retina 5K Display.

TOOLS:

- Spudger (1)

PARTS:

- iMac Intel 27" EMC 2806 (Late 2014 and Mid 2015, 5K Display) Memory Maxxer RAM Upgrade Kit (1)
- iMac Intel 27" EMC 2834 (Late 2015, 5K Display) Memory Maxxer RAM Upgrade Kit (1)
- PC3-14900 16 GB RAM Chip (1)

Step 1 — RAM



- While holding the display steady, use the flat end of a spudger to press in on the RAM door release button, located just above the power port.
- ⓘ You may have to press fairly hard—keep at it until the bottom of the door pops out about 0.25" from the rear of the iMac.

Step 2



- Pull the RAM access door off the back of the iMac.

Step 3



i The RAM tray is locked into its upright position with two grey tabs.

- Use your thumbs or index fingers to unlock the tray by pushing the tabs outward, away from the RAM.
- Pull the tabs out and down, swinging the RAM tray down to a near-horizontal position.

Step 4



- Remove a stick of RAM by grabbing it with two hands and pulling straight out of the RAM tray.
- ⚠** RAM modules are keyed so that they can only be installed in the proper orientation. Note where the shorter section of contacts is when removing, and reinstalling, your RAM.
- To install a new module, insert the module into the desired slot in the tray and press it firmly in place. Push the tray back up until it locks in place.
- Re-insert the RAM access door back into its place.

This document was last generated on 2019-07-11 03:39:24 AM.