



Polaroid Onestep Close Up Face Plate Replacement

Prerequisite only

Written By: Tyler OBrien



INTRODUCTION

This guide will show how to remove the face plate, which is necessary to exposing the internal components.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Flash Assembly Removal



- Begin by opening the top of the camera (flash assembly) to a slight angle.
 - Next, angle the flash assembly slightly upward and pry off the connections carefully.
- ⚠ Be careful not to damage the ribbon cable. This is essential to the operation of the flash.

Step 2 — Opening Film Tray



- Slide the action button, on the bottom of the camera, to open the bottom.

Step 3 — Removing Face Plate



- Insert the blue plastic opening tool between the rear case and the plastic tabs directly under the shelf, and pry it loose.
- Pull off the face plate.

To reassemble your device, follow these instructions in reverse order.