



Air Blasters Tek Six Trigger Replacement

Replace the trigger of your Air Blasters Tek Six in case it does not work properly.

Written By: Alfredo Antolinez



INTRODUCTION

The trigger is the starting mechanism to shoot the darts from your blaster. You must be careful not to harm other parts of the blaster while taking out the trigger.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove screw of the grey slider




- Using a screwdriver, remove the two 11.6 mm phillips 00 screws holding the grey slider together.
- Remove grey slider from the main body of the blaster.

Step 2 — Remove screws in main body



- Using a screwdriver, remove the six 9 mm phillips 00 screws holding the main body together.

Step 3 — Take the main body apart

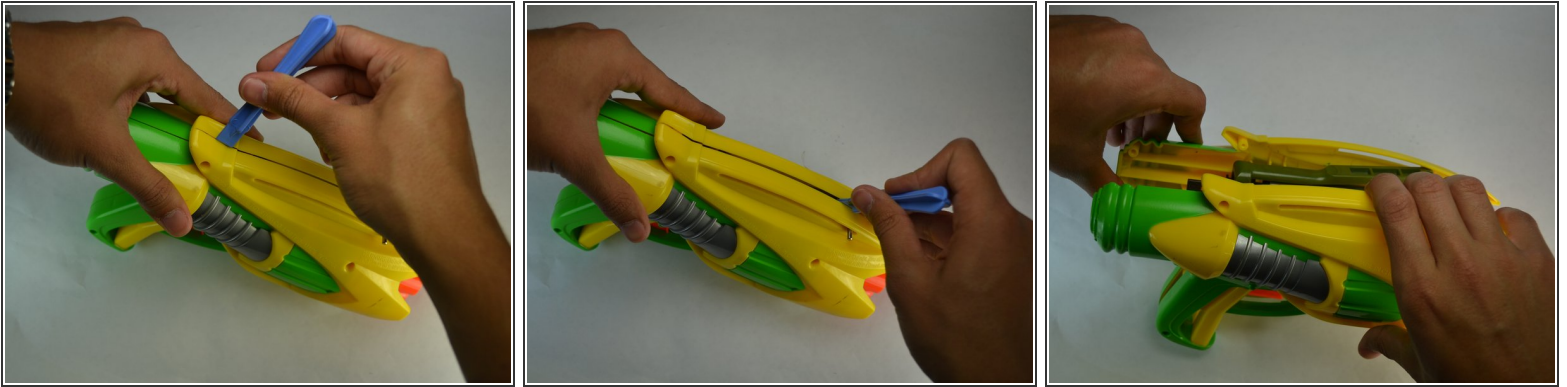

- Using the plastic opening tools, carefully take apart the main case of the blaster to leave the inside exposed.

Step 4 — Remove the trigger



- Grab the orange trigger and without misplacing the other parts of the blaster, remove the trigger.

To reassemble your device, follow these instructions in reverse order.