



MacBook Pro 17" Models A1151 A1212 A1229 and A1261 Battery Replacement

Written By: iRobot



INTRODUCTION

All you need to remove the battery is your fingers!



PARTS:

- [MacBook Pro 17" Battery](#) (1)
-

Step 1 — Battery



- Use your fingers to push both battery release tabs away from the battery and lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-23 08:19:54 AM.