




Canon PowerShot A4000 IS Back Cover Replacement

A guide to removing the back cover of the camera for replacement or repair.


Written By: Ashley Heslip

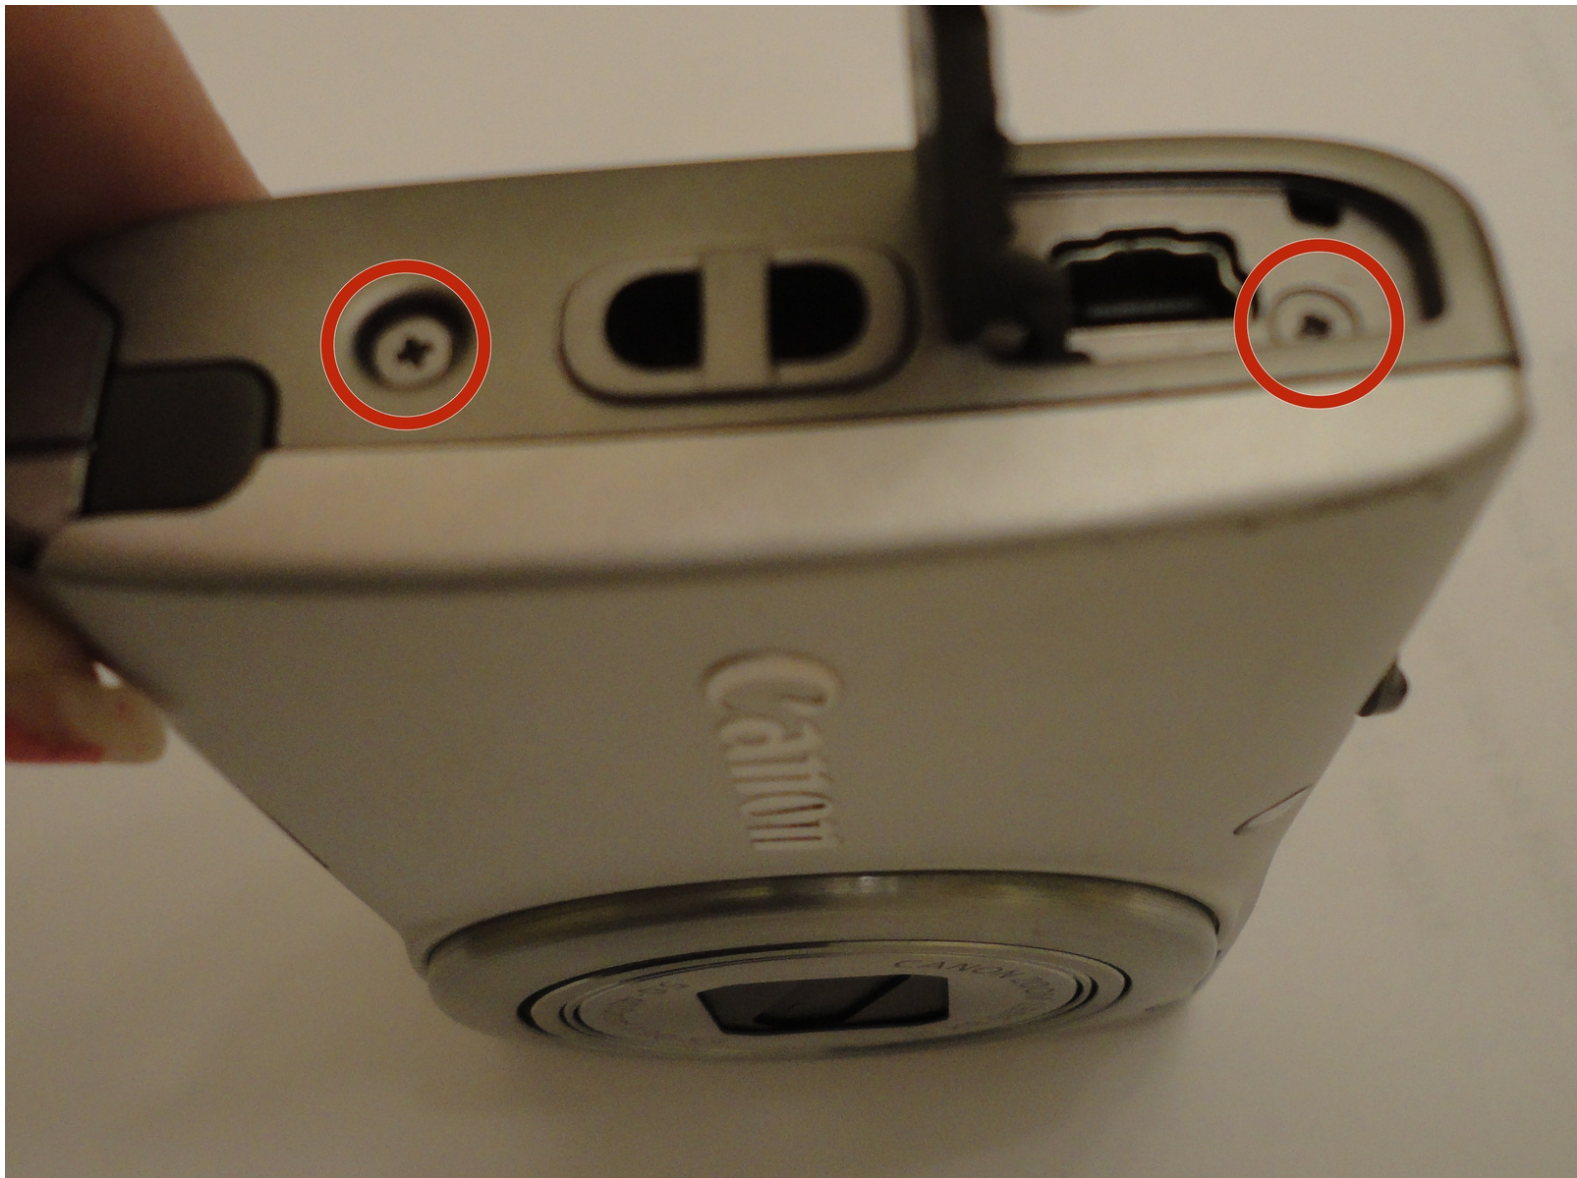

 **TOOLS:**

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Removing the Screws

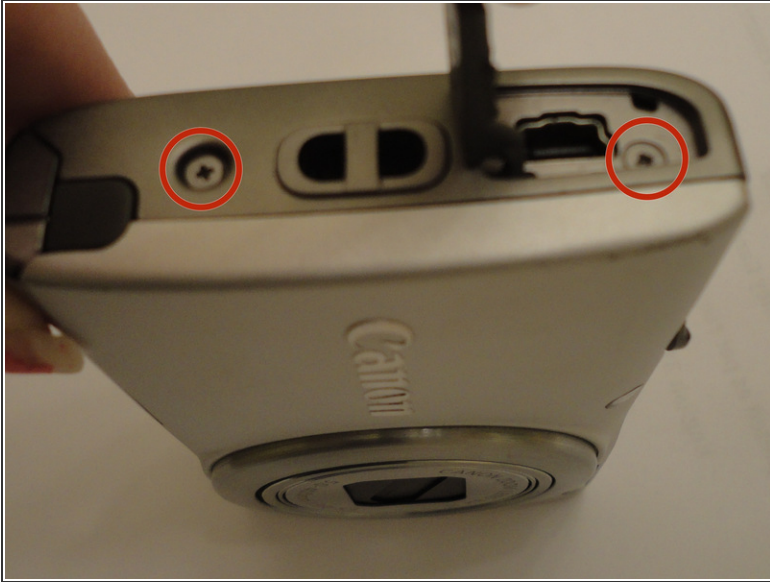

- First remove the batteries and memory card.
- Remove the screws for the back cover (circled in red) with a Phillips head screwdriver (PH000) .

Step 2 — Removing the Back Cover



- The back cover can be gently pried off after the screws are removed.

To reassemble your device, follow these instructions in reverse order.

