



HP Deskjet 3522 Ink Cartridge Replacement

This guide will demonstrate how to change an ink cartridge on a HP Deskjet 3522 printer.

Written By: Melinda Singleton





PARTS:

- [Replacement HP 564 Ink \(1\)](#)
-

Step 1 — Ink Cartridge



- Power printer on.
- Lift up the lid to the printer using the notch on the right side of the printer to expose the ink cartridges.

Step 2



- Press down gently on the front tab of the ink cartridge that needs replacing and then lift up.

Step 3



- Make sure you have the correct model number of ink that needs to be replaced.
- ⓘ For the HP Deskjet 3522 the required ink is HP 564 (Regular or XL)

Step 4



- Angle the new ink cartridge to the back and slide it into the slot. Press down gently on the head until you hear a soft click.
- Close the lid and allow the printer to recalibrate itself.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 04:59:32 PM.