



# Daisy Model 10 Carbine Cocking Lever Replacement

Replace your damaged or broken cocking lever to allow your gun to reload correctly.

Written By: Timothy Gachot



## INTRODUCTION

To repair your cocking lever you will need a Phillips 2 screwdriver. In addition to this, this manual requires you to remove a small screw and washer from the carbine. To avoid losing these, replace your cocking lever on a table or similar workspace.


---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Removing Screws




 Make sure the safety is on!

- Place the carbine with the saddle ring and leather thong facing upwards.
- Locate the screw head on the cocking lever.

 There should be one on either side of the saddle ring and one on the cocking lever assembly.

- Place a #2 Phillips Screwdriver in the 11/16ths of an inch, matte black screw on the cocking lever assembly. Twist with a counter-clockwise motion.
- Completely remove the screws.

 Be wary of the black washers on the other side of the Carbine. Be sure to keep track of them once they fall out after the screws are removed

## Step 2 — Removing the Lever



- Remove the cocking lever by placing your dominant hand's fingers through the cocking lever handle.
- With your fingers in the handle, slide the lever towards the butt of the carbine.
- Finally, pull the cocking lever and carbine in opposite directions to replace the cocking lever.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 02:12:25 PM.