



CM Storm QuickFire Rapid Small Keycap Replacement

Replace your mechanical keyboard's small keycaps with this handy guide.

Written By: Shiva Empranthiri



INTRODUCTION

Replacing keycaps is one of the most common operations performed on a keyboard. Follow this guide to learn how to replace small keycaps on your mechanical keyboard.



TOOLS:

- [Keycap Removal Tool](#) (1)



PARTS:

- [Small Keycap](#) (1)
-

Step 1 — Small Keycap



- Insert the keycap puller around the key you want to remove.

Step 2



- Pull cap directly upward.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 02:54:02 AM.