



Honeywell HY-204 Case Replacement

Prereq to remove the case

Written By: Nolan Ernotte



INTRODUCTION

Before you can fix anything inside of the Honeywell HY-204, you need to remove the case. Removing the case will require a bit of strength, but is pretty simple to do.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Case



- Remove the four 14 mm screws from the back of the device using the Phillips #0 Screwdriver.

Step 2

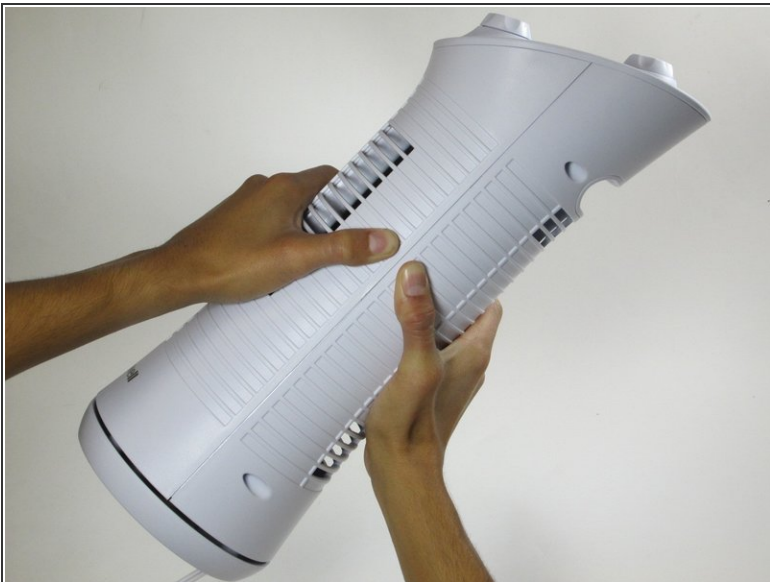

- Pull the front and back parts of the case away from each other until the back is free from the front. This may require a large amount of force.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 03:49:41 AM.